


Horn Tip

A tiny crescent desk rocker

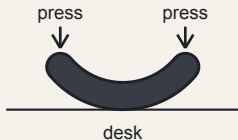

In the box

- 1 Horn Tip crescent
- 1 This card

First use

1. Set it on a desk on the outer curve, horns up. The two flat cheeks face you and away from you.
2. Press either rounded horn with a fingertip. The other horn rises, then the crescent walks back to rest.
3. Press the other horn. One piece. No assembly. No extra parts.

Keep this card with Horn Tip. You do not need a phone or a website.

Use, care, and safety

How it moves

The underside is a circular curve. Press a horn and the body rolls along that curve. Gravity pulls it back to the middle rest. Repeat from either horn.

If it will not rock

It is lying on a flat cheek. Stand it on the outer curve so both horns point up.

A print brim still clings to the curve. Peel it off so the belly is a smooth arc.

The desk is deeply textured or sticky. Move to a smoother, level surface.

Safety

Rounded horns, no points, no loose pieces. It is a fingertip desk toy, not a projectile. Keep it back from a desk edge so a tip cannot send it to the floor.

Care and put-away

Wipe dust with a dry cloth. Do not use solvents.

One piece: pick it up. Store on its cheek or standing on the curve. How far it rocks after a press depends on your desk and the print; this card does not promise a number of rocks or a lifetime.