


Eclipse Braid

A CAPTIVE MOON · ONE CONTINUOUS ROUTE

SIDE 1 · START HERE

EXACT PRODUCT VIEW

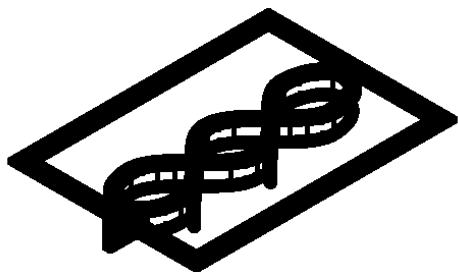

IN THE BOX

1

Eclipse Braid — one assembled frame, visible braided rail, and captive moon runner.
Nothing to assemble. Do not remove the small rail-support posts.

YOUR FIRST LOOP


Send the moon through the impossible crossing.

The rail has no branch and the runner never leaves it. Choose either direction; the same continuous thumb motion carries it through both bridges and home.

HOME → 2 → 3 → 4 → HOME

HOME

2

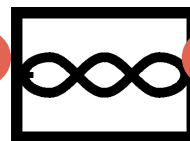

4

3

The raised strands are bridges—not choices.

1

Set and hold

Rest the frame flat, or hold one outer edge. Find the squared crescent at HOME on the left lobe.

2

Push—do not lift

Place your thumb on the runner and guide it along the rail into the first raised crossing.

3

Follow the far lobe

Keep going around the outer turn. The moon now travels opposite along the returning strand.

4

Continue home

Pass through the second bridge and continue on the same route until the runner returns HOME.

One motion. Two bridges. Home again.

SIDE 2 • USE + CARE

KEEP THIS SIDE AS THE QUICK REFERENCE



THE WHOLE INTERACTION

Continue, reverse, or return.

There is no separate reset. Continue around the closed route to return home, or stop anywhere and push back the way you came. Use the rail as your guide—never shake the frame to clear a hesitation.

● PUSH ALONG RAIL

◆ RAISED BRIDGE

○ FAR-LOBE TURN

Keep it moving

- 1 Hold an outer frame edge with one hand.
- 2 Push the runner along the rail with your thumb; let the curve set its direction.
- 3 At either raised bridge, continue straight along the same strand.
- 4 Reverse at any point by pushing back. There is no wrong direction.

RESET

Continue around the loop until the moon reaches HOME. Do not shake.

If it hesitates

- 1 Ease thumb pressure. Do not twist or pry the runner sideways.
- 2 Move back a few millimetres, then approach the same point along the rail.
- 3 Brush away only loose surface dust. Never cut or remove the small support posts.
- 4 If a part is cracked, sharp, or detached, stop using the toy.

EXPECTED TURN

At the far lobe, the runner reverses direction; a full circuit restores its home direction.

Care + pack away

- Carry and lift by the outer frame—not by a bridge or the runner.
- Wipe with a dry, soft cloth. Keep away from high heat and solvents.
- Store flat in a dry place with nothing pressing on the bridges.

SAFETY

Desk toy, not for mouthing. A broken runner may become a small part: keep away from small children and pets. Stop if anything cracks, becomes sharp, or detaches. Do not bend bridges or remove support posts.