

A POCKET STORM IN ONE TWIST



STORM REVEAL

Sleepy cloud becomes a tiny storm scene



3 pieces · 1 guided quarter-turn · no loose hardware

IN-BOX GUIDE / 01

Meet the three

Each shape has one job. Keep all three pieces together.



1 CLOUD

receiver



1 BOLT

guide rotor



1 ARCH

drive rotor

FIND THE ASSEMBLY LANDMARKS



SQUARE OPENING

SMALL GUIDE PIN

PUT THE STORM TOGETHER

1

Find the front

Hold the sleepy face toward you; find its center pocket and curved track.

2

Set in the bolt

Place the bolt against the face. Seat its small pin at the track's closed end.

3

Seat the arch

Pass its square drive through the bolt's square opening and into the center pocket. Press straight in—never snap or bend it.

Wake the weather

Hold the cloud body steady. Turn only the outer arch.




START: SLEEPY

Arch tucked in
Bolt tucked in



1/4 TURN

CLOCKWISE · STOP GENTLY

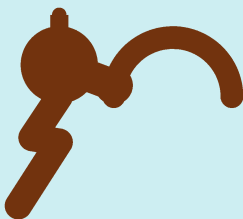

REVEAL: STORM

Arch stands right
Bolt stands left
Both share one scene

RESET Turn the arch counterclockwise 1/4 turn to the sleepy stop.
Stops define the motion. Never force past either end.

Keep it easy

A clean, gentle motion protects the little reveal.

IF SOMETHING FEELS WRONG

WON'T TURN

Stop. Reseat the bolt's pin at the track end. Make sure both rotors lie flat.

FEELS TIGHT

Pull the arch straight out, lift out the bolt, clear debris, then reassemble. Never force a twist.

FEELS LOOSE

Carry the three pieces together. Printer fit varies; this guide cannot verify grip.

PACK AWAY

Reset to the sleepy stop. To separate the pieces, pull the arch straight out first, then lift the bolt straight away from the cloud.

CARE

Wipe dry with a soft cloth. Keep away from heat that could soften the printed shape. Check for cracks or sharp damage before use.

SMALL-PART SAFETY

Not for children under 3. Keep all three pieces away from mouths. Use gentle hand force; stop if a piece cracks, develops a sharp edge, or jams.