 


ONE-PIECE DESK ROCKER

MOONCHASE FOX

Nudge the night. Watch the crescent return.

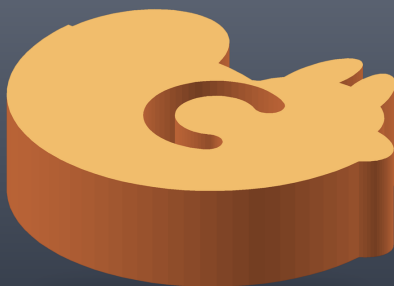

IN THE BOX

1 × Moonchase Fox

No loose parts. No assembly. No batteries.

1

FIND THE ROCKING EDGE

Use the broad curved rim of the curled tail.

2


SET IT UPRIGHT

Place that rim on a level, hard desk with the crescent vertical.

Three moves. One gentle return.

Keep fingers clear after the nudge; let gravity do the rest.


1 SET

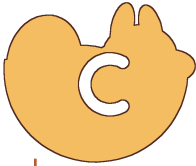

TAIL TRACK


Crescent upright. Tail rim flat on the desk.

2 NUDGE

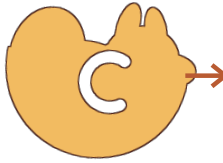

Tap either side lightly, then let go. Do not shove or spin.

3 SETTLE

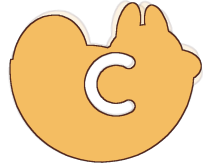

REST

Let it rock and come to rest. Stand it upright again to reset.

IF THE CHASE STUMBLES

BARELY MOVES

Move to a clean, level, hard surface; wipe debris from the curved rim.

TIPS OR WANDERS

Stop. Reset upright, farther from the edge. Check for warping or damage.

Rocking feel varies with desk surface and print quality.

CARE + SAFE KEEPING

- Inspect before use. Stop if cracked, warped, sharp, or unstable.
- Adult desk object—not intended for young children. Keep away from edges.
- Wipe with a soft damp cloth, then dry. Keep away from heat and direct sun.
- Store flat or upright on a stable shelf. Never drop, throw, or force it.