

TWO-PIECE DESK TOY

NESTSTOMP

Roll the chick.
Watch the owl change feet.

IN THE BOX

1

OWL BODY

Broad feet + open belly

1

CHICK CAM

Loose, removable roller



START ON A LEVEL TABLE

Keep both faces toward you. Seat the chick at the LEFT stop.


TURN OVER

ONE ROLL. ONE STOMP.

Use one thumb on the chick's broad face. Keep the owl upright.


LEFT STOP

1 SEAT LEFT

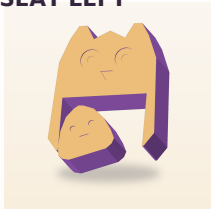


Both parts upright

2 THUMB: ROLL RIGHT

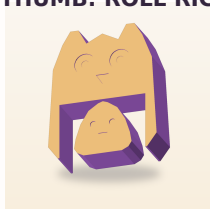

Watch one foot lift

3 LAND RIGHT

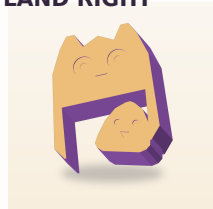

The other foot settles

RESET

Roll the chick back to the LEFT stop.

IF IT BINDS OR SLIDES

Stop. Reseat both parts on a clean, level table.

CARE + PACK AWAY

Lift the chick out. Wipe both parts dry. Store the two pieces together.

SAFETY Small parts. Not for children under 3. Do not force, throw, or use near an edge.