

Autonomous

ErgoChair Core

Assembly Instructions



www.autonomous.ai

INSTRUCTION OUTLINE

CAUTION 1

INCLUDED PARTS 2

ASSEMBLY GUIDE

BASE ASSEMBLY 3

SEAT ASSEMBLY 4

BACKREST ASSEMBLY 5

HEADREST ASSEMBLY 6

FUNCTION GUIDE

CHAIR ADJUSTMENT 7

HEADREST & ARMREST ADJUSTMENT 8



READ AND FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY BEFORE USE.

- 1.** This product is for sitting only. Do not stand on the seat.
- 2.** Do not use this product unless all bolts and parts are firmly tightened and secure.
- 3.** If any parts are missing, damaged, or worn, request for replacement parts from the manufacturer before using the product.
- 4.** Do not sit on the armrest of this product.
- 5.** This product is designed to seat only 1 person at a time.
- 6.** Children under 10 may require assistance and supervision to use this product.


INCLUDED PARTS

A Castor Wheel



x 5

B Base

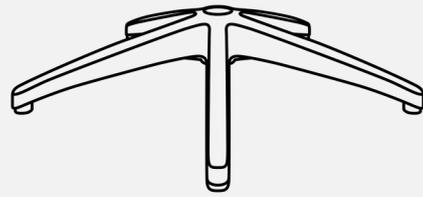


x 1

C Gas Lift




x 1

D Seat

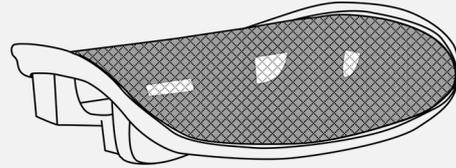


x 1

E Backrest

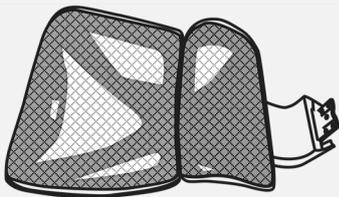


x 1

F Armrest (Right & Left)

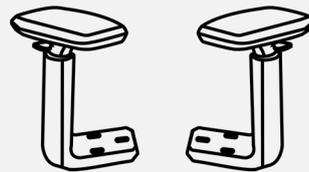


x 1

H Control Mechanism

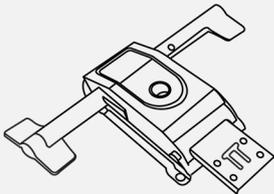

x 1

I Headrest

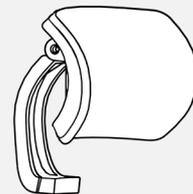

x 1

G M8 * 25mm Screw



x 4

G1 M8 * 20mm Screw



x 4

G2 M6 * 30mm Screw



x 6

G3 M6 * 20mm Screw




x 2


L Wrench




x 1

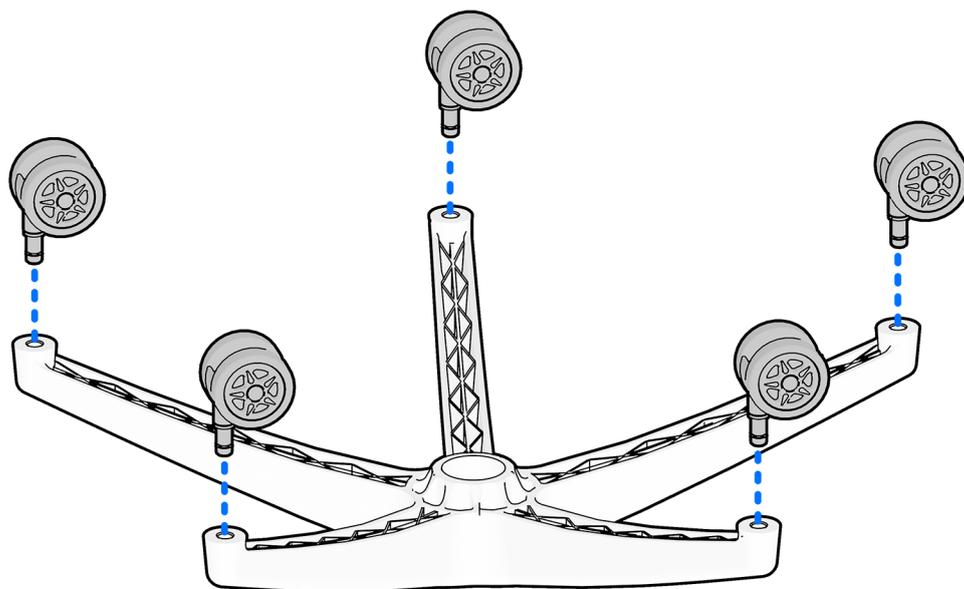


1. Flip **Base (B)** over. Push a **Caster Wheel (A)** into each leg until it clicks in

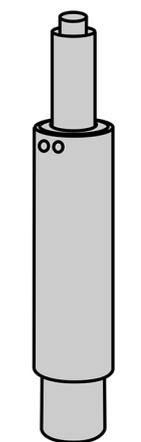

2. Flip **Base (B)** upright. Insert **Gas Lift (C)** into the center hole

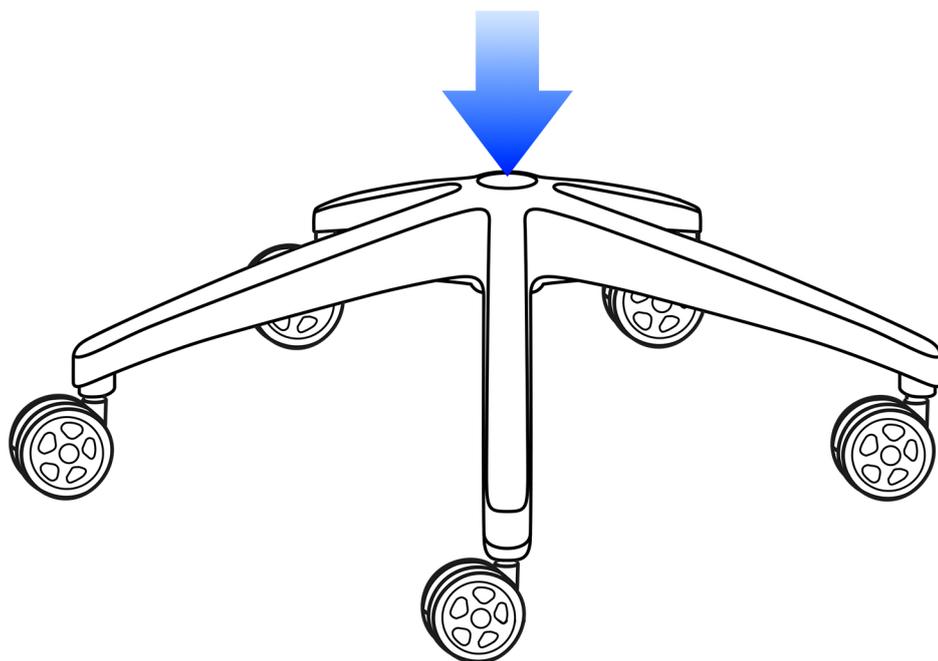


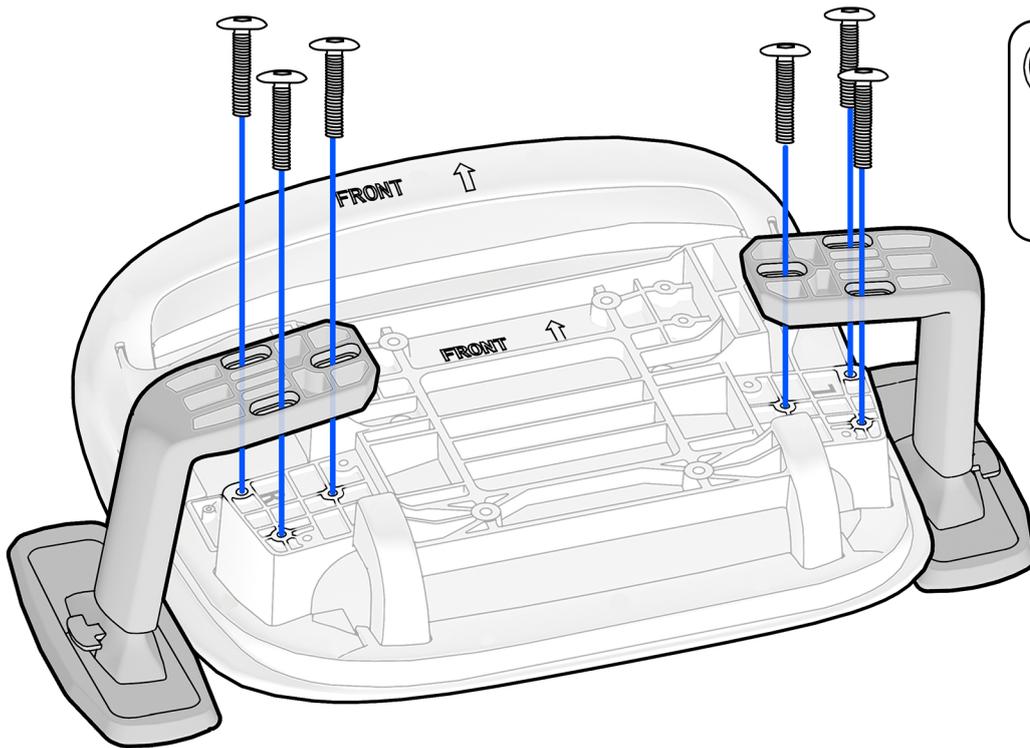

G2 M6 * 30mm



1. Attach Armrests (F) under Seat (D) with 6 × (G2) screws

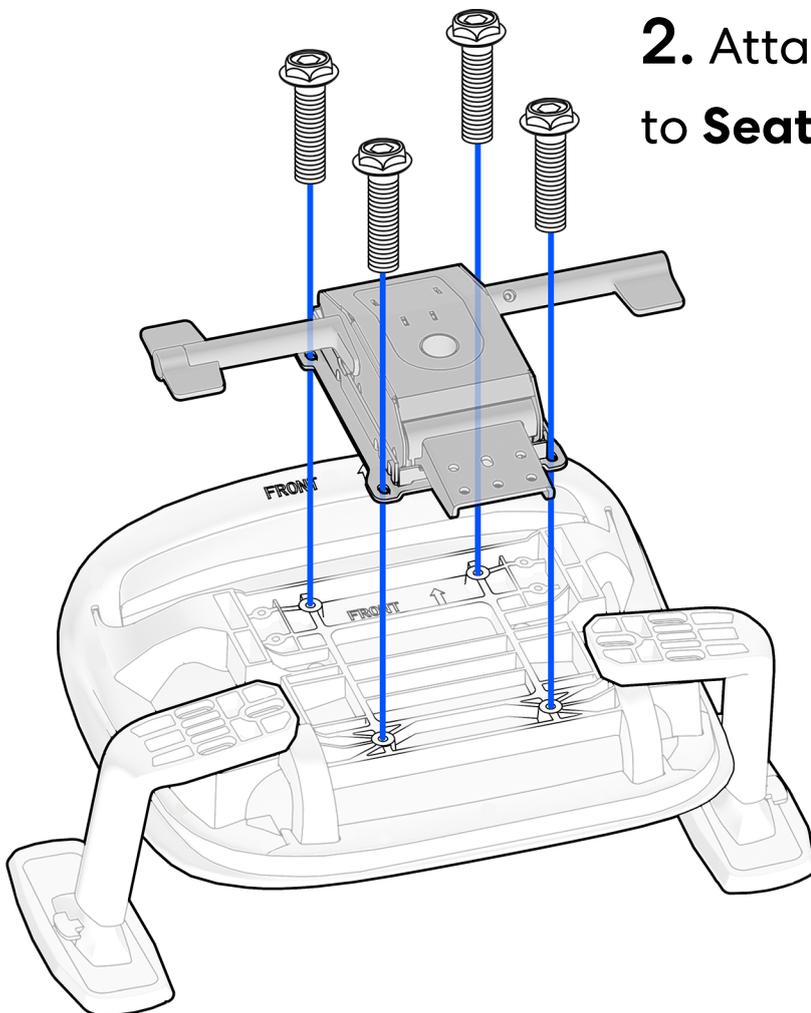

2. Attach Control Mechanism (H) to Seat (D) with 4 × (G) screws

G M8 * 25mm




x 4

BACKREST ASSEMBLY

G1 M8 * 20mm



1. With the chair upside down, attach **Backrest** **E** to **Seat** **D** using 4 × **G1** screws

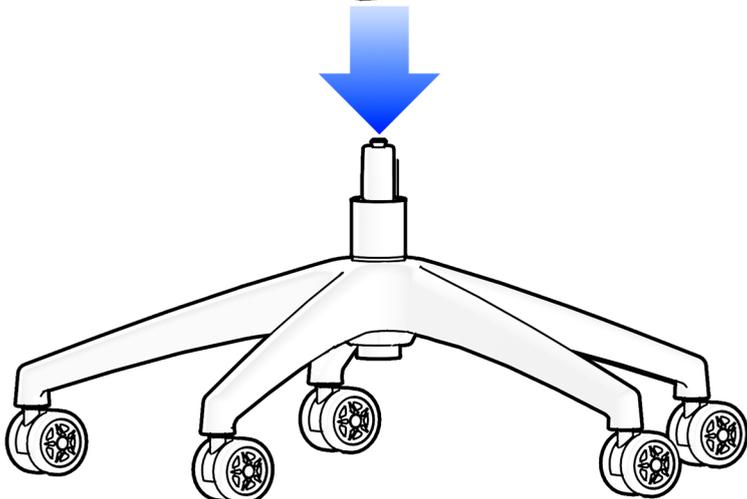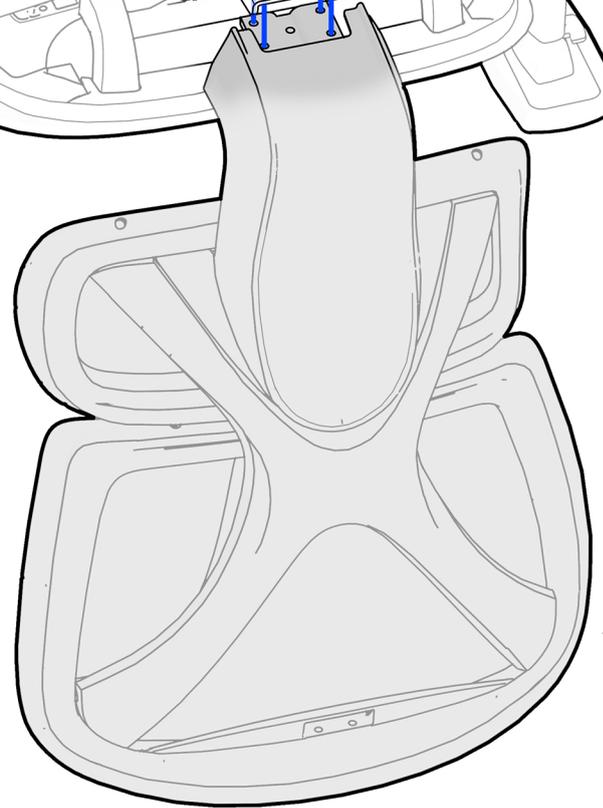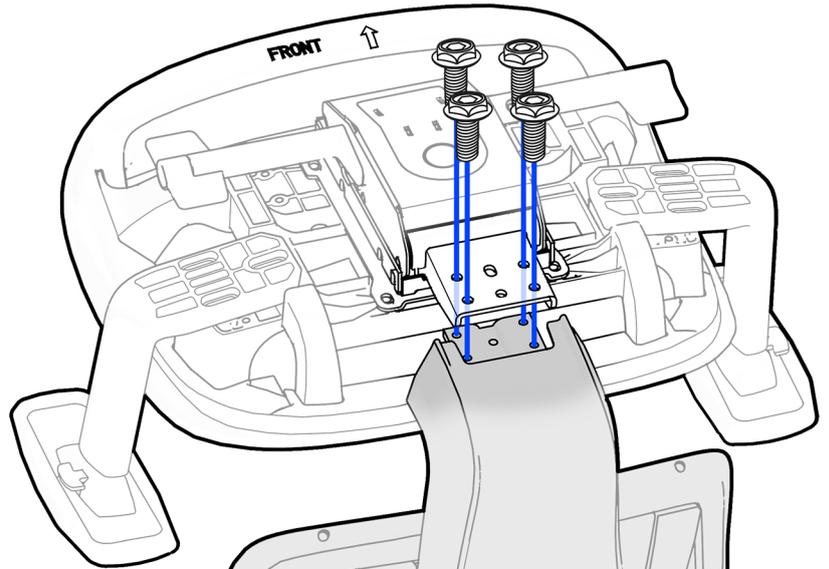


2. Turn the chair upright, then place it onto the **Gas Lift Base**





HEADREST ASSEMBLY

G3 M6 * 20mm




1. Attach **Headrest** **I** to **Backrest** **E** with 2 x **G3** screws

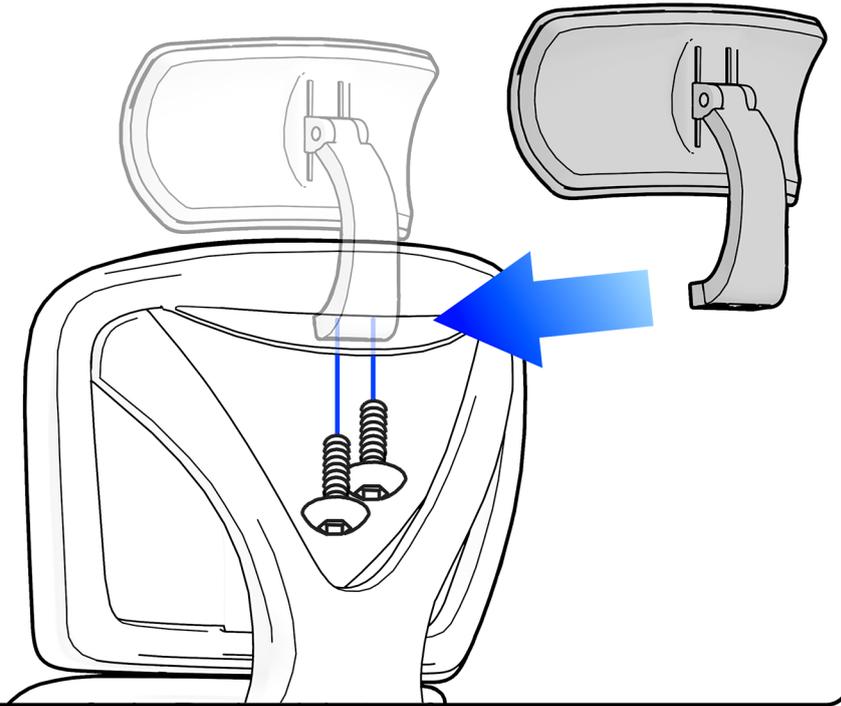

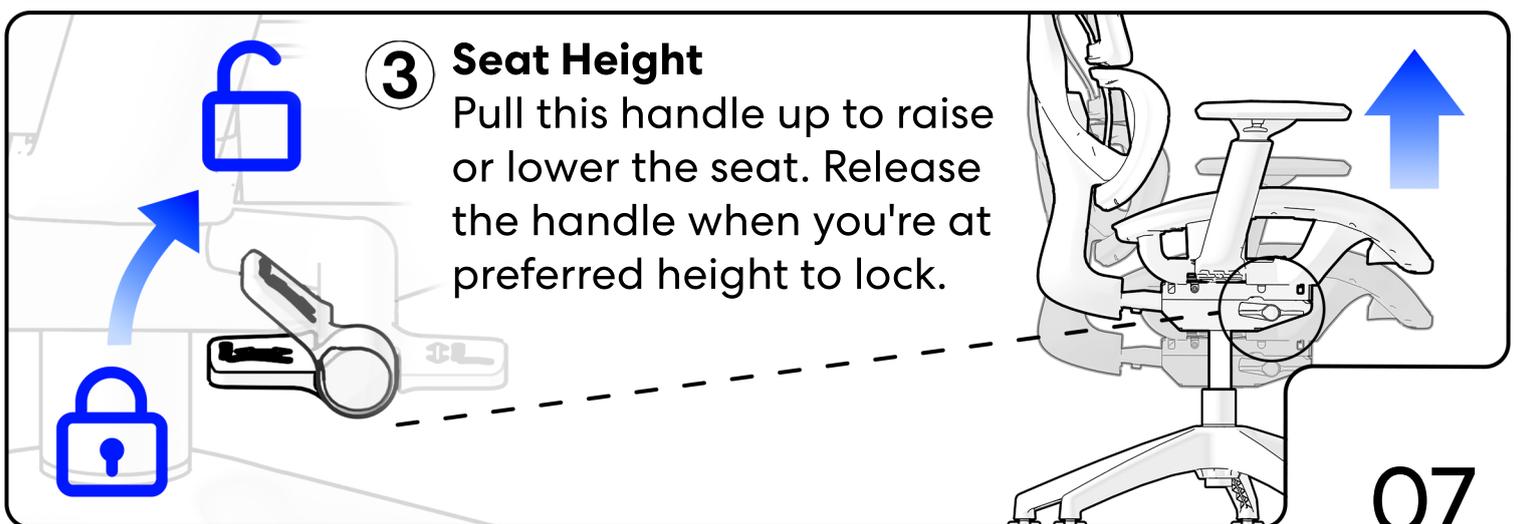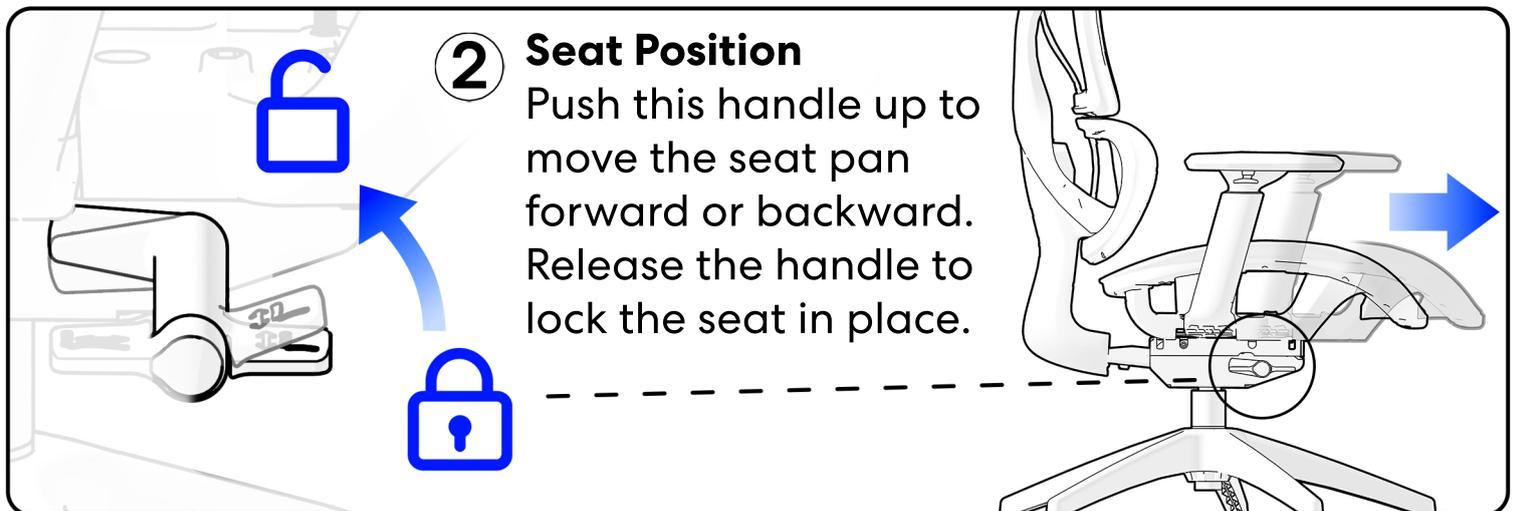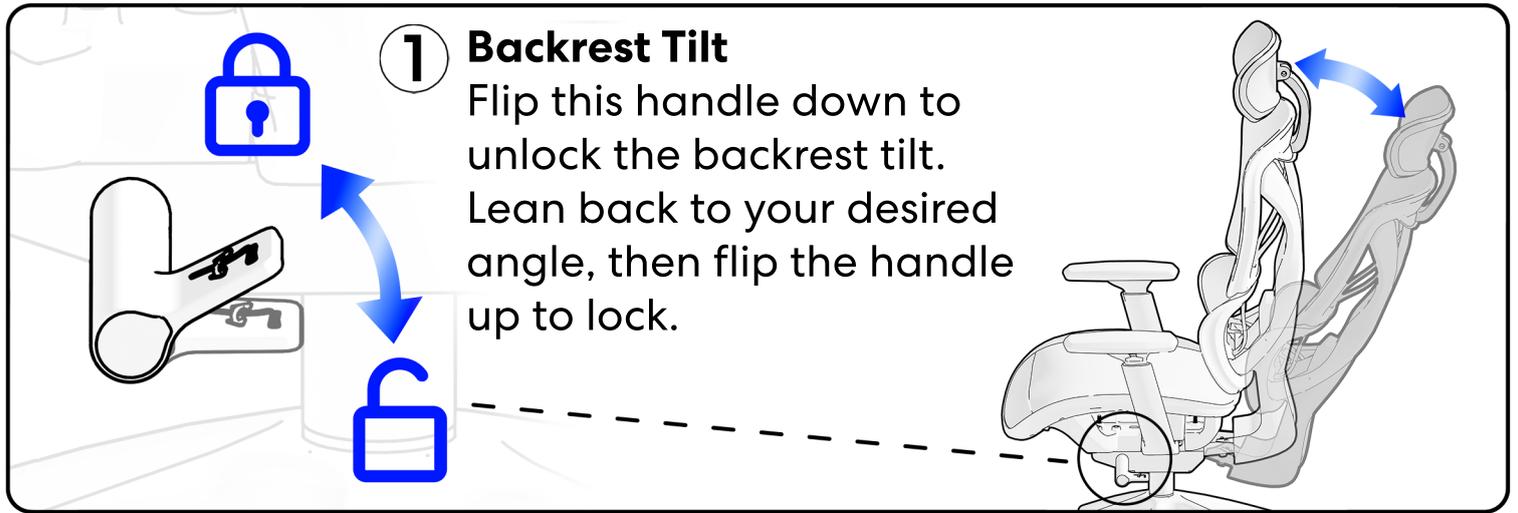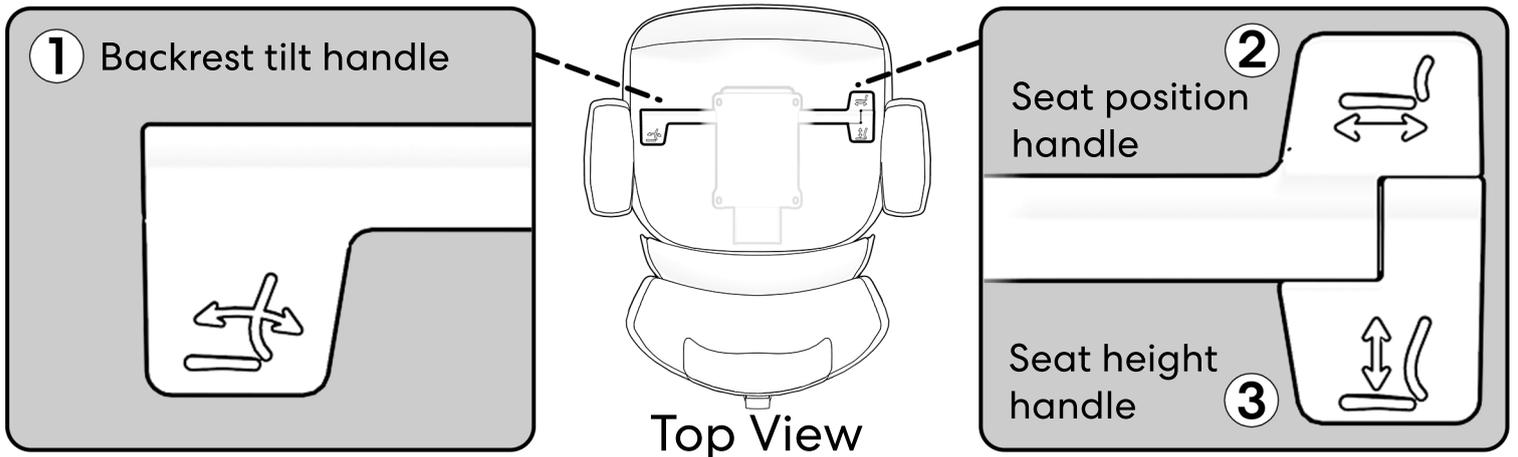


HEADREST & ARMREST ADJUSTMENT

Headrest Adjustment

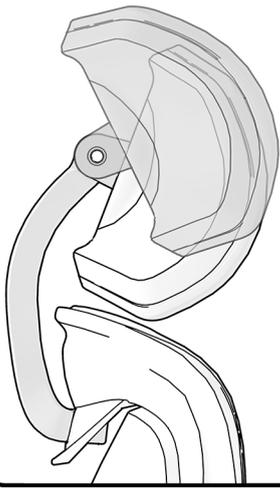


Headrest tilt - push forward or pull back to set your preferred angle

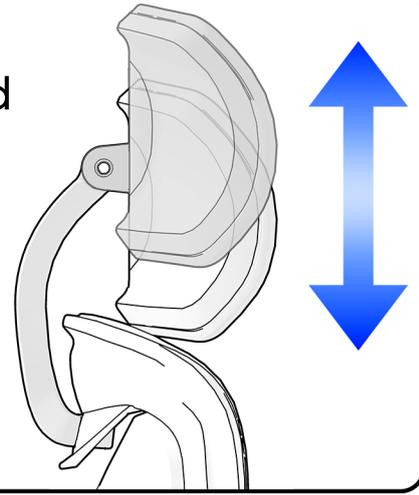


Headrest height - lift up or press down to adjust position

Armrest Adjustment



Move forward or backward

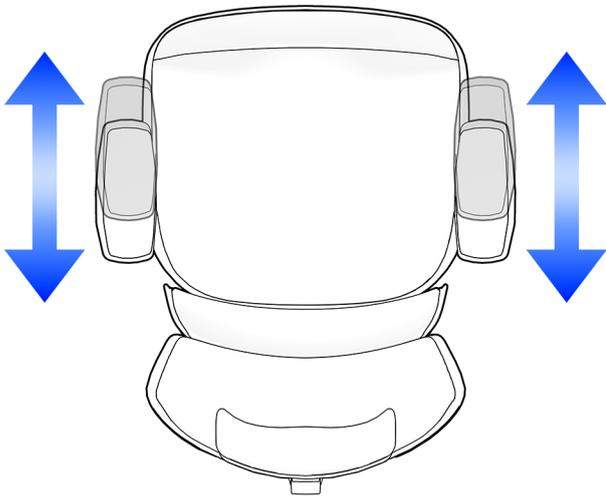

Rotate inward or outward

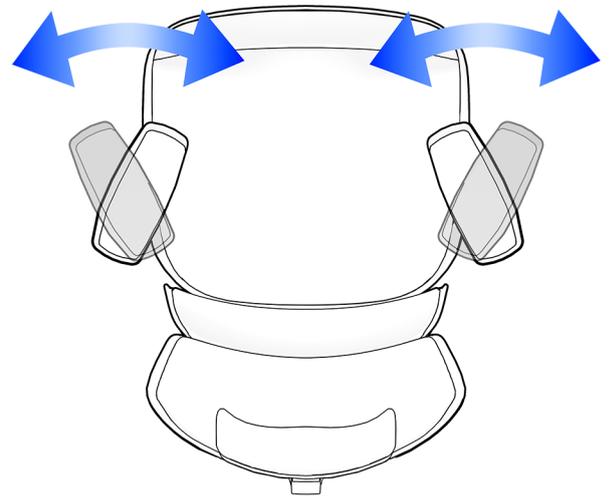

Press the **Tab** under the **Armrest** to raise or lower height

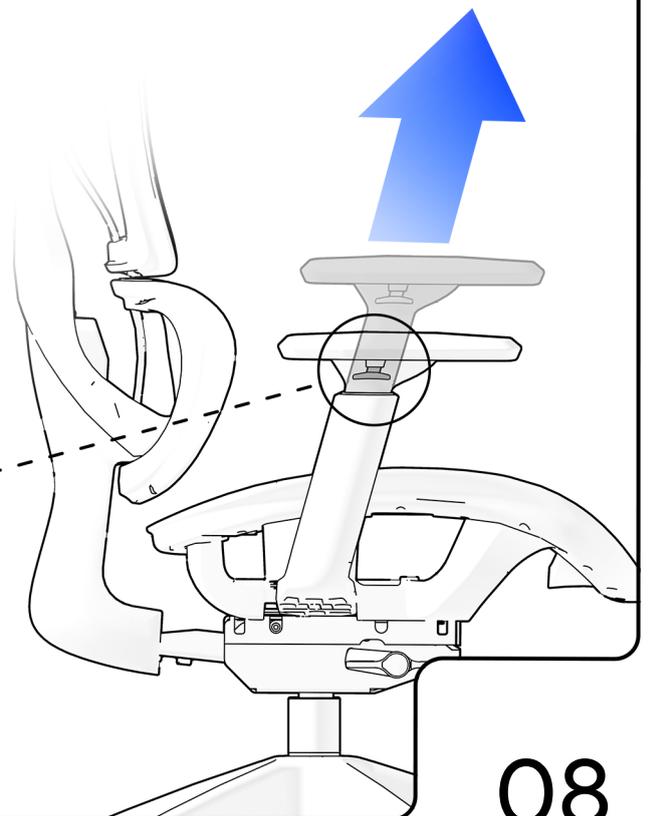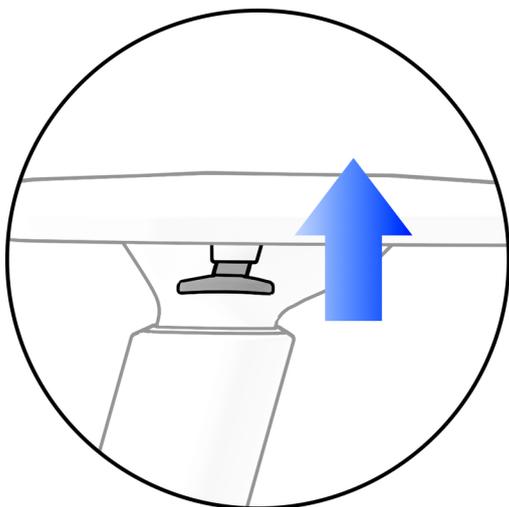

Any questions?

Chat with our Customer Support team at
www.autonomous.ai/help-center

We're here to help!