

Autonomous


ErgoChair Pro








Assembly Instructions

OVERALL SIZE

UNIT:MM

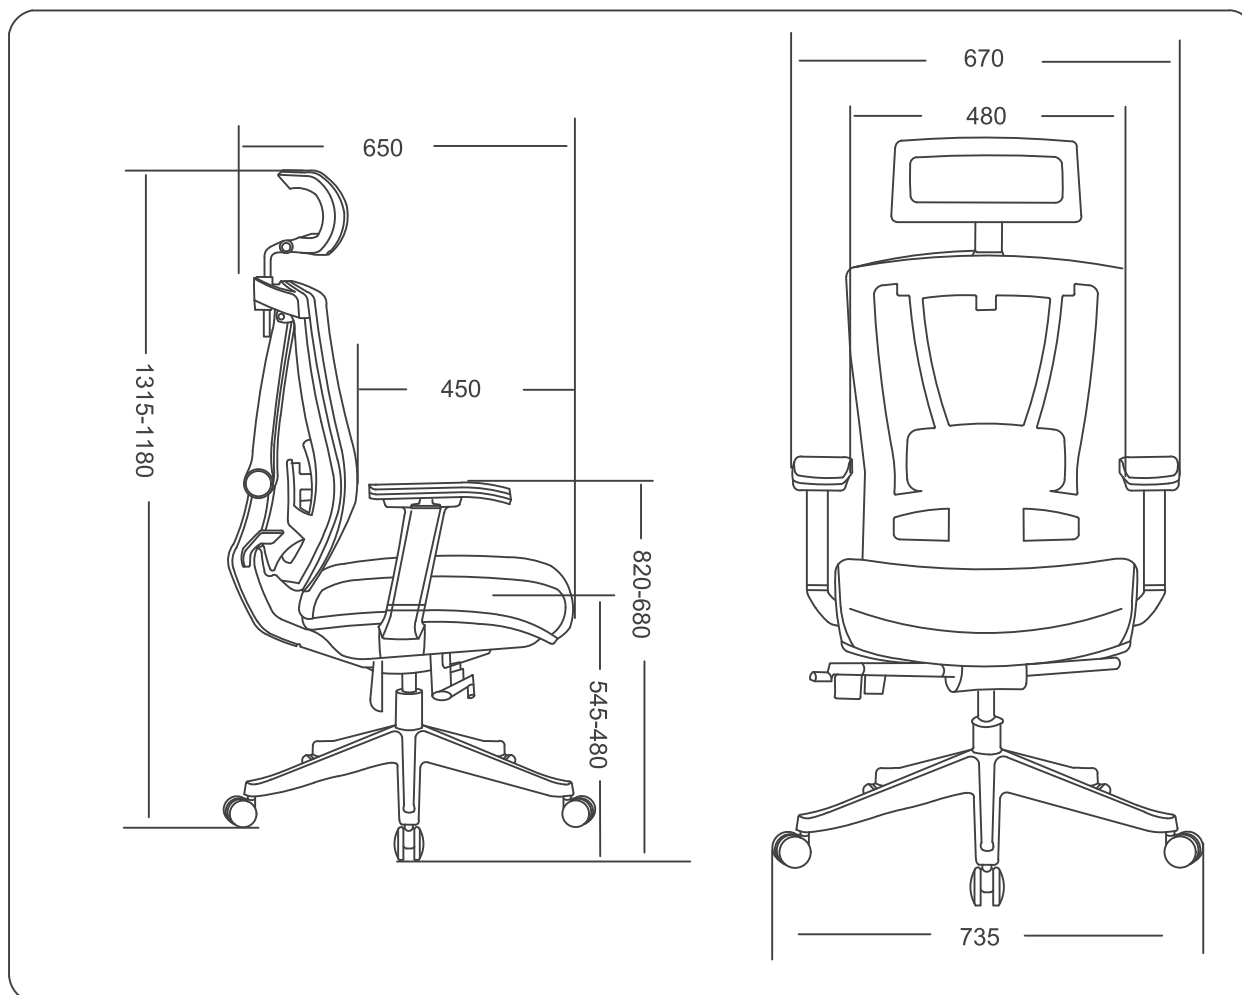


PARTS LIST

     (A) Backrest 	(B) Headrest 	(C) Seat 	(D) 5 x Castor Wheels 	(I) 4 x M8*25mm Bolt 	(M) 1 x Screwdriver 
(E) Gas Lift 	(F) Base 	(G) Armrest 	(H) Control Mechanism 	(J) 3 x M6*22mm Screws 	(N) 7 x Ø6*14*1.5mm Washers 
				(K) 7 x M6*35mm Bolt 	(O) 8 x Ø8*17*1.5mm Washers 
				(L) 5 x M8*60mm Bolt 	(P) 8 x M8 Spring Lock Washers 


Step 1

Flip Base (F) upside down.
Insert Castor Wheel (D) into each of the
5 legs and push down firmly.

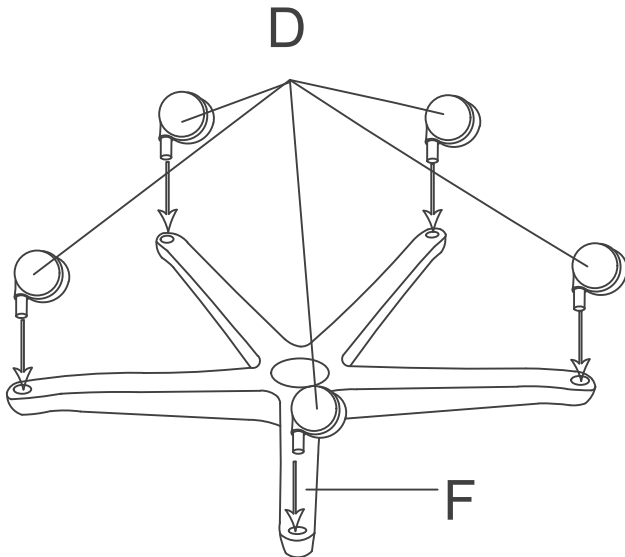


Step 2

Flip Base (F) back up.
Insert Gas Lift (E) into the centre of the base.

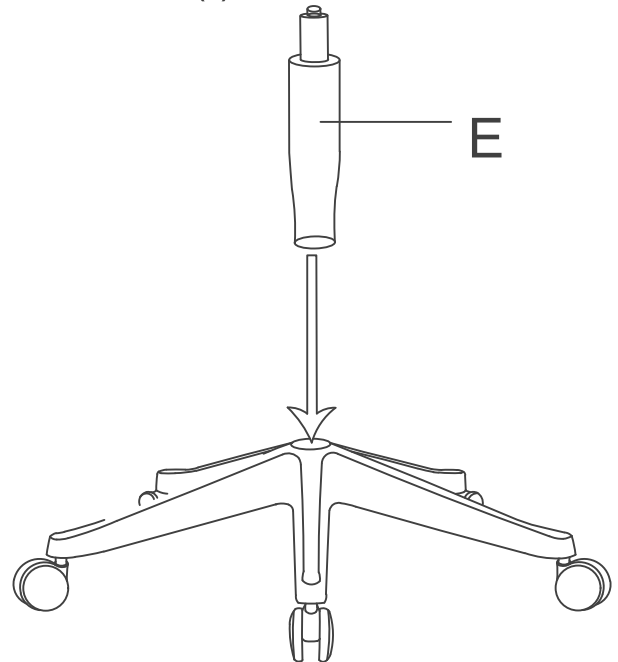


Step 3

Take both R+L Armrests (G) and attach
underneath the Seat Pan (C) using the
Bolts (K), Washers (N), and Screwdriver (M)
provided.

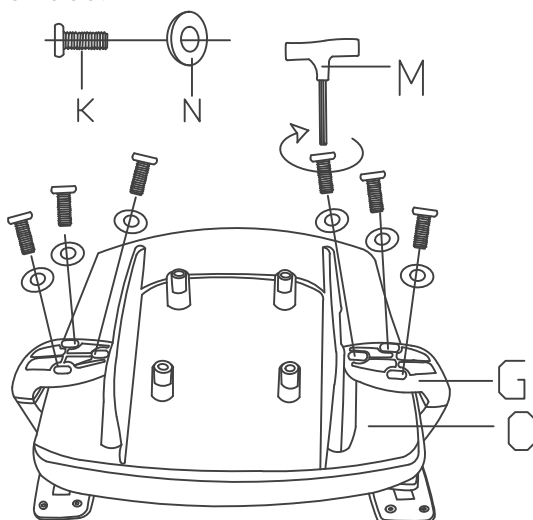


Step 4

Place the Control Mechanism (H) onto the
underside of the Seat (C). While lifting the
lever, push the mechanism forward (in the
direction of the arrow) to expose the
screw holes.

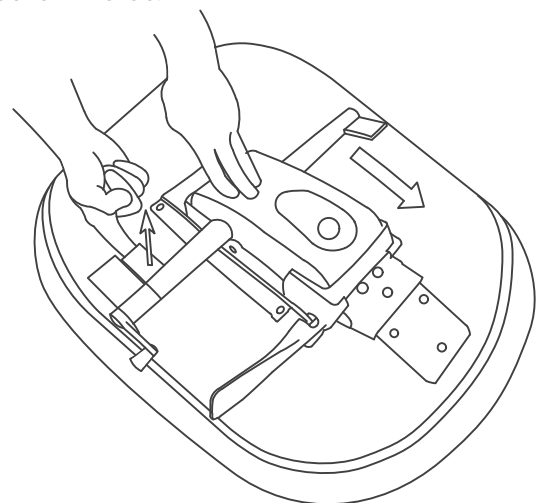


Step 5

Attach Control Mechanism (H) to Seat (C): Insert Bolts (L) with Washers (P & O) into 2 diagonally opposite holes. Partially tighten bolts to 50% only using Screwdriver (M) provided.

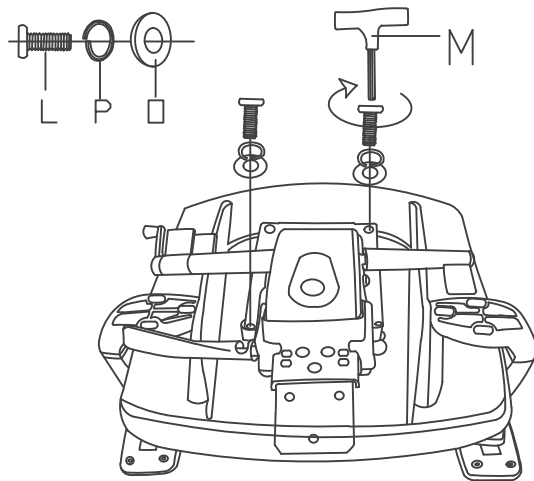


Step 6

Repeat Step 5 with the 2 remaining holes. Once 4 bolts are in place, fully tighten them all.

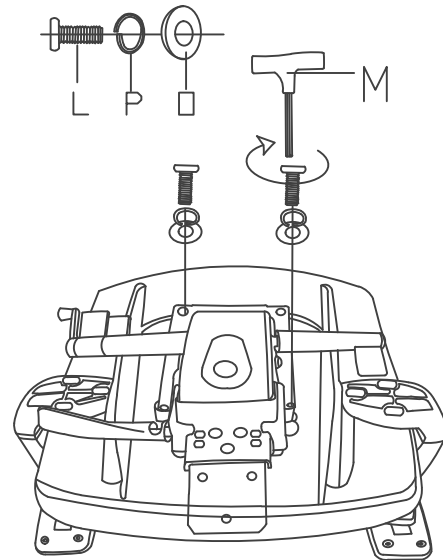


Step 7

Attach Backrest (A) to the Seat (C): Insert Bolts (I) together with Spring Lock Washers (P) and Washers (O) into the 3 holes as indicated in the diagram below. Tighten bolts using Screwdriver (M) provided.

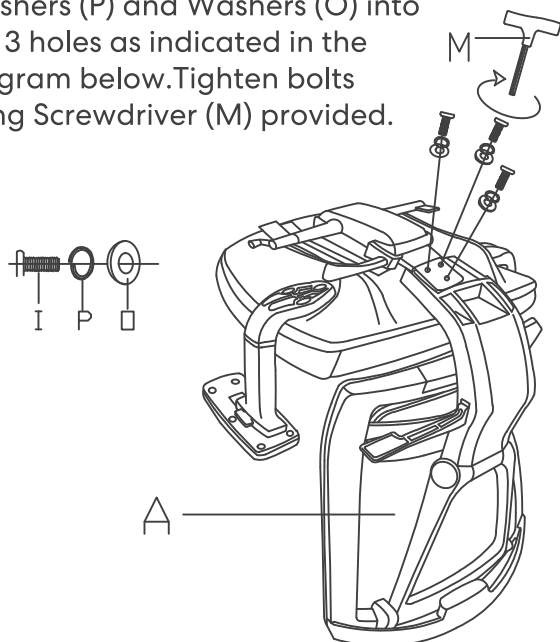


Step 8

Once the Backrest (A), Seat (C), Armrests (G), and Control Mechanism (H) have been firmly attached and secured. Lower onto the previously assembled Gas Lift Base.

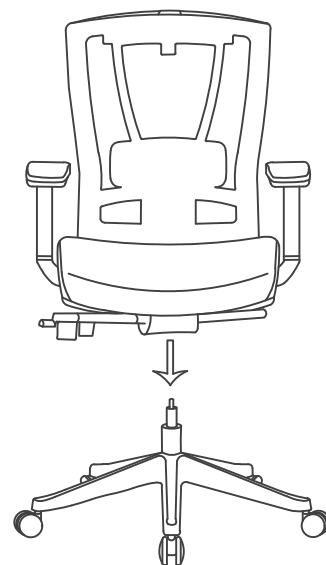


Step 9

Attach Headrest (B) to Backrest (A) using 2 Screws (J). Fasten screws tightly.

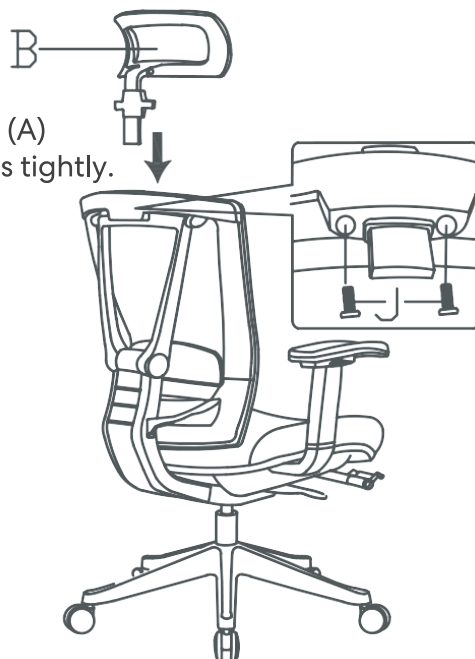


Function Guide


Flip this handle clockwise to activate seat tilt function. To lock your preferred seat position, flip handle counter-clockwise.

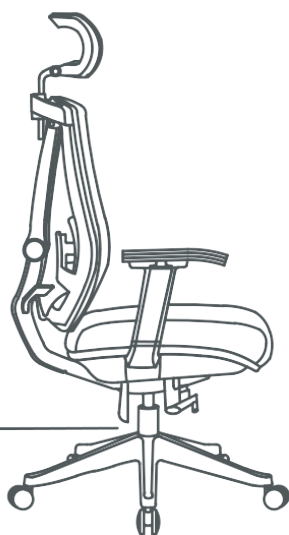


Rotate this handle clockwise to increase back tilt tension. To decrease back tilt tension, rotate handle counter-clockwise.

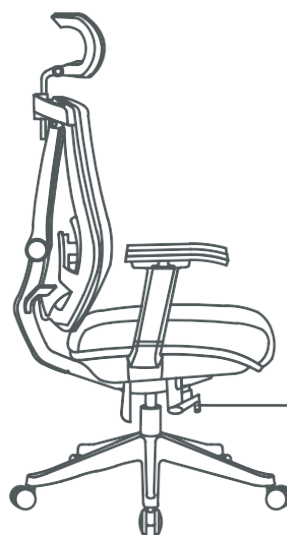


Pull this handle up to adjust seat height. Release handle to lock in your preferred seat height.

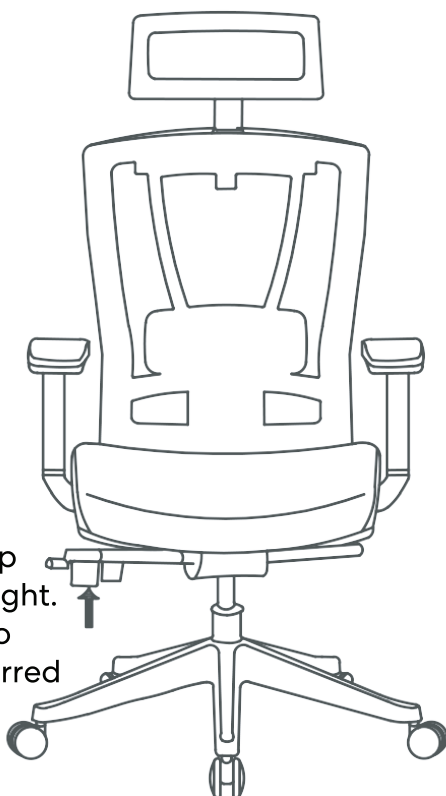


Push this handle down to activate Backrest tilt function. Lean back to find your preferred angle then pull handle back up to lock in position.

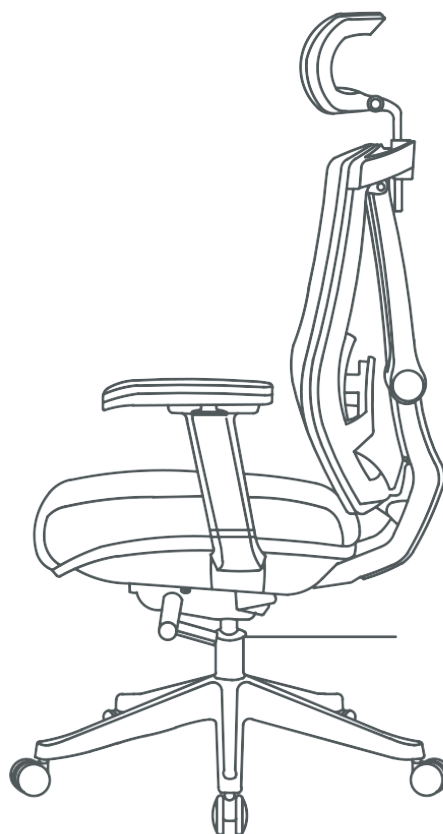


This lever is to adjust your lumbar support.

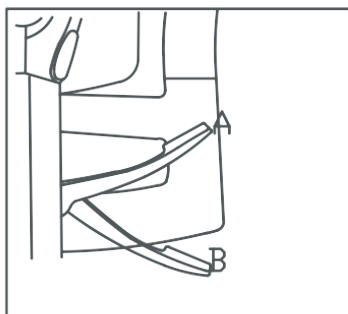


A is the locked position.
B is the unlocked position.

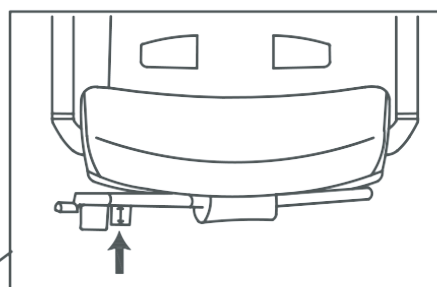


Push this handle up to adjust the Seat Pan forward up to 60mm. Release handle to lock into position.

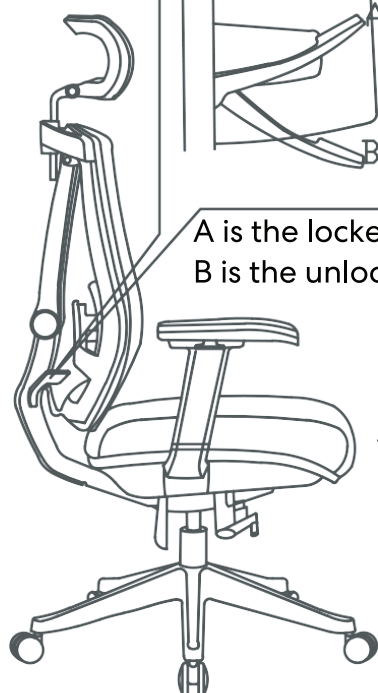


Headrest tilt can be
adjusted up to 45 degrees.

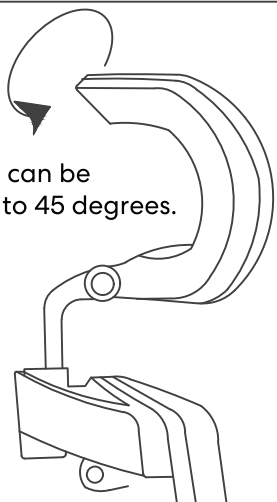


Headrest height can be
adjusted within a
range of 70mm.

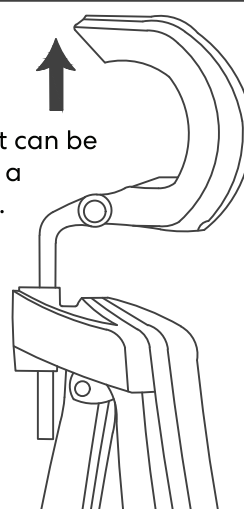

Press tab underneath Armrests
to adjust Armrest height.

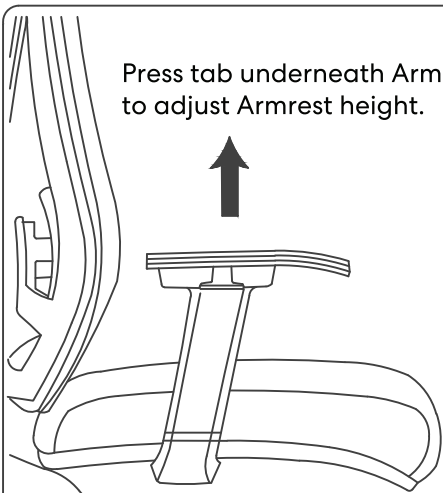

Press tab underneath
Armrests to adjust
Armrests
in and out.

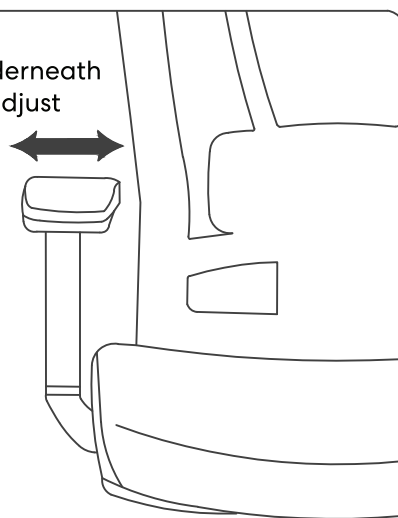

WARNING

Failure to follow these instructions thoroughly may result in serious injury.

1. This product is for sitting only. Do not stand on the seat.
2. Do not use this product unless all bolts and parts are firmly tightened and secure.
3. If any parts are missing, damaged, or worn, request for replacement parts from the manufacturer before using the product.
4. Do not sit on the armrest of this product.
5. This product is designed to seat only one person at a time.
6. Children under 10 may require assistance and supervision to use this product.

Autonomous

ErgoChair Pro



Autonomous-Smart office
Smart Office
21800 Opportunity Way, Riverside, CA 92508
www.autonomous.ai
human@autonomous.ai