 
 


L- Shaped Desk

ASSEMBLY INSTRUCTIONS

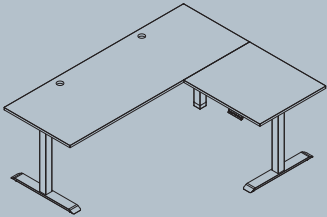 


Included in the boxes:

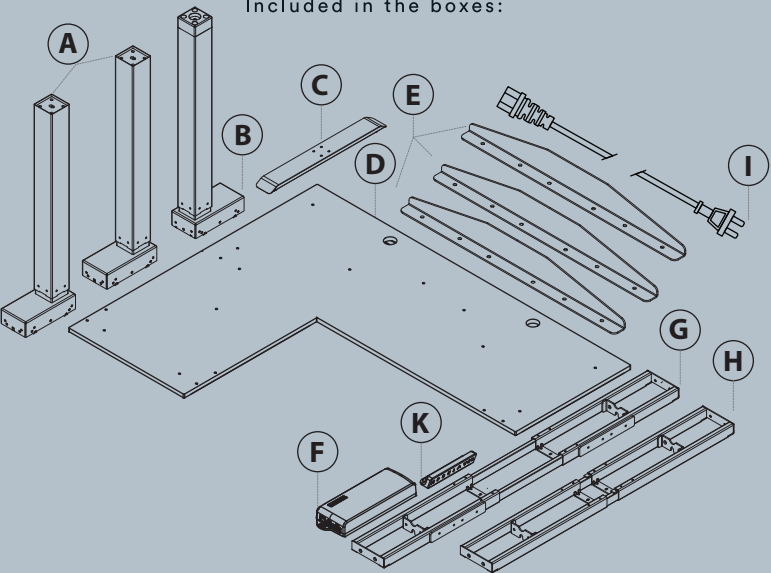


- A. Side Leg x2
- B. Middle leg x1
- C. Foot x2
- D. Desk Top x1
- E. Bracket x1
- F. Control Box x3
- G. Support Beam1 x1
- H. Support Beam2 x1
- I. Power Cable x1
- K. Key pad x1

Tools needed:

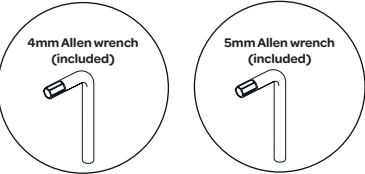


Screws included (actual size):

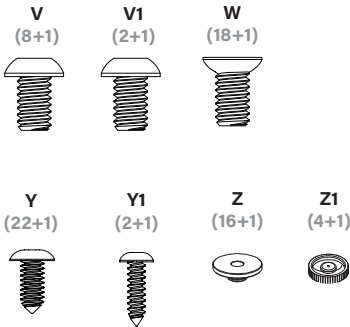 


INSTRUCTIONS FOR ASSEMBLY

 
1. Loosen the screws of Support Beam 1 (G) using 4MM Allen wrench, adjust Beam to proper position to fit the Desk Top (D), and then retighten the screws to lock.

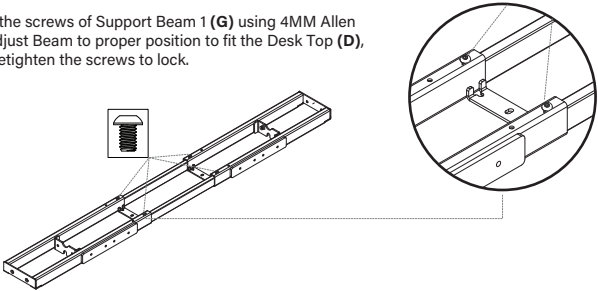


2. Attach legs to the Support Beam 1 using 8 (W).

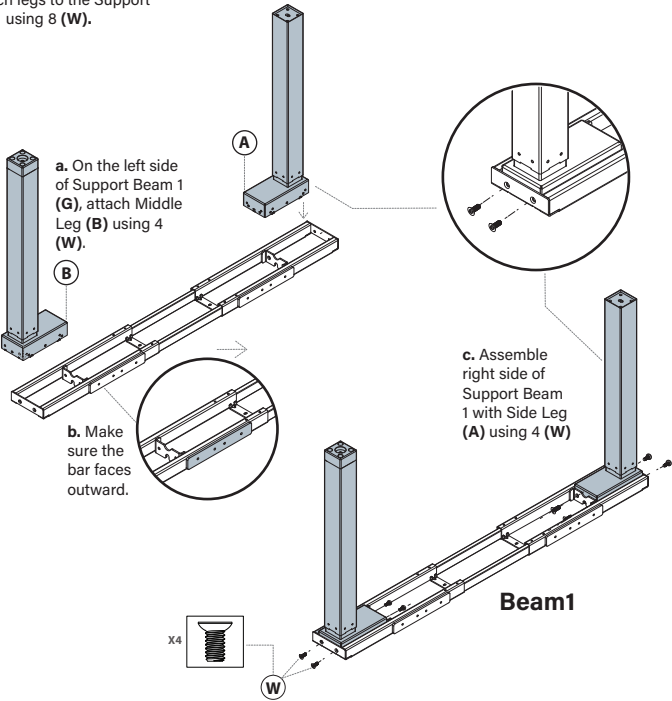 


 
3. Loosen the 8 screws of Support Beam 2 (H) and adjust it to the desired position to fit your Desk Top (D), then lock Beam by retightening its screws.

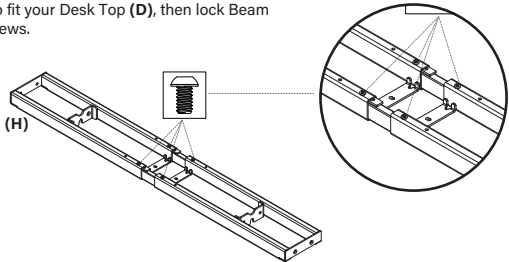


4. Attach remaining Side Leg (A) to right side of Support Beam 2 using 4 (W).

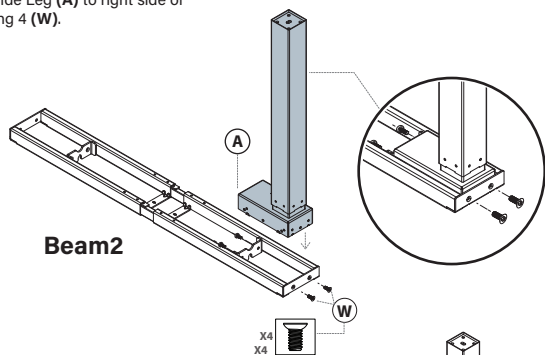 


5. Attach Support Beam 2 (H) to Support Beam 1 (G) using 2 (V1).

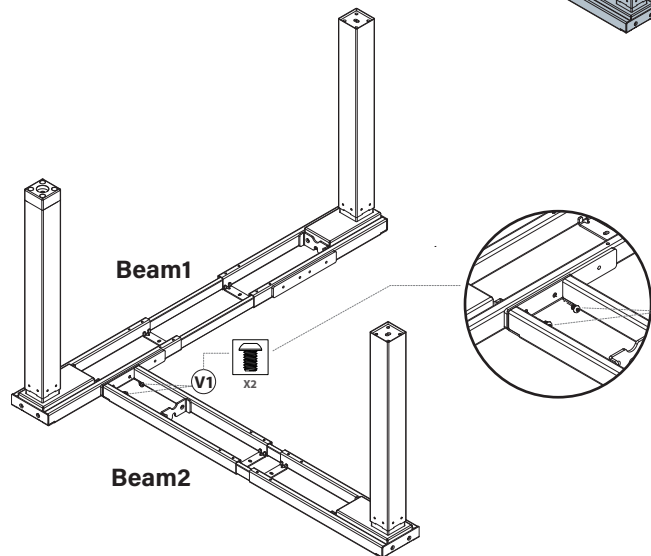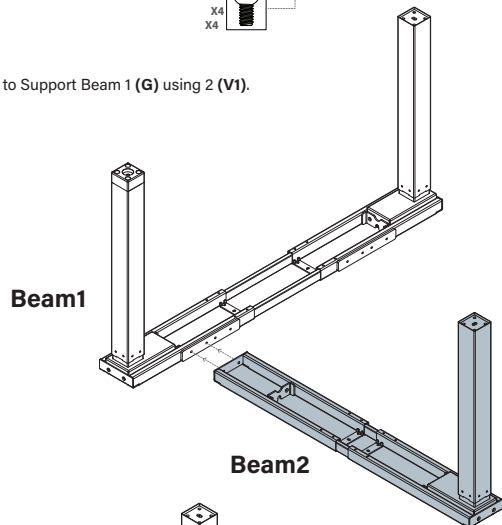  


6. Attach Feet (C) to the Side Legs (A) using 8 (V), and insert the 4 Levelling Feet Pads (Z1) to the bottom of the feet.



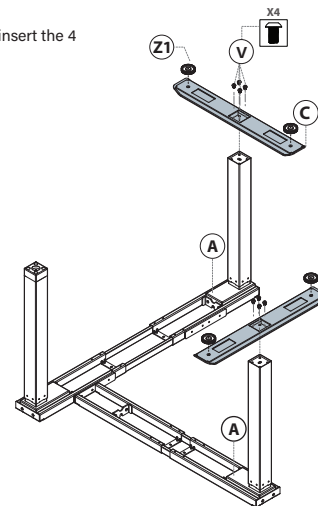 


 7. Flip the frame right side up and attach Brackets (E) to the ends of the Support Beams using 6 (W).

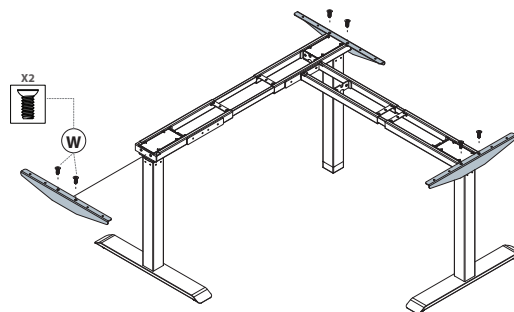

    - a. then place 16 Rubber Cushions (Z) to the top of the Brackets and Beams.


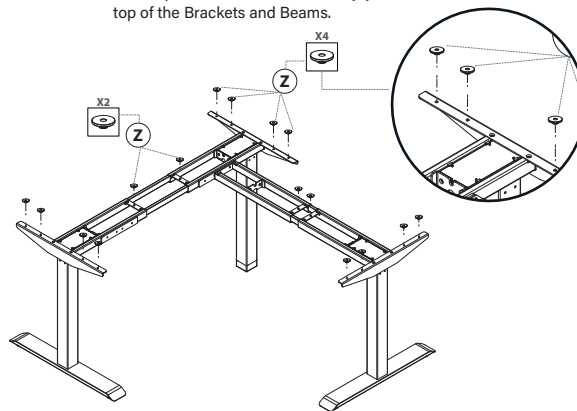


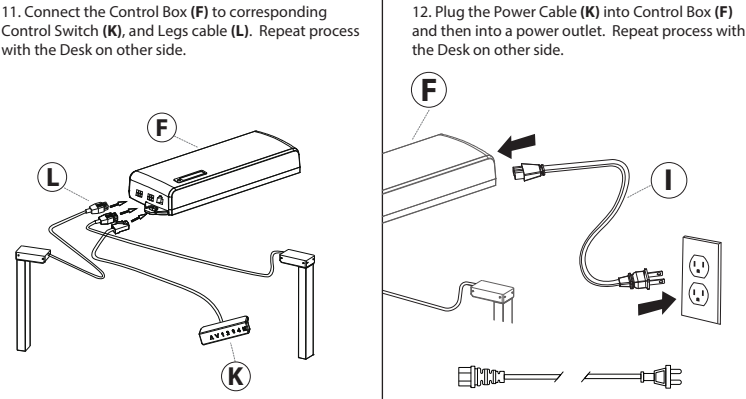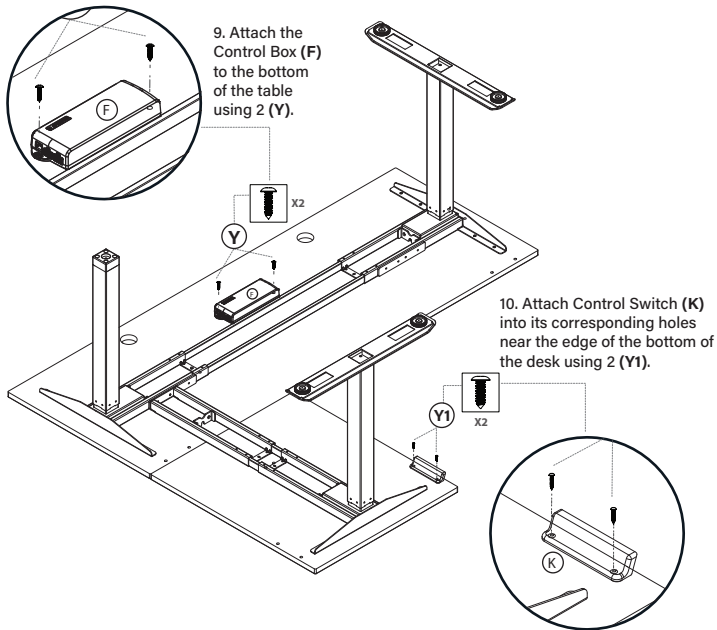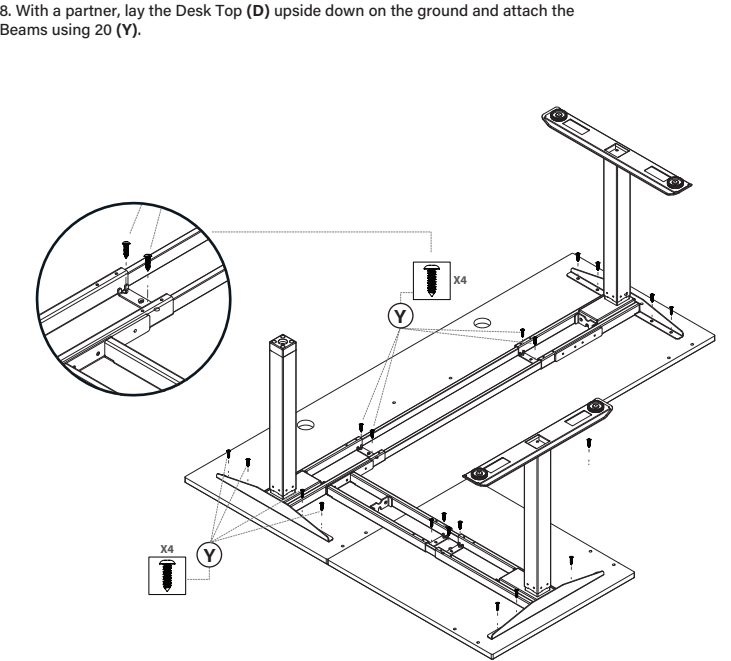

NOTE: Make sure no obstacles are in the desk's path. Make sure cords are a length that will accommodate the change in height.

13. Before use, reset each Control Box following these instructions on both sides.

  IMPORTANT! You must RESET the desk prior to use.

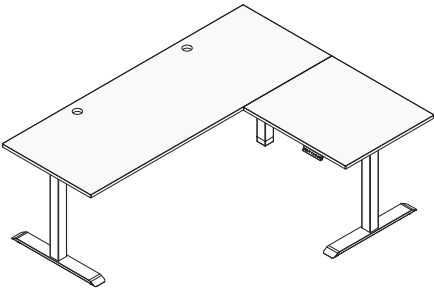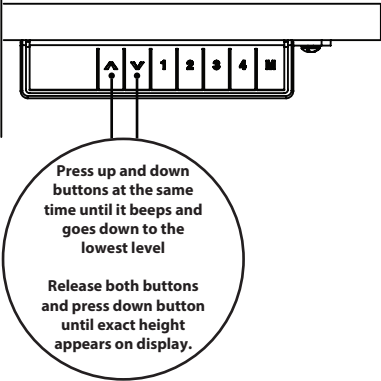

YOUR DESK IS READY TO USE.

INSTRUCTIONS FOR USE

1. Adjust SmartDesk's height

Press "Up" or "Down" button to adjust the height of the desk.

2. Program pre-set buttons

To use the presets on the SmartDesk, please follow the steps:

Set the desk to the height you like.
Press the M button until the LED flashes.
Press the number you want the desk set to.

3. Reset the desk

Unplug the power cord to the control box.
Unplug the cable from the keypad to the control box.
Plug all the cables again.
Do the reset: Press up and down buttons at the same time until it beeps and goes down to the
Lowest level: Release both buttons, then press only down until it shows the exact height.
Your desk is ready to use.

Before use make sure that:

The legs are level and start at the lowest position.
All the screws are tightened or else the desk will make noise/ wobble.

DESK PLACEMENT

When moving the desk, DO NOT lift the desk by the desktop alone. Support both the frame and the desk top equally. Favoring one over the other can stress the fasteners connecting the desk frame to the desktop. Lower the desk completely before moving it.

Choose a placement for the desk that's a safe distance from window frames, radiators, furniture, etc., so that people do not get stuck or trapped by the desk, and nothing obstructs the desk from rising or lowering.

Ensure adequate cord clearance before using the desk. Connect desk's power cord to the **110V - 240V** outlet to make the desk ready for use.

Do not place any objects underneath the desk that are taller than 25".

Autonomous

ABOUT

Autonomous is a global network of innovators. We're engineers who take apart your day, examine the pieces, and then reassemble your routine to help you #worksmarter. Our sole focus is towards realizing the gold standard of the smart office industry.

visit autonomous.ai/warranty.



Autonomous-Smart office
+1 844-208-6205
Smart Office
9469-5 Opal Ave - Mentone, CA 92359
www.autonomous.ai
human@autonomous.ai