
λutonomous

smart office

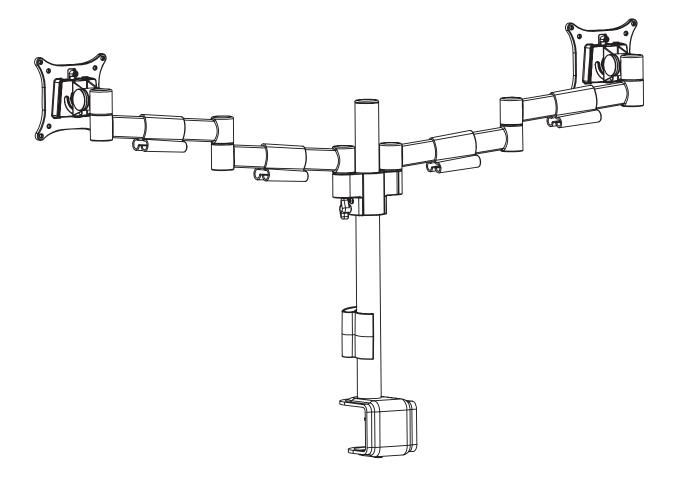


DUAL MONITOR ARM

Assembly & Instructions


www.autonomous.ai

PART LIST


No.	Items	Specs	Qty
Α	9		8
В	0		8
С		M6	1
D		M4	1
F		M2. 5	1
G	2		1
Н	THE REAL PROPERTY.		2
I	•		1
J		M8*90	1
K	@		1

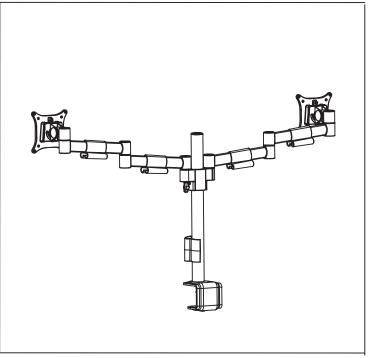

CLAMP INSTALLATION

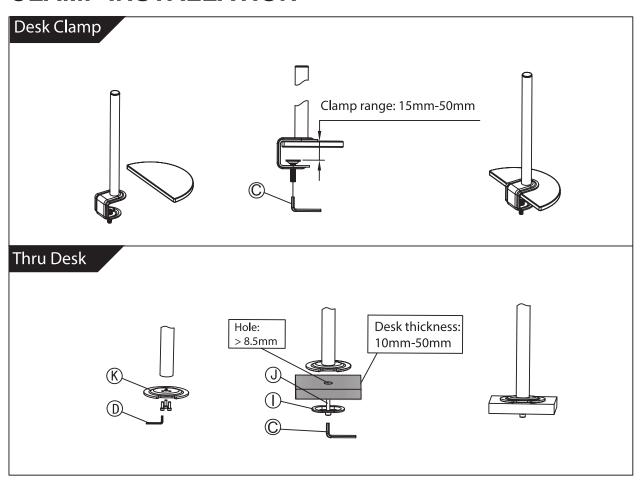


MONITORS INSTALLATION

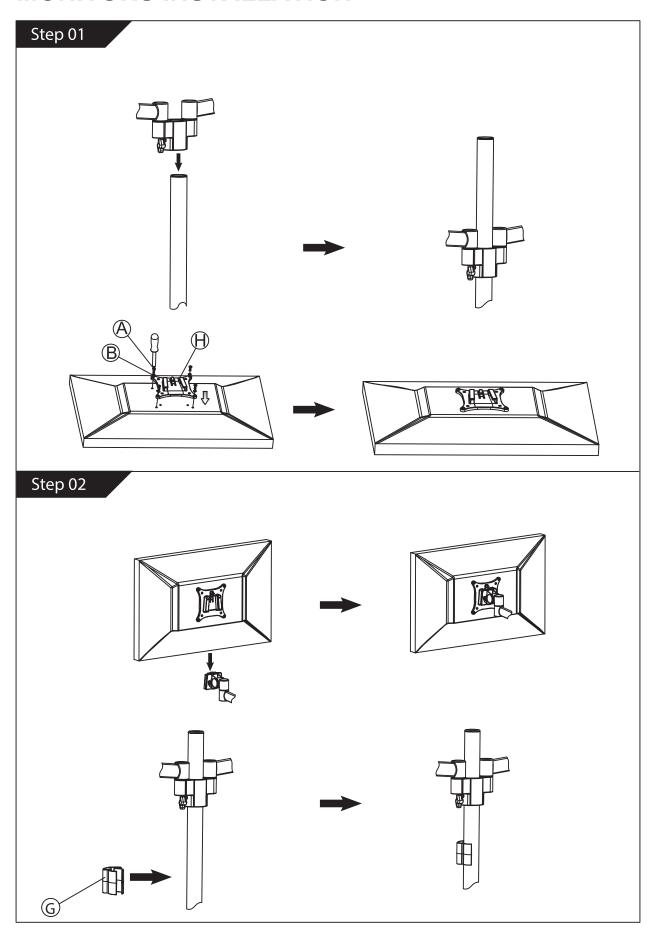

ARM ADJUSTMENT

Step 01

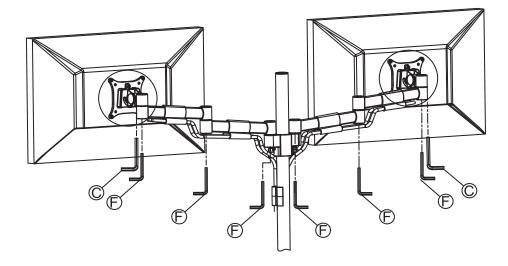

- Note:
 1. Wrench"C" is used to adjust the
- Tilt screw.
- 2. Tighten this screw to fix the monitor.

Step 02

