


Autonomous

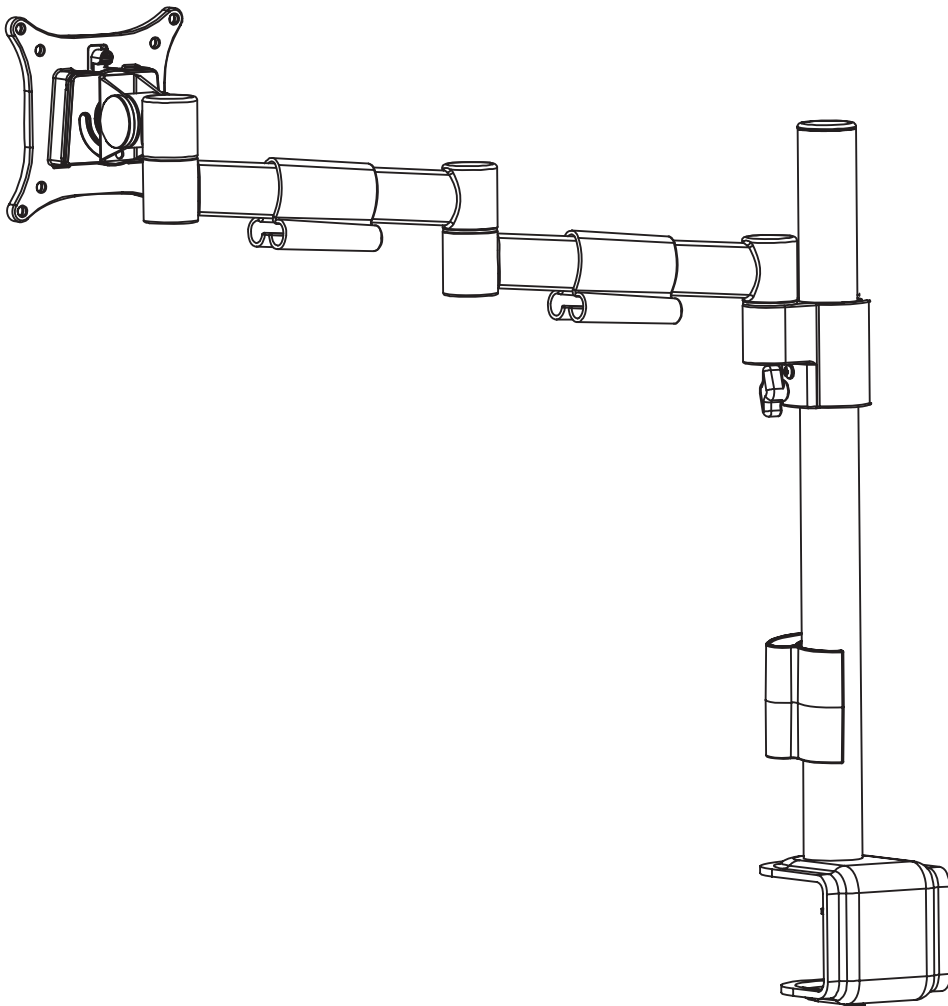









smart office




SINGLE MONITOR ARM

Assembly & Instructions




PART LIST

| No. | Items | Specs | Qty |
|-----|---|-------|-----|
| A |  | | 4 |
| B |  | | 4 |
| C |  | M6 | 1 |
| D |  | M4 | 1 |
| F |  | M2. 5 | 1 |
| G |  | | 1 |
| H |  | | 1 |
| I |  | | 1 |
| J |  | M8*90 | 1 |
| K |  | | 1 |
| | | | |
| | | | |



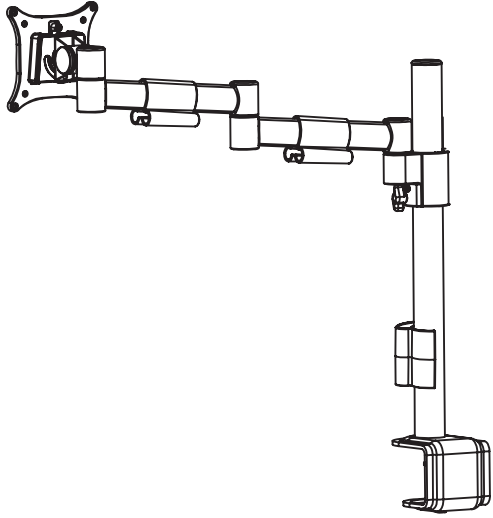


CLAMP INSTALLATION

Desk Clamp

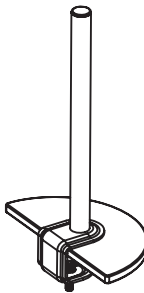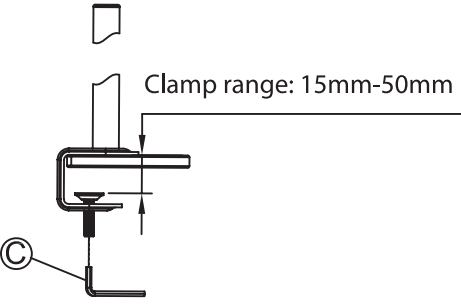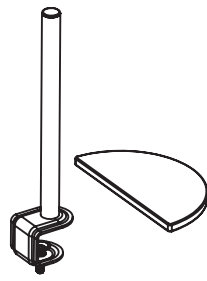


Thru Desk

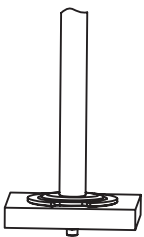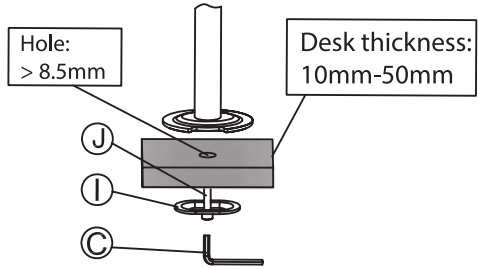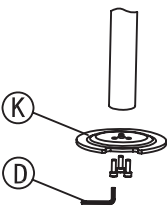


MONITOR INSTALLATION

Step 01

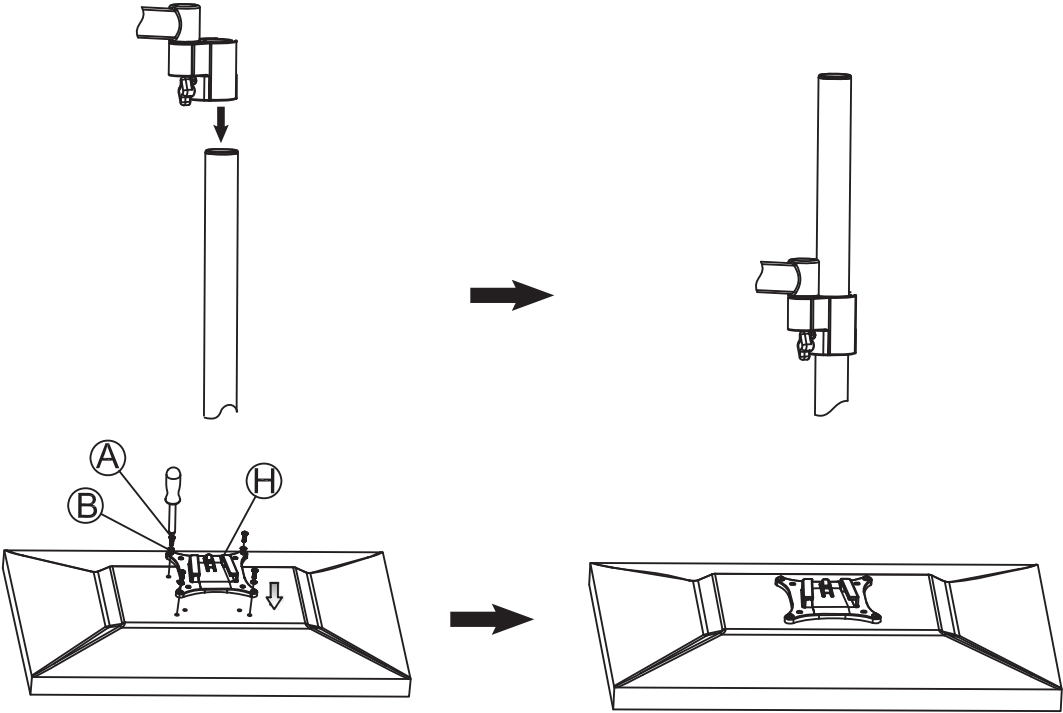


Step 02

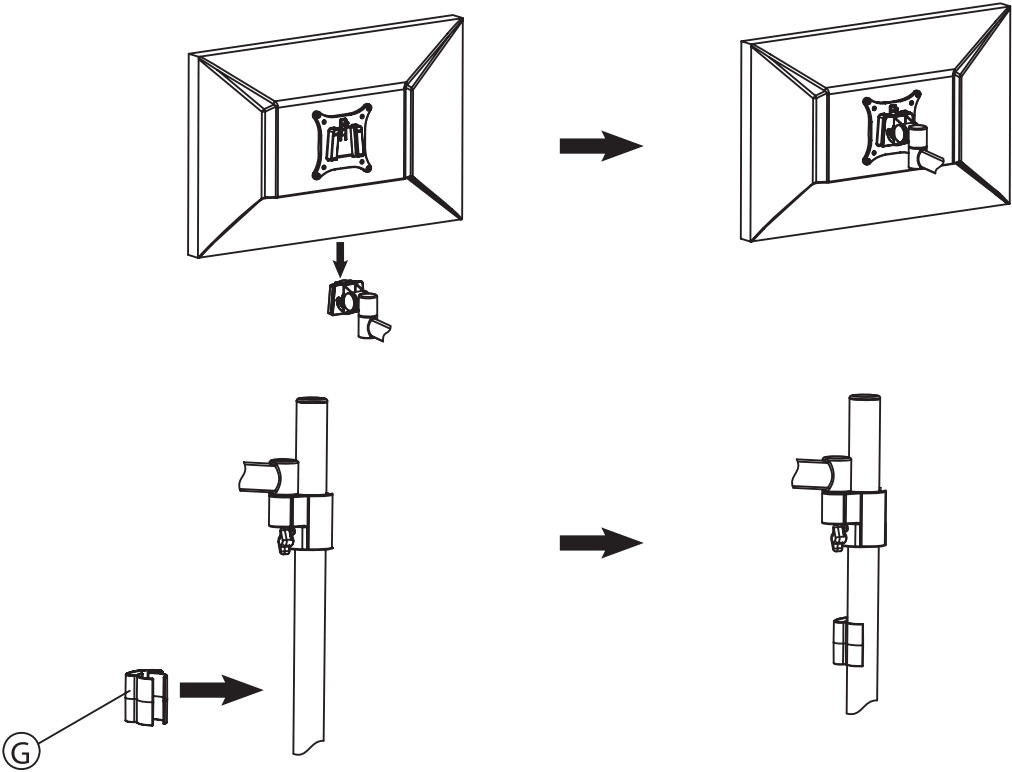

ARM ADJUSTMENT


Step 01

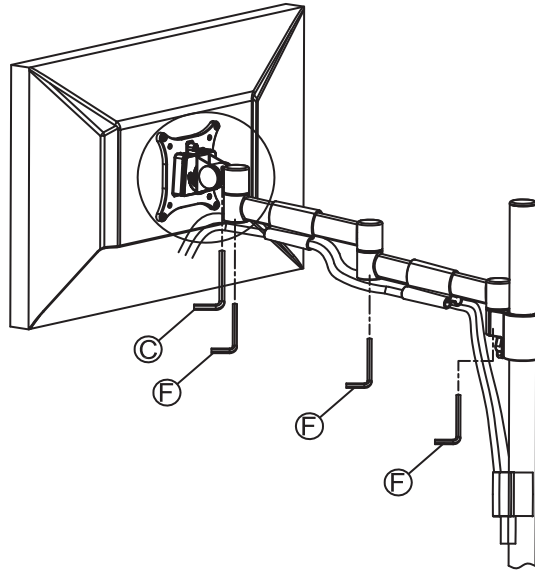

Note:

1. Wrench "C" is used to adjust the Tilt screw.
2. Tighten this screw to fix the monitor.

Step 02

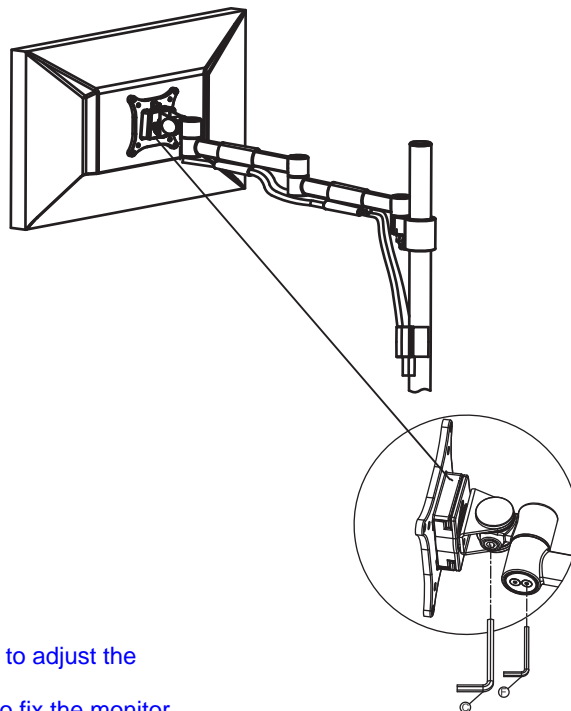

Note:

1. Wrench "C" is used to adjust the Tilt screw.
2. Tighten this screw to fix the monitor.