



Autonomous

smart office

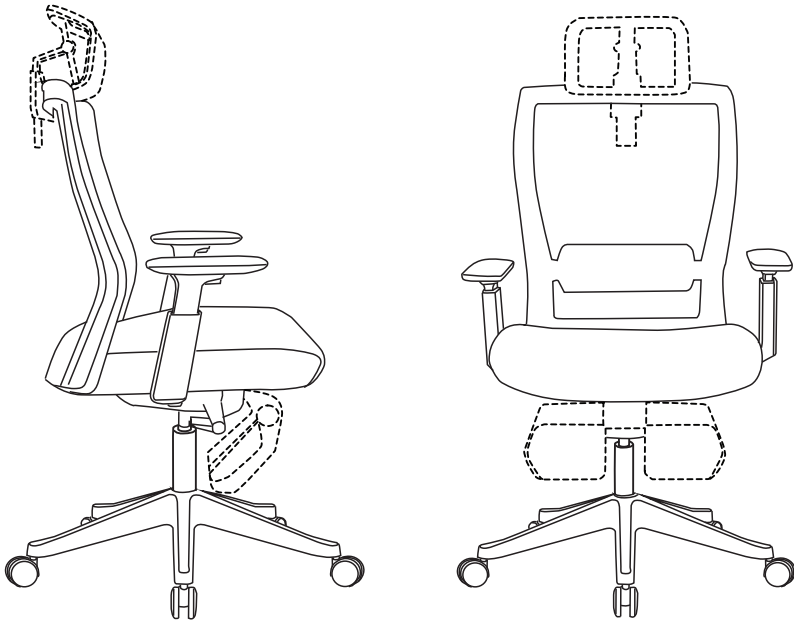


ErgoChair Core

Assembly Instructions

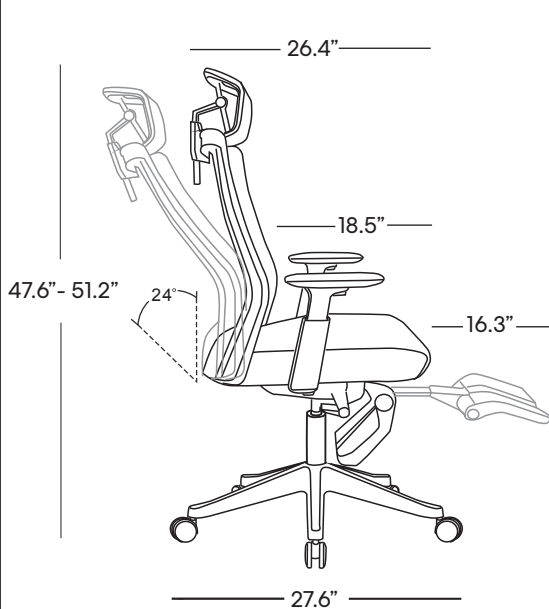

Side view

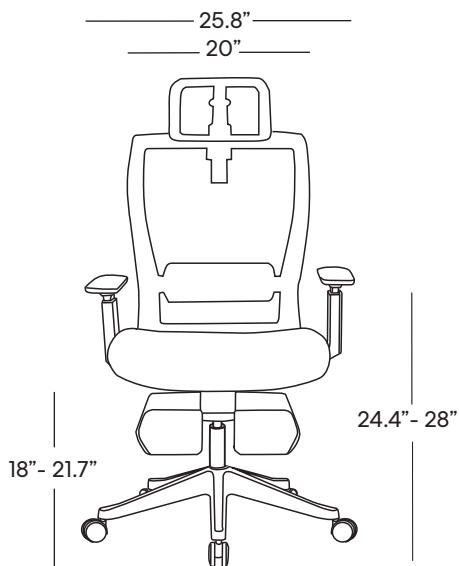

Front view


OVERALL SIZE

—— ErgoChair Core ——

PART LIST

COMPONENTS

A

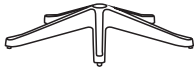

B



C



D



E




F

(Optional)



G

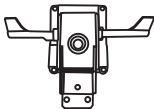

H



I

(Optional)



HARDWARE/ TOOLS

J



K



L



M



N



O



P



Q



R



S




T




A	Base x 1	H	Backrest x 1	O	Machine screws (M8x55) x 3
B	Casters x 5	I	Headrest x 1	P	Machine screws (M6x55) x 2
C	Gas lift x 1	J	Speed Wrench x 1	Q	Machine screws (M6x40) x 8
D	Seat x 1	K	Washers large (M8x22x2) x 3	R	Machine screws (M6x8) x 2
E	Armrest x 1	L	Washers small (M6x15 x1.5) x 10	S	Screws M5 x 2
F	Leg rest x 1	M	Spring washers M8 x 3	T	Screwdriver x 1 (with Gas lift)
G	Mechanism x 1	N	Spring washers M6 x 10		

Step 1

Insert 5 Wheels to the holes on each prong of chair Base.

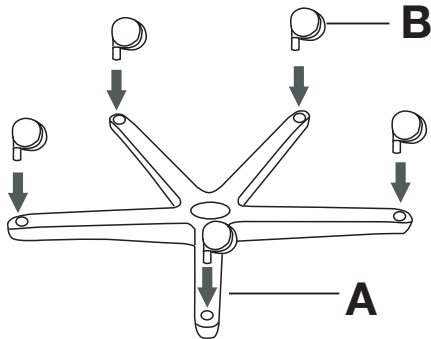


Step 2

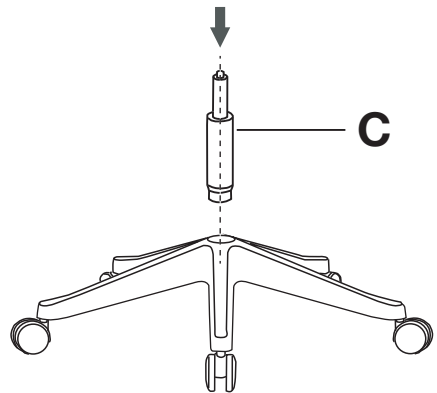


For full-option ErgoChair Core, please follow Step 4 and Step 5 to install the leg rest before tightening the mechanism to the seat. Otherwise, please skip these two steps if you own a basic ErgoChair Core.

Step 3

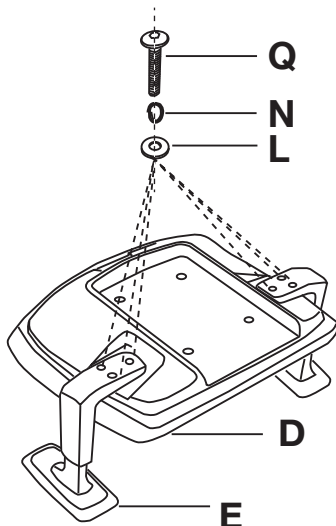


Step 4

Screws pre-installed on the leg rest.

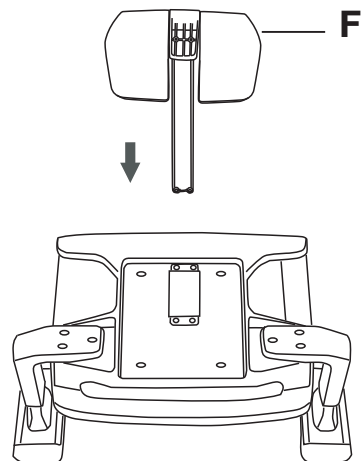


Step 5

The R screws are ready on the leg rest. Slot the base of the leg rest through the support bracket, and tighten the screws into place.

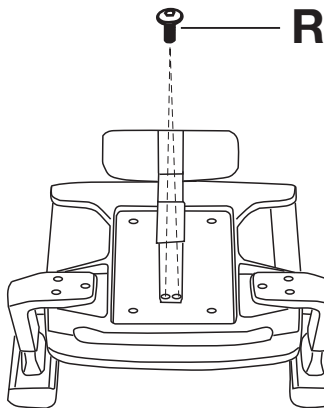


Step 6

Prepare the combo of Q + N + L. Tighten the combo into the metal bar and the seat bottom.

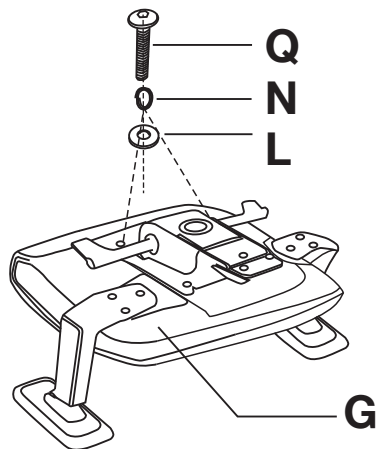


Step 7

Prepare the combo of P + N + L. Tighten another two screws remaining in the metal bar.

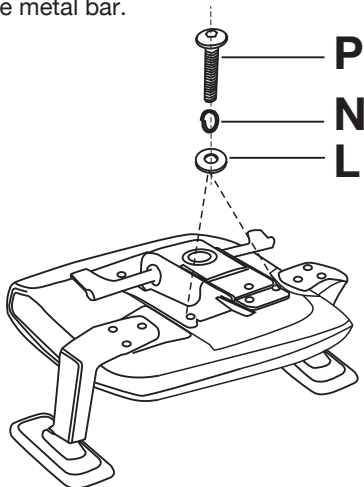


Step 8

Prepare the combo of O + M + K. Tighten three O screws, connect the metal bar with the base of the backrest.

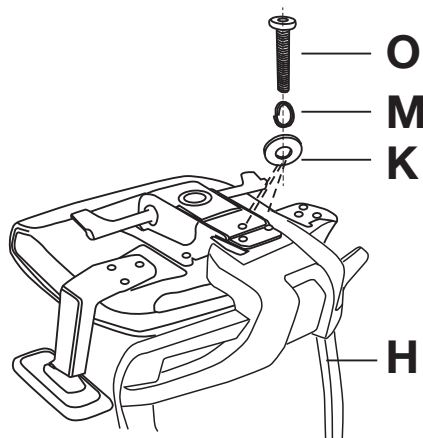

Step 9

For full-option ErgoChair Core, please follow Step 9 to install the headrest to backrest.

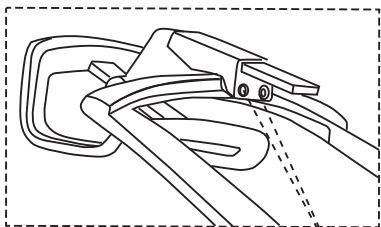

The screws are ready on the headrest.
Tighten the screws when it is in position.


S —

T —



Step 10


From the top, lift down slightly the seat into the base, connect by the center hole.

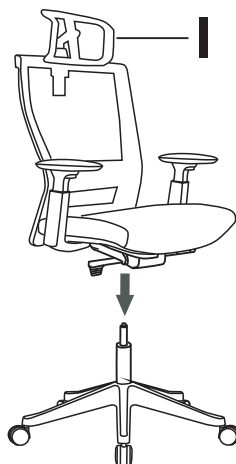

Congratulations! You've done the assembly. Enjoy your ErgoChair Core now.

Function

Right side.
Pull the handle up to adjust the seat height.

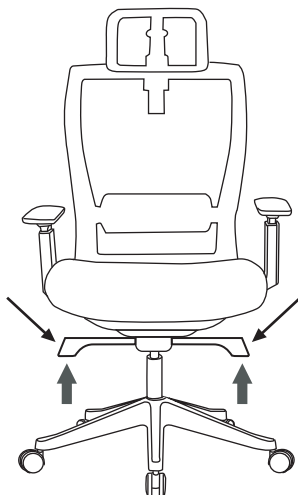


Left side.
This handle controls the backrest's angle.
Pull up: release
Push down: lock



25 degrees
adjustment



3" up and down

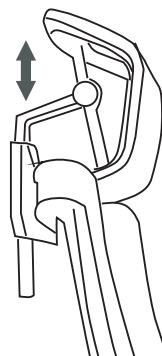

3" up and down

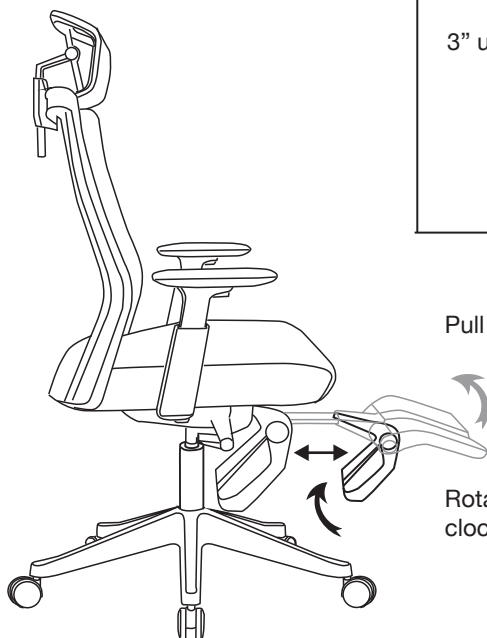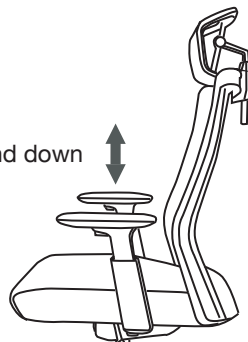

Pull the leg rest out.

Rotate the leg rest
clockwise before use.

WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN INJURY.

1. This product is designed for seating only, do not stand on this product. Do not use it as a step ladder.
2. Do not use this product unless all bolts and parts are firmly tightened.
3. If any parts are missing, damaged or worn, stop using this product. Repair the product with the replacement parts from manufacturer.
4. Do not sit on the armrest of this product.
5. This product is designed for one person sitting at a time.
6. Keep out of reach of children under the age of 10 unless assistance from an adult is provided.

λ utonomous



Autonomous-Smart office
+1 844-208-6205
Smart Office
9469-5 Opal Ave - Mentone, CA 92359
www.autonomous.ai
human@autonomous.ai