



PEARLTURN

ONE PEARL. TWO POSES.

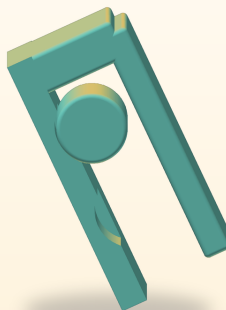

1 LOW

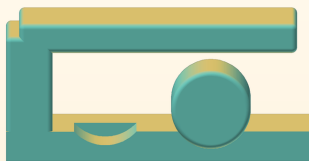

2 TALL

PRESS REAR RIDGE

THE MOVE

Press a broad rear ridge forward and down to guide the shell around its loose, visible pearl.

TURN OVER

Set it. Press it. Reverse it.

MAKE THE TURN

Use a clean, level surface away from edges.

IN THE BOX

1 open-mouth shell + 1 loose pearl drum

1 SET

Place the pearl on its cylindrical edge in one exposed lip saddle. Lower the shell around it; keep the pearl visible.

2 PRESS

Give the broad rear ridge a steady forward-and-down push. Keep fingers clear of the mouth and travel path. Stop if a part catches or tips.

3 REVERSE

After the shell settles in the other pose, press the opposite broad ridge to aim back toward the first pose.

RESET • CARE • SAFETY

RESET Pearl slips? Seat it fully in the exposed saddle on a clean surface.

STOP If motion catches, clear debris and inspect both pieces—never force.

CARE Dry-wipe only; store together. Loose part: keep from mouthing children and pets. Do not use if damaged.

AIM, DON'T FORCE.

This edition has not been physically playtested.