




MEET YOUR SWORD

Pixel Sword

A little sword for big imagined worlds.

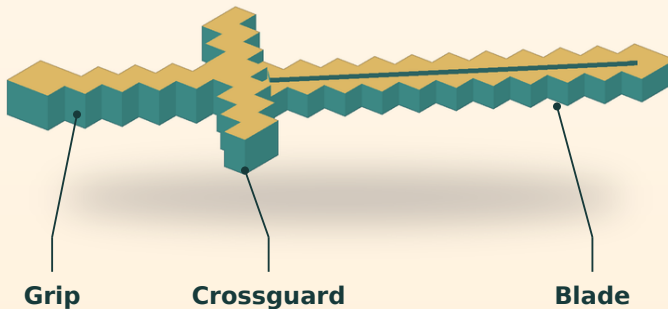

One piece. No assembly or extra parts.

The short raised end is the grip. The wide crossguard separates your hand from the long stepped blade.

1 Check before you hold

Look for cracks, loose fragments or rough edges. If any are present, stop using the sword.

2 Hold, then imagine

Hold the thick grip behind the crossguard. Stand still with clear space around you and choose a gentle pose.

For posing only. Do not strike people or objects.



Your next scene

Picture a gateway, a hidden cave or a quiet lookout. Give your still pose a story.

3 Keep it gentle

Point away from faces and bodies. Do not swing, thrust, throw or run while holding the sword.

4 Rest between scenes

Place the sword flat on a clear surface. To begin again, check it and pick it up by the grip.

LOOK AFTER YOUR SWORD

Wipe with a soft, slightly damp cloth and dry. Keep away from heat and direct sunlight. Do not bend the blade or use it to pry.

IF SOMETHING FEELS WRONG

If the grip feels awkward, set the sword down. Do not force a hold. If it cracks, chips or develops a rough edge, stop use and keep any loose pieces away from children.

Keep this card with your sword.