


Autonomous

SmartDesk 5 Pro

Assembly Guide

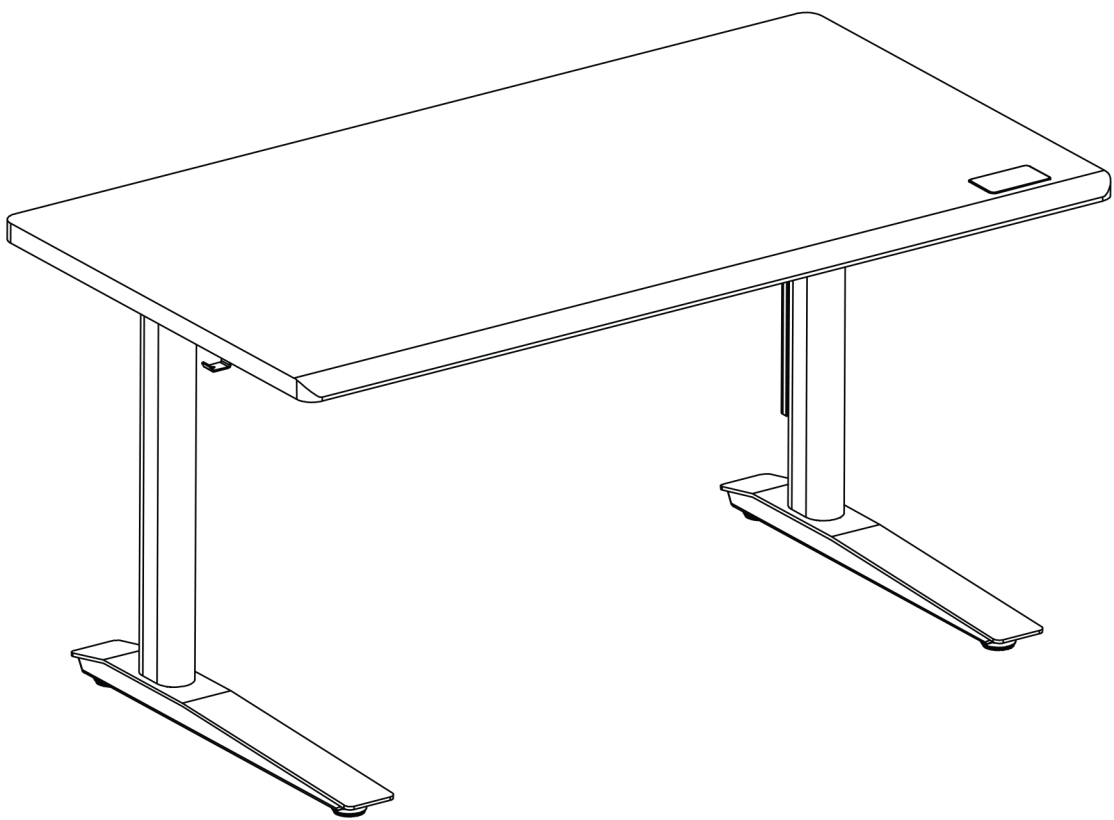

Assembly Time

30-45 min

Number of People

2



TABLE OF CONTENTS

CAUTION	1
INCLUDED PARTS	2
ASSEMBLY GUIDE	
COLUMN ASSEMBLY	3
SIDE BRACKET ASSEMBLY	4
FOOT ASSEMBLY	5
CENTER RAIL ASSEMBLY	6
FRAME INSTALLATION	7
CABLE TRAY ASSEMBLY	9
DESK FLIPPING	10
CABLE MANAGEMENT	11
ACCESSORY INSTALLATION	12
SETUP KEYPAD	
RESET INSTRUCTION	13
HEIGHT ADJUSTMENT & MEMORY SETUP	14
ANTI-COLLISION LEVEL SETTINGS	15




READ AND FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY BEFORE USE.




Keep kids and pets away during use.




Unplug during storms or long unused periods.

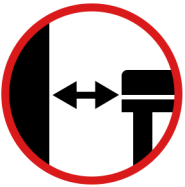

Keep desktop away from walls for ventilation.

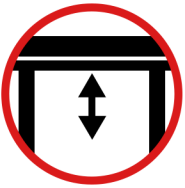


Keep the under-desk area (20"+) obstacle-free during use.

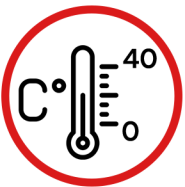

Keep the desk in 0-40°C, away from dust and corrosives.




Do not disassemble without permission.

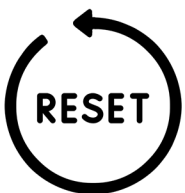



Manually reset after first use or power outage.

INCLUDED PARTS

Desktop

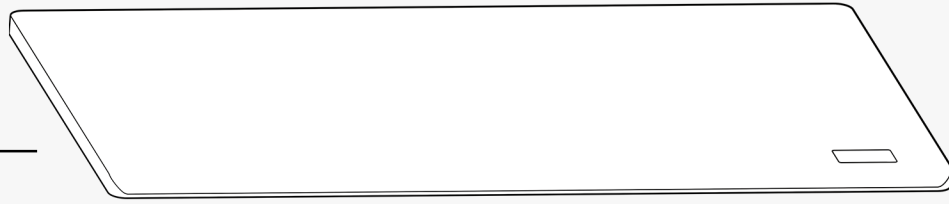

Power Cord




Keypad

Power Outlet

Control Box

Cable Tray




Cable Organizer



Columns

x 2

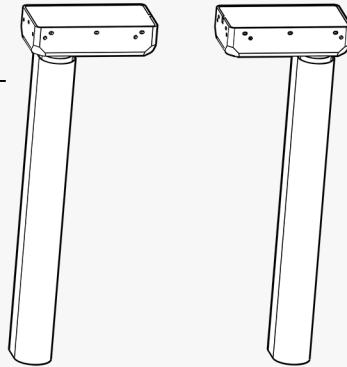

Hooks


x 2

Upper Tube



Feet

x 2

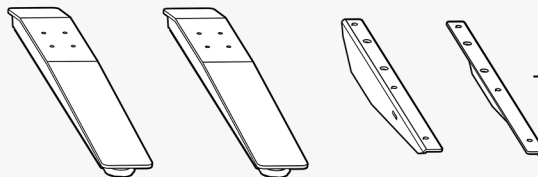


Side Brackets

x 2

Center Rails

x 2



Frames

x 2




A M6x10 Screws




x 16

B M6x14 Screws



x 20

C M6x12 Screws

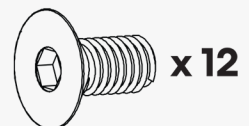


x 12

D M4 Wrench



x 1

E M6x14 Hand Screws




x 2

F Zip Ties



x 10

A M6x10 Screws




x8


D M4 Wrench




C M6x12 Screws

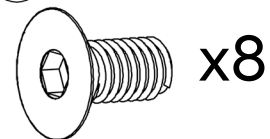

x8

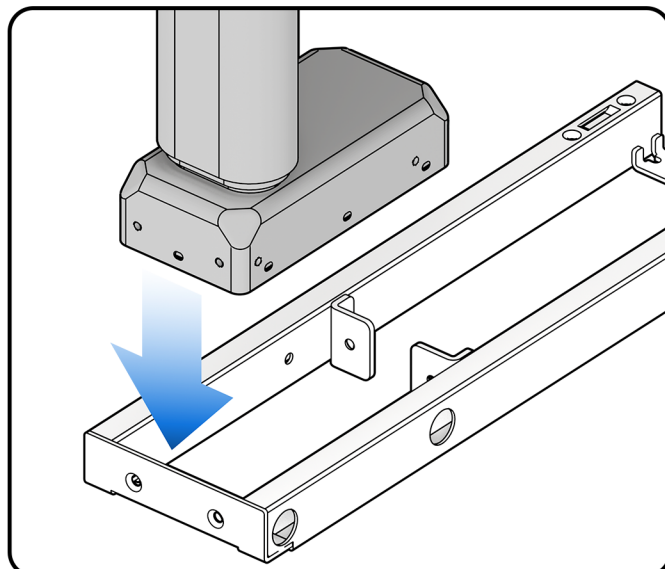


1. Attach **Columns** to the **Frame**

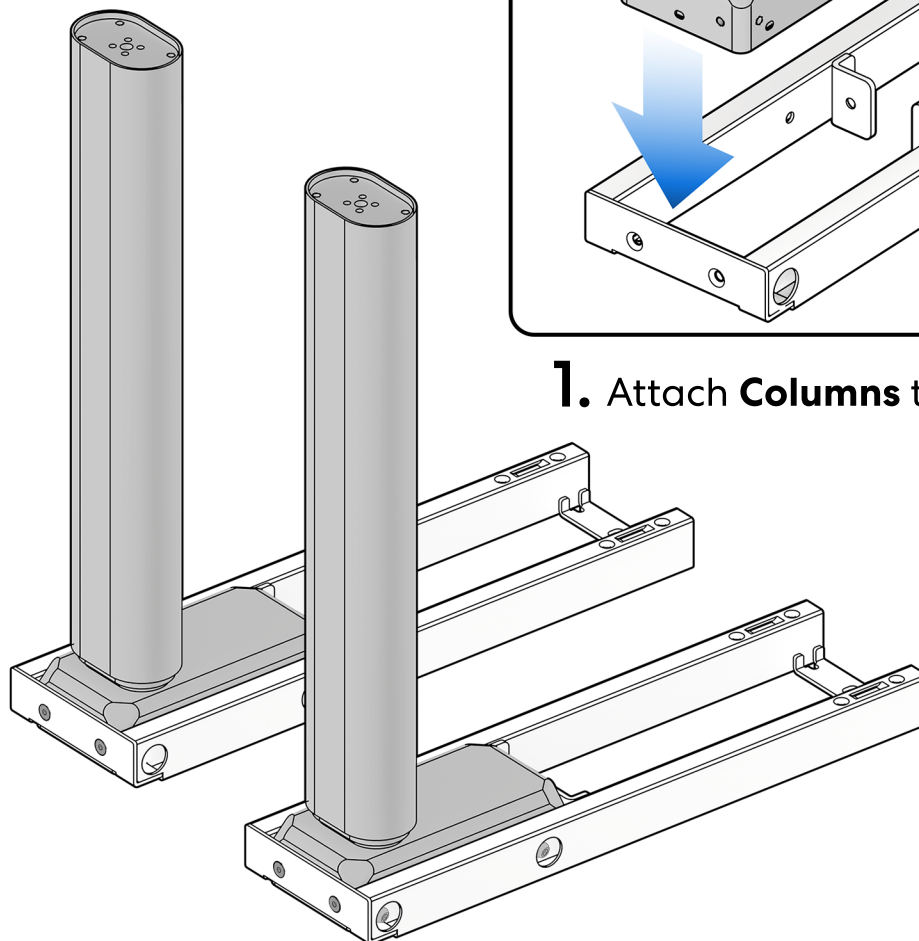


2. Easily align the screw positions by inserting 4 screws **C** (2.1) and 4 screws **A** (2.2), without tightening

2.1

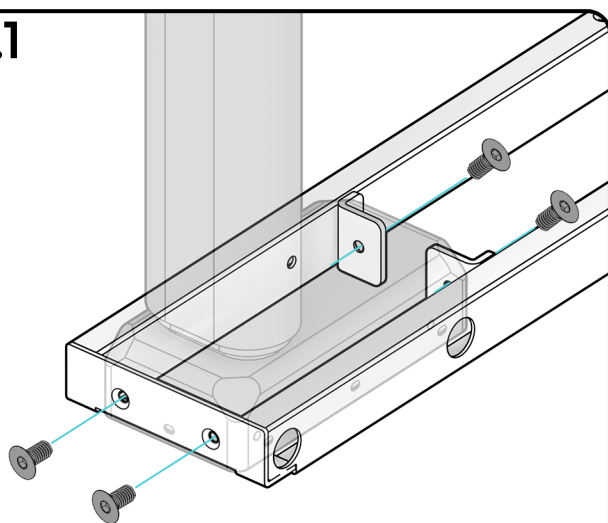


2.2

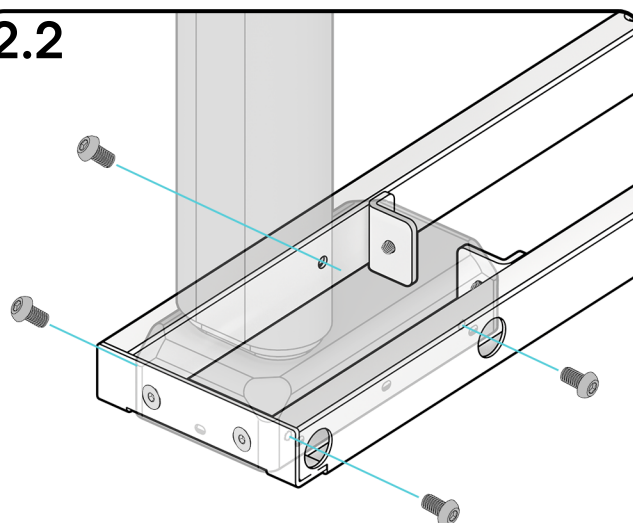



3. Tighten screws **C** (2.1) and screws **A** (2.2)

SIDE BRACKET ASSEMBLY



C M6x12 Screws

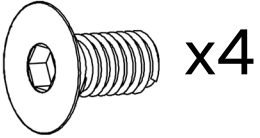


D M4 Wrench

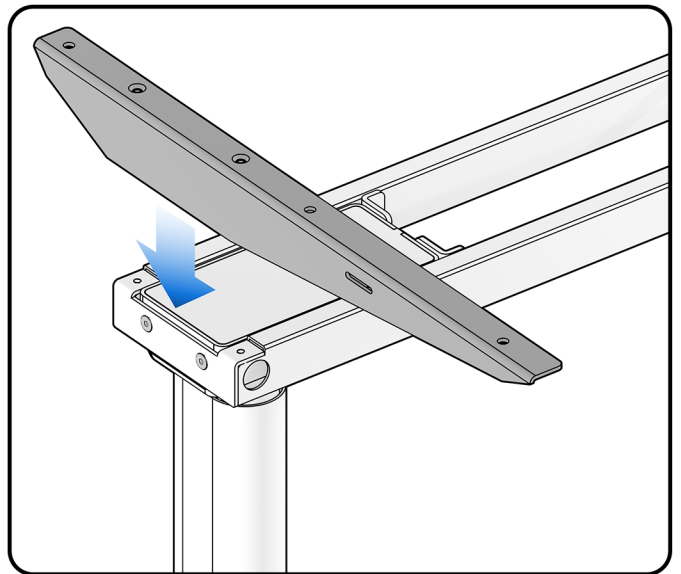

1. Attach **Side Brackets** to the **Frame**

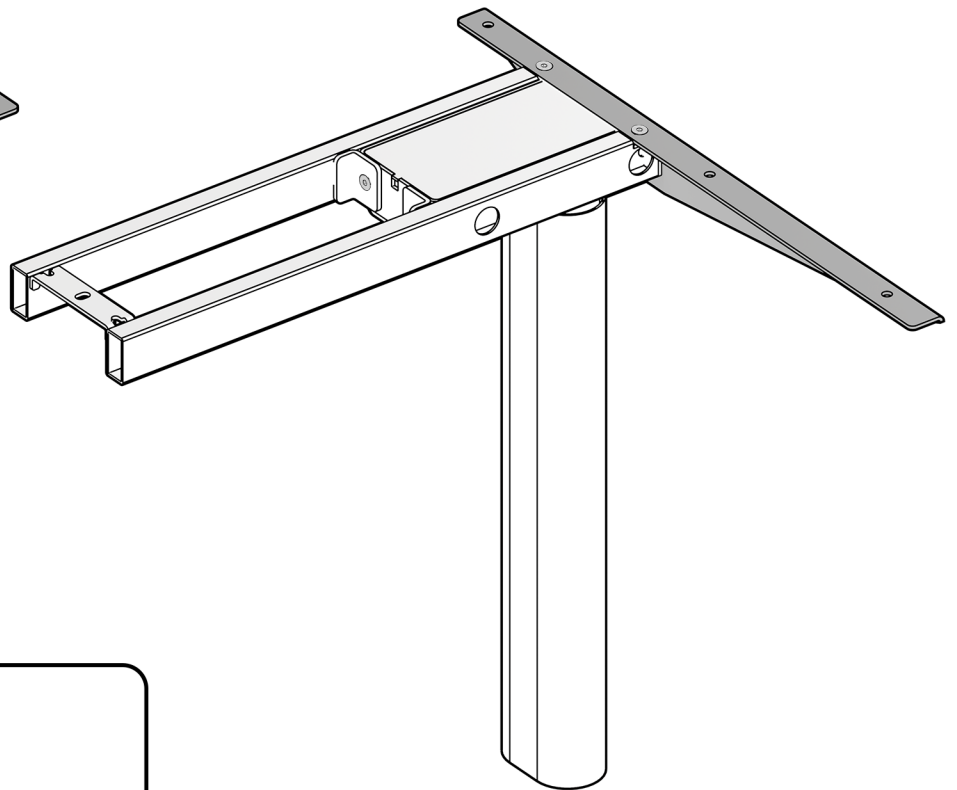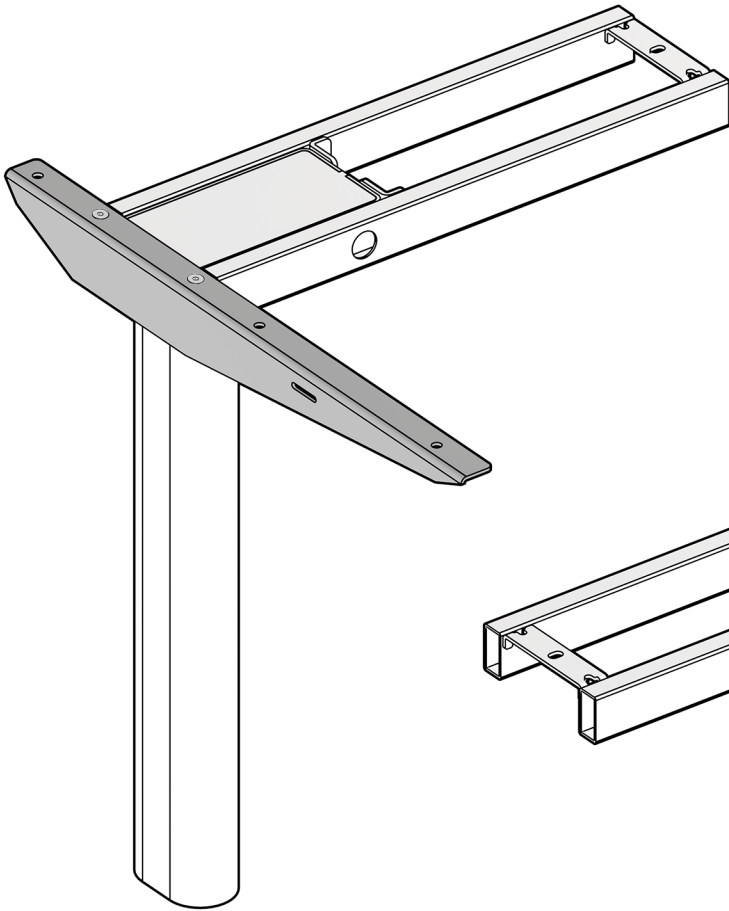


2. Insert 2 screws **C**


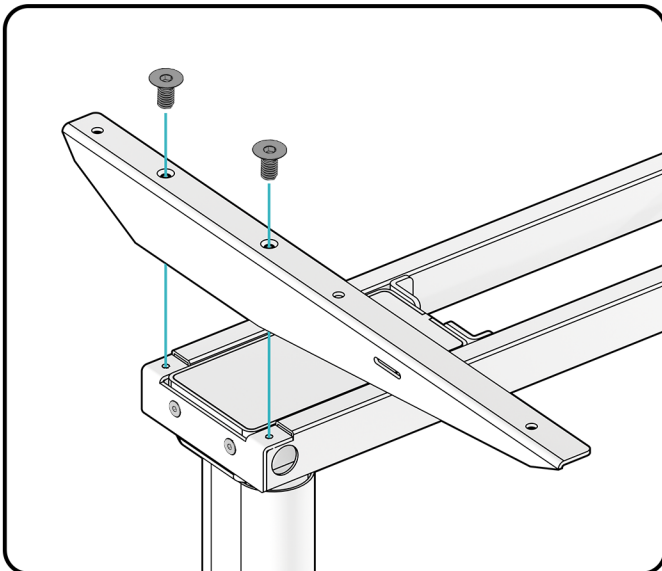


FOOT ASSEMBLY



B M6x14 Screws

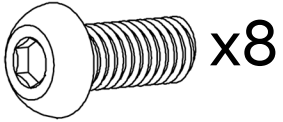


D M4 Wrench

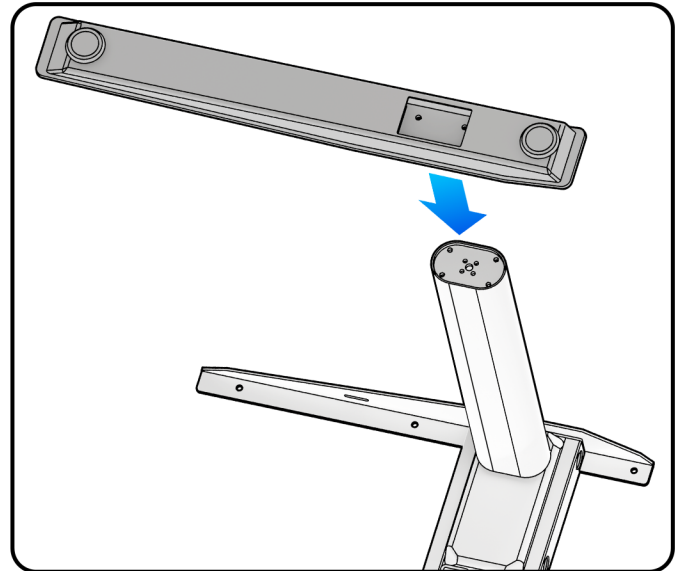




1. Attach **Feet** to **Columns**

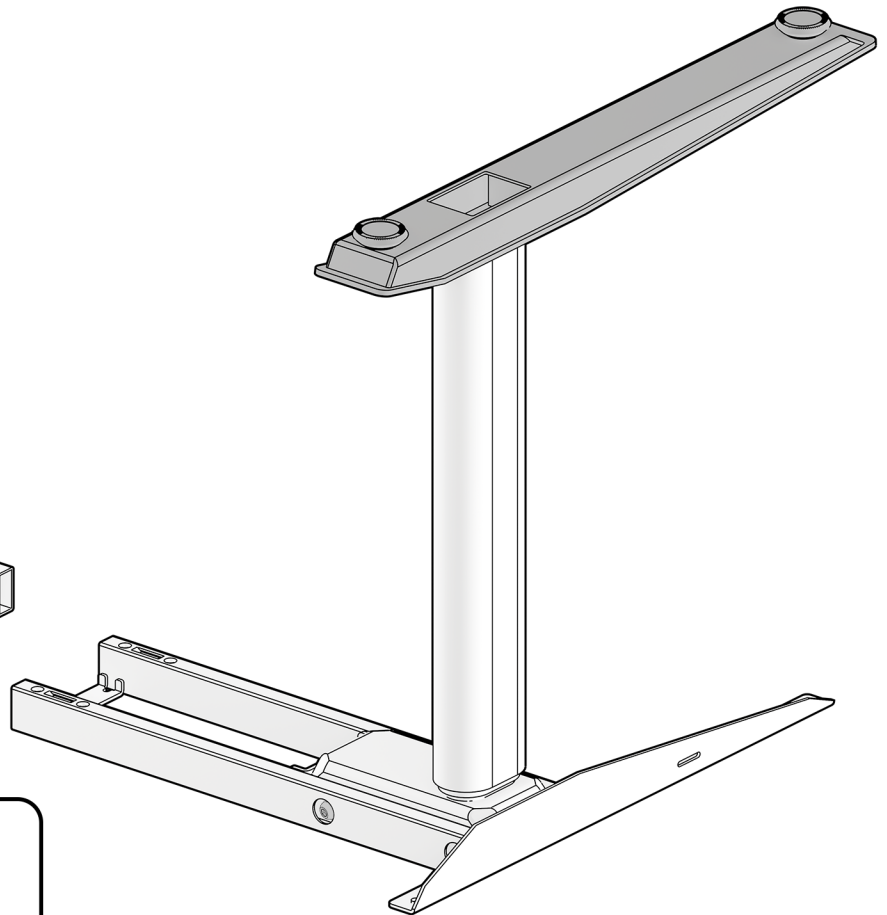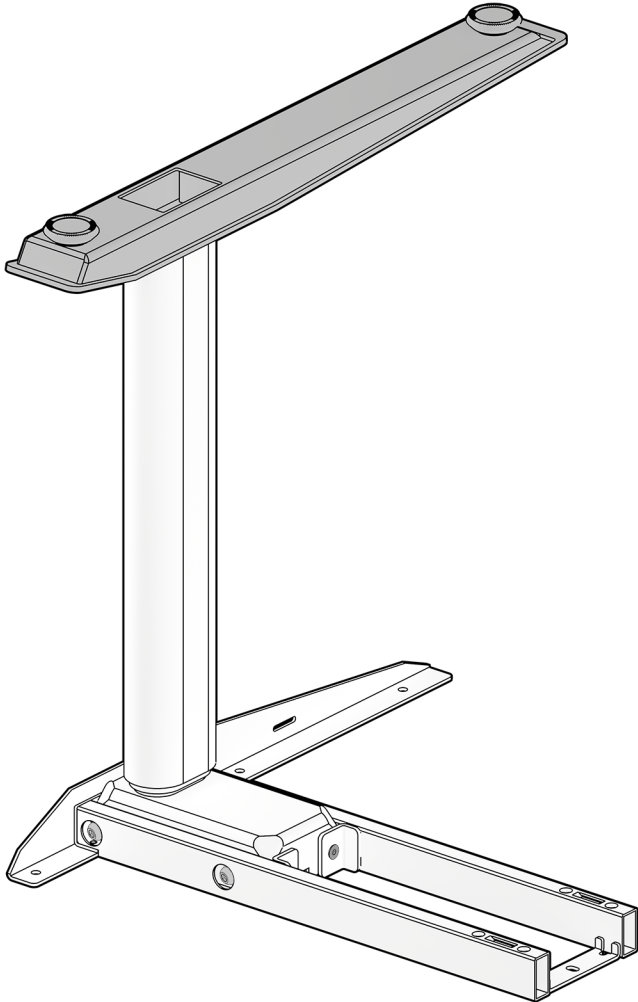


2. Insert 4 screws **B**

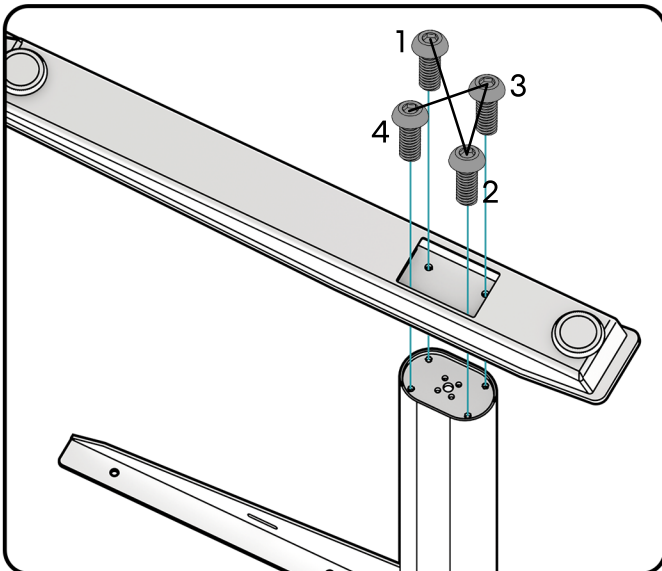


CENTER RAIL ASSEMBLY

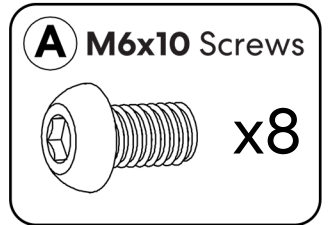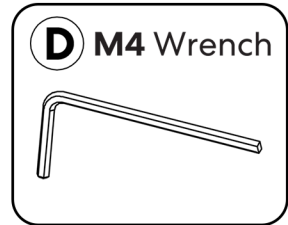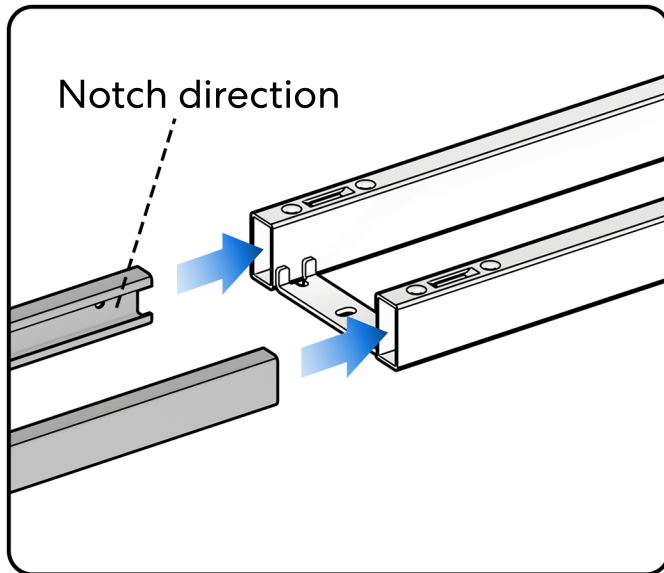

1. Attach **Center Rails** to the **Frame**, following the notch direction

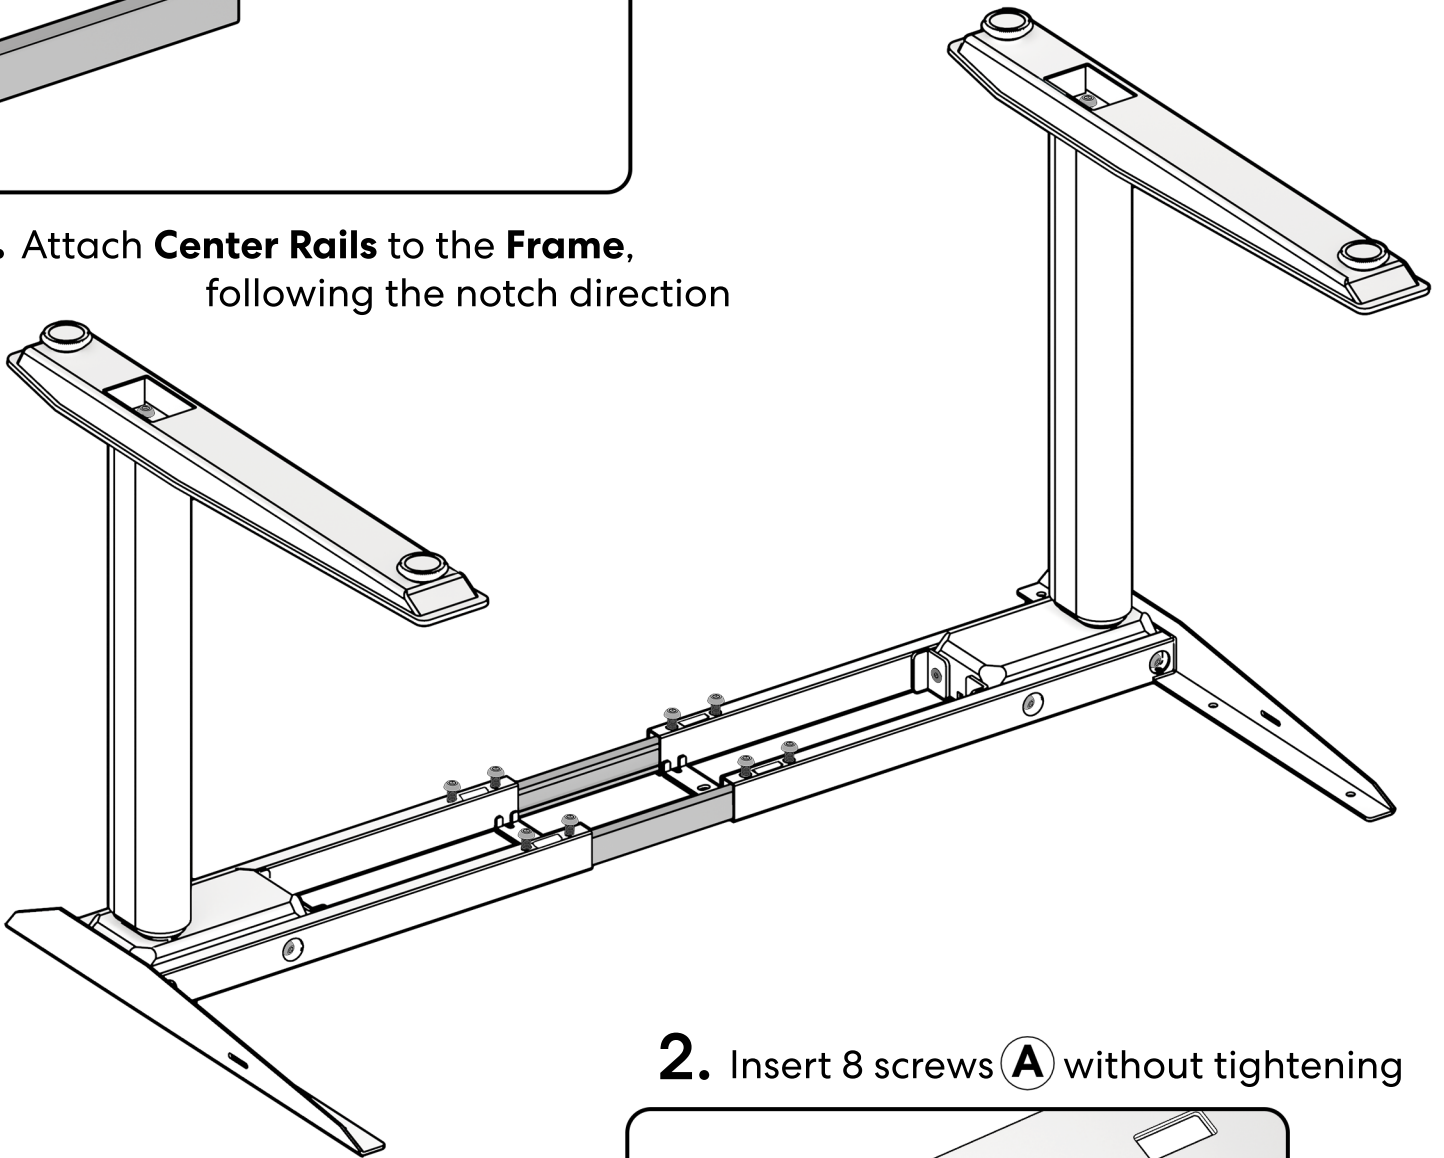




2. Insert 8 screws **A** without tightening

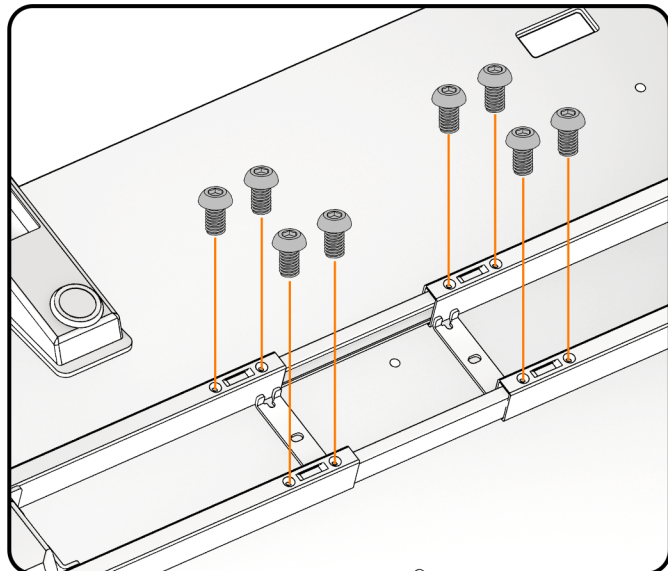

FRAME INSTALLATION




1. Place a **Foam Pad** under the **Desktop** to prevent scratches when installing

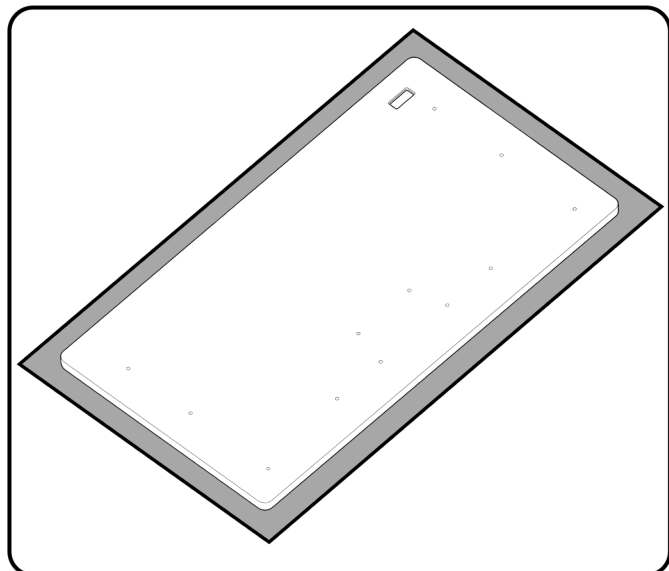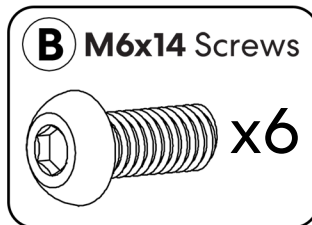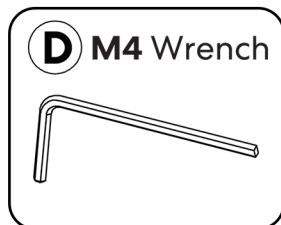


2.



- With 2 people, position the **Frame** on the **Desktop**, align the **Side Bracket** holes with the **Desktop** holes

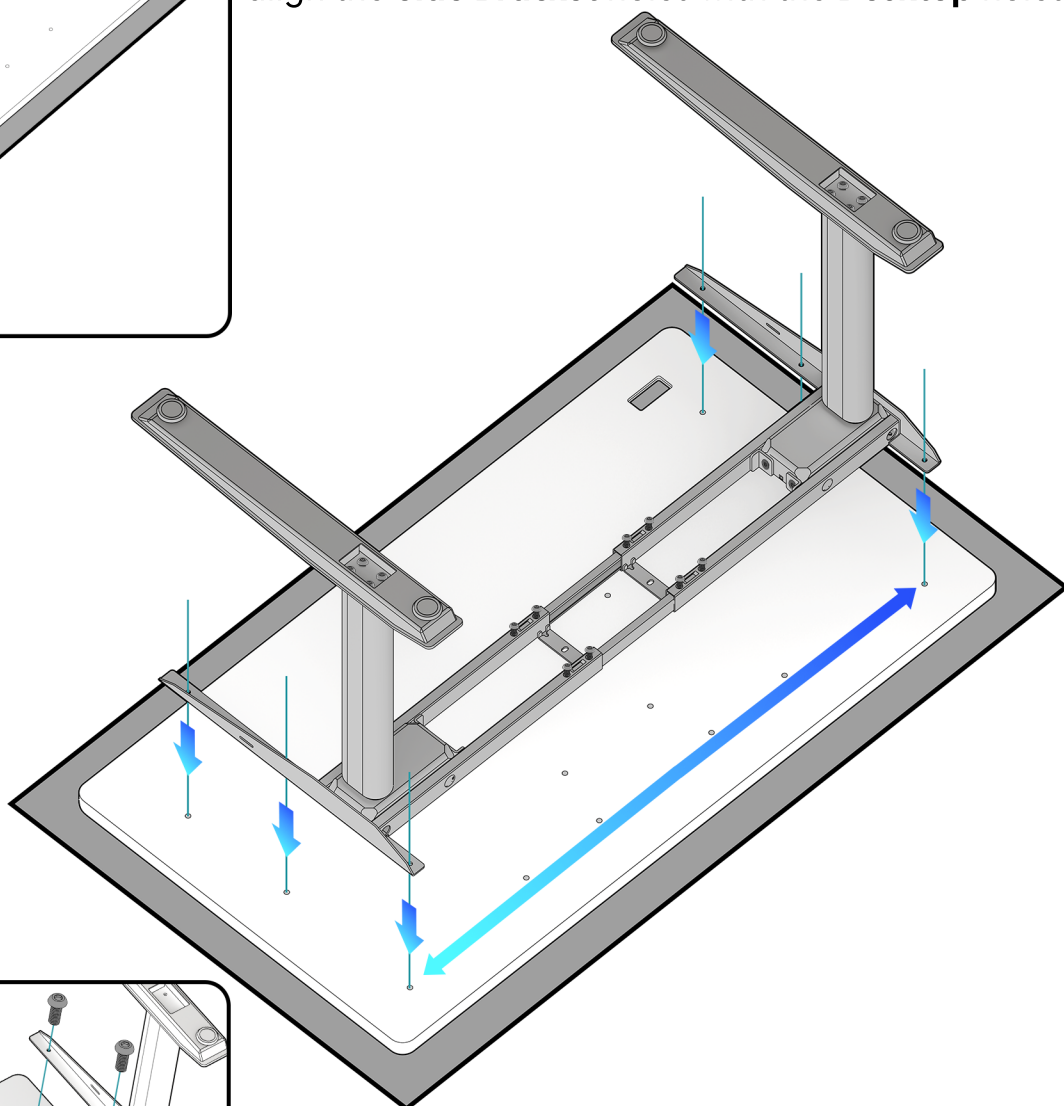



3. Insert 6 screws **B**

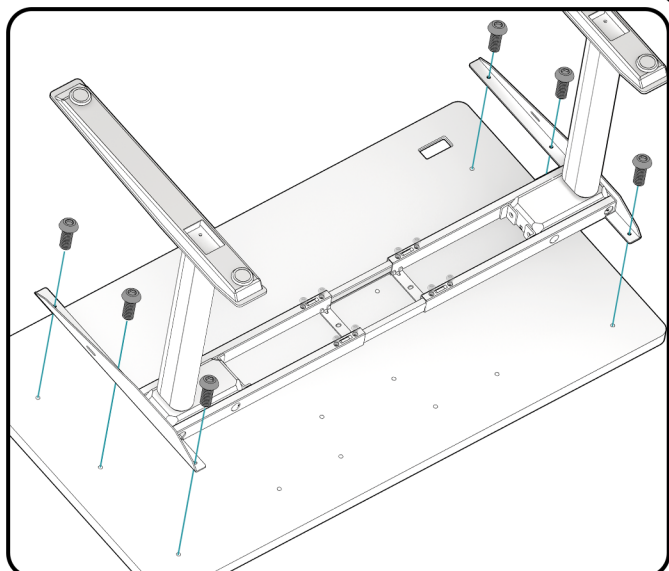


FRAME INSTALLATION

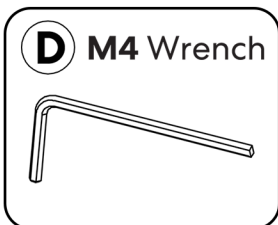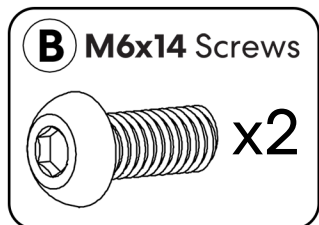





1. Insert 2 screws **B**

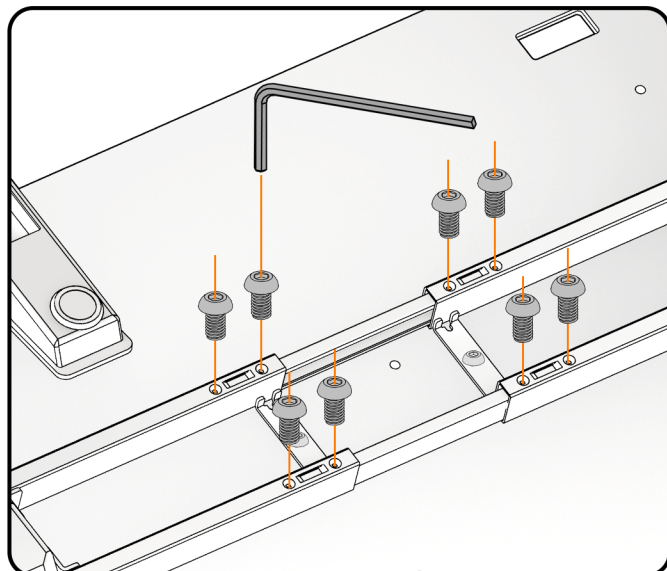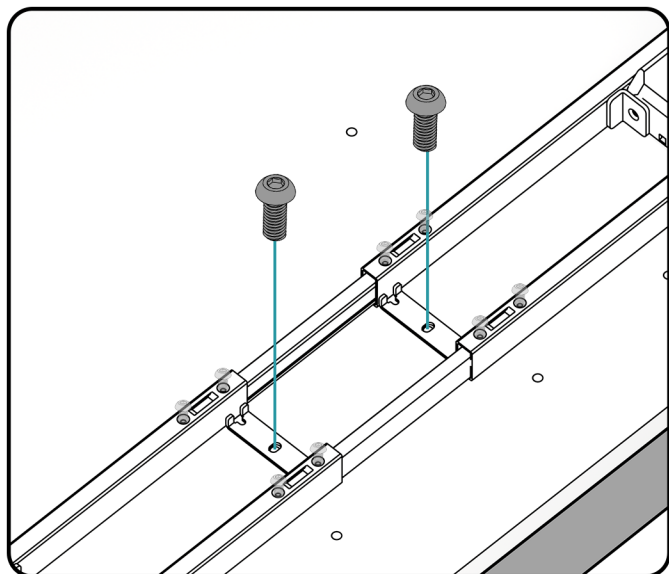


2. Tighten 8 screws **A**

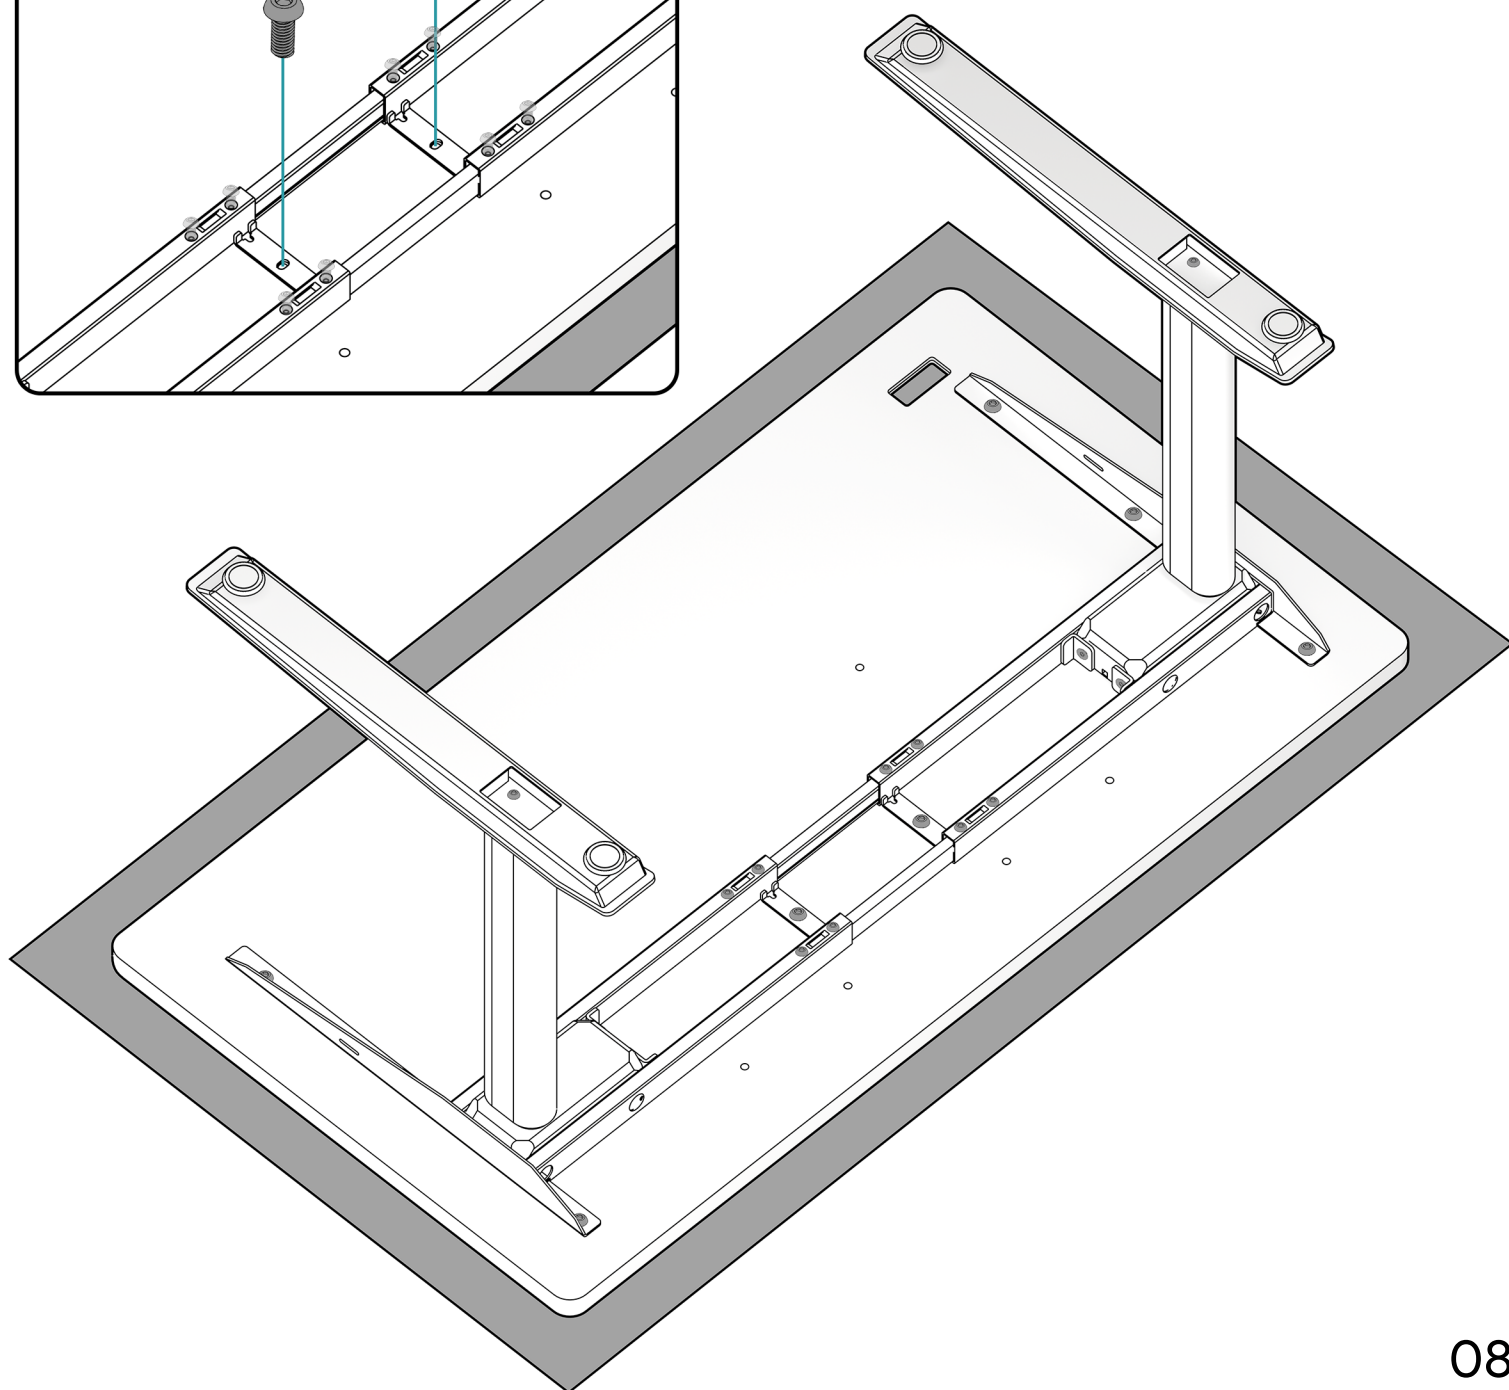


CABLE TRAY ASSEMBLY

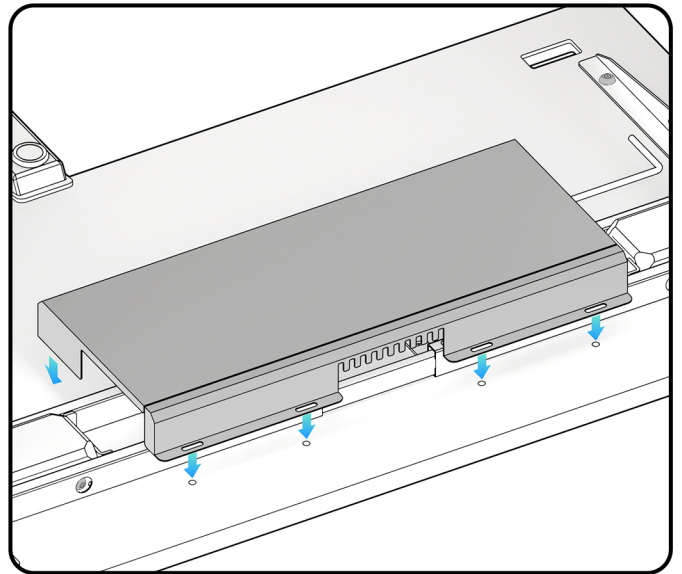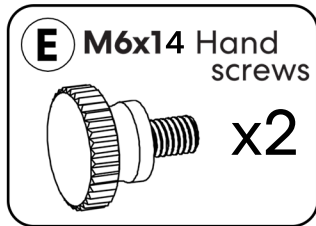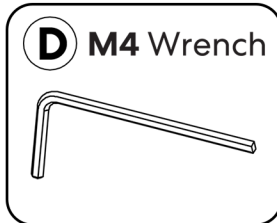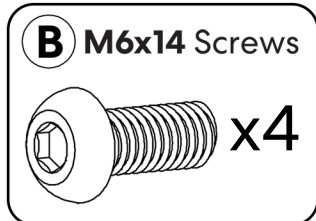


1. Assemble the **Cable Tray** to the **Desktop**

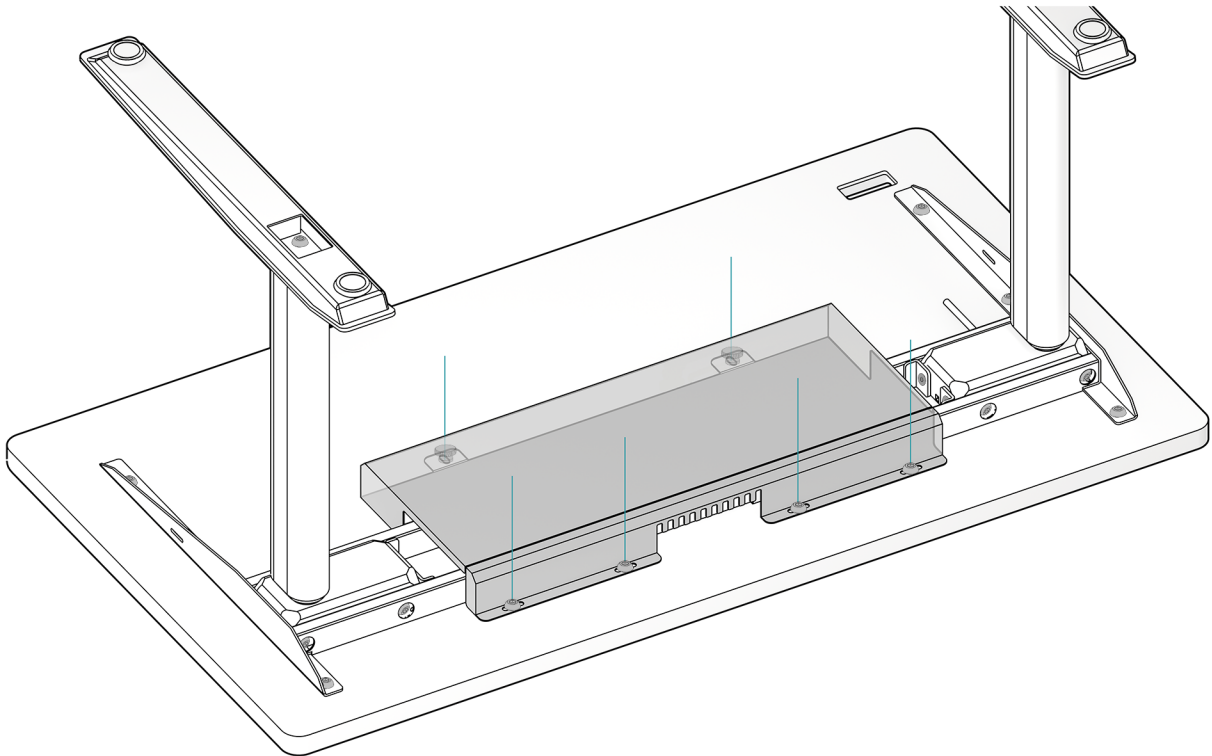

2. Insert 4 screws **B**

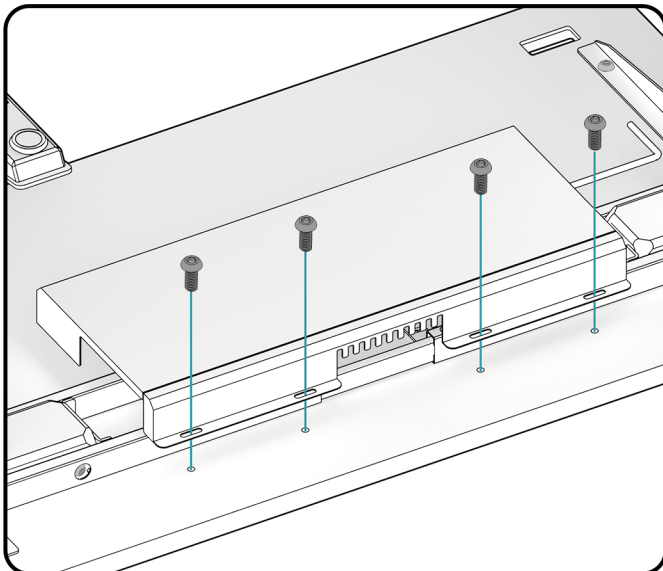



3. Insert 2 hand screws **E**

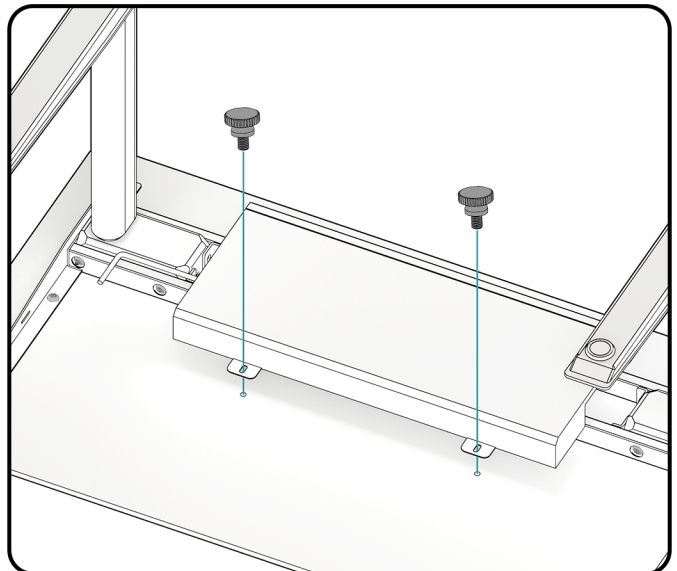




Note: Make sure all screws are tight, then flip upright. Keep the **Foam Pad** under the **Desktop** during flipping to prevent scratches.

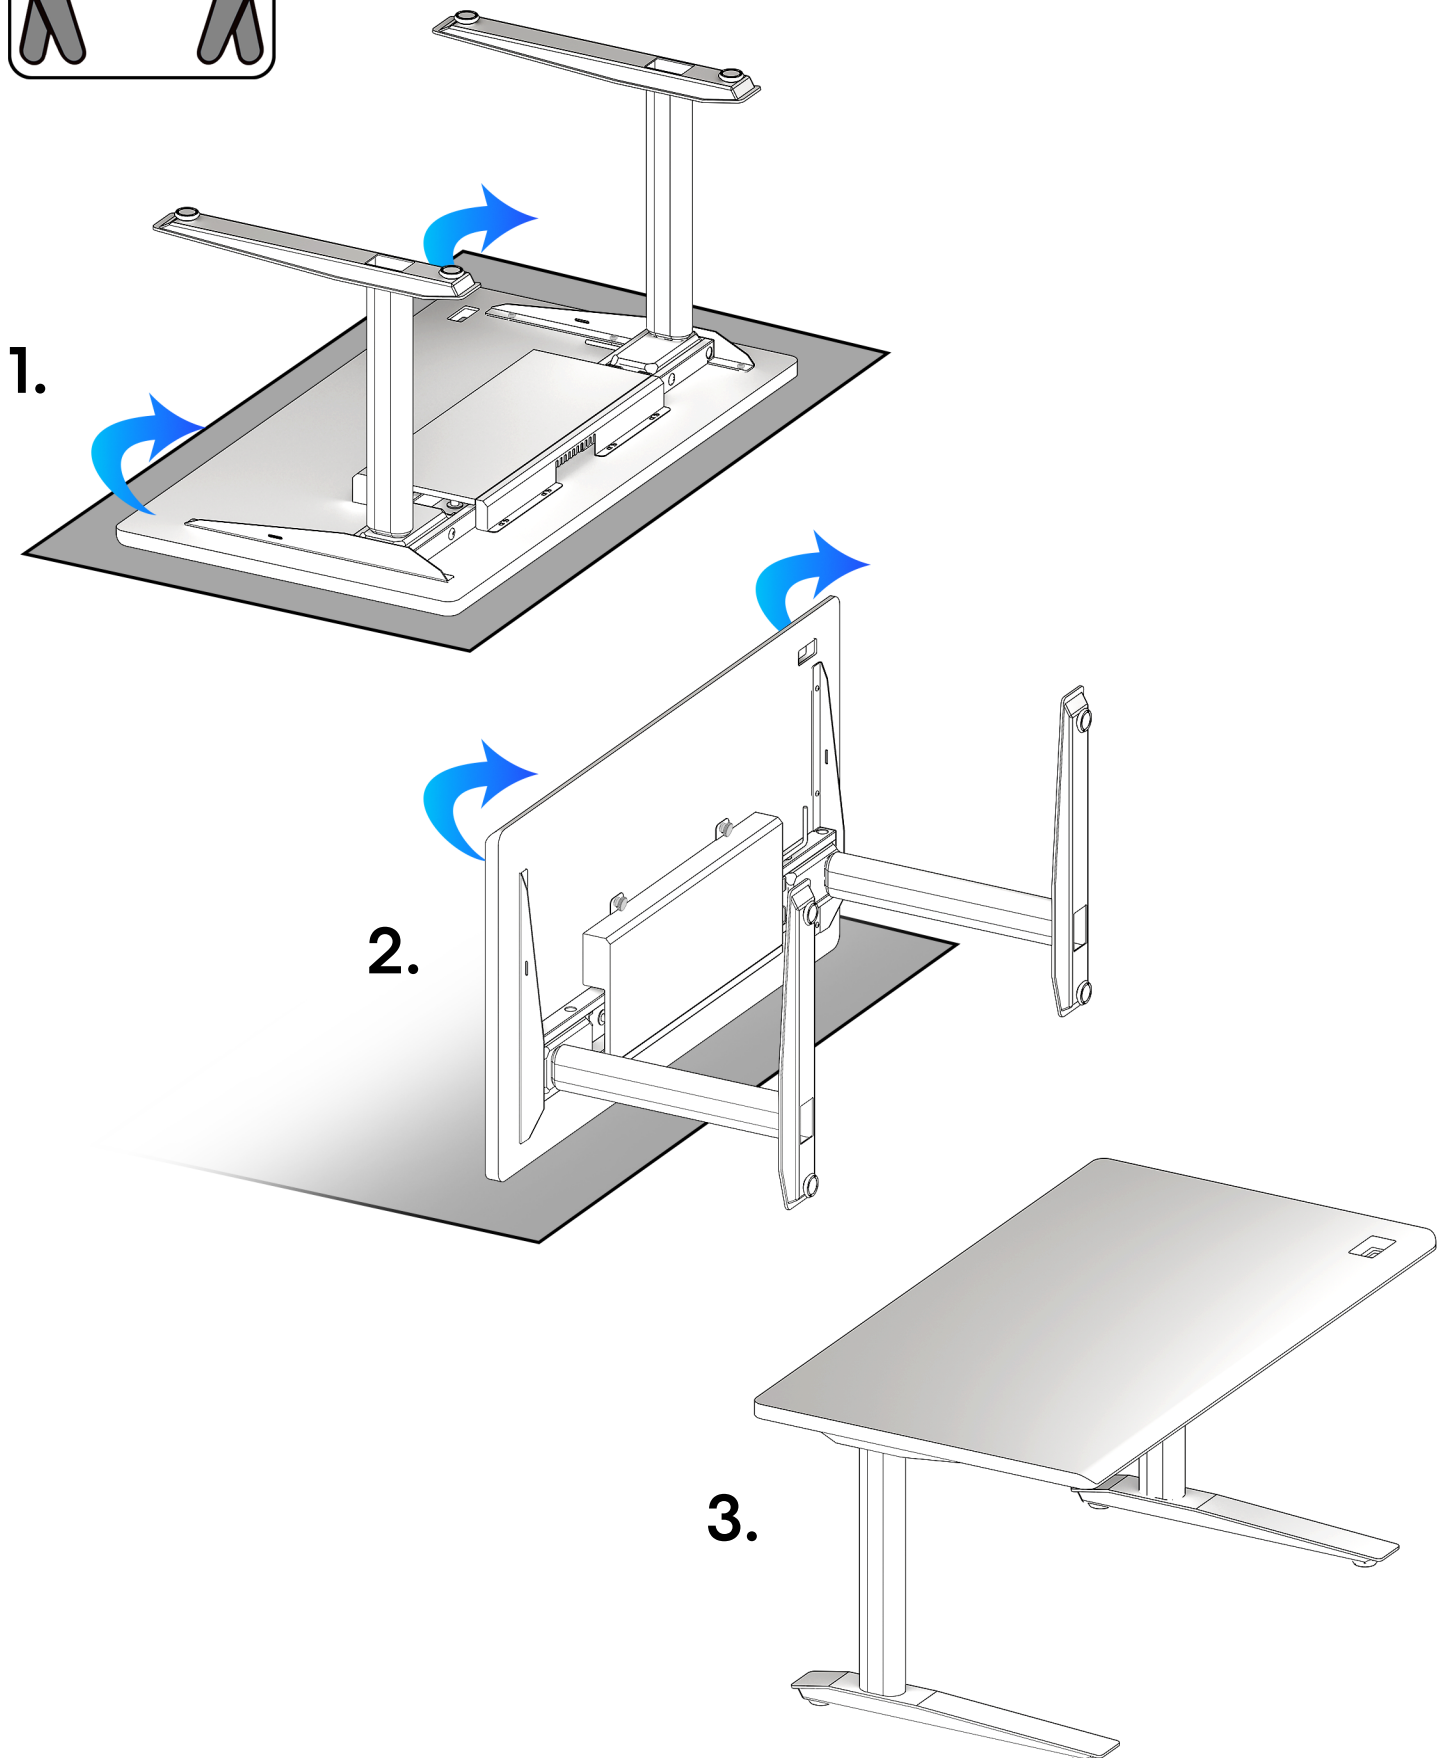

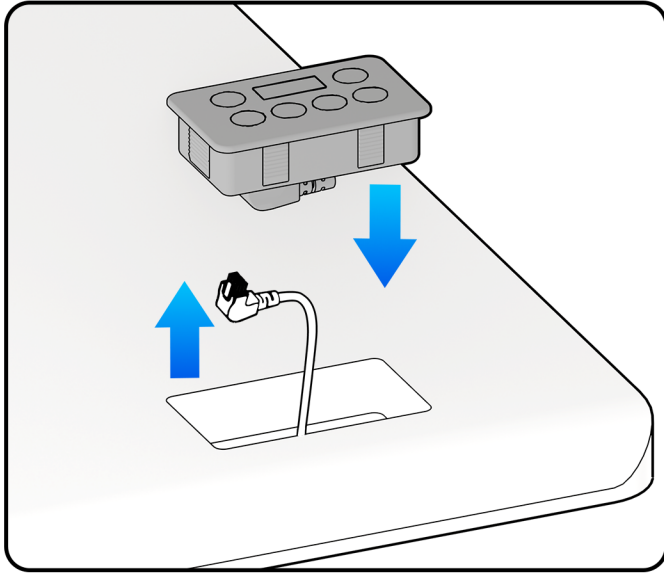


1. Route the **Keypad Cable** through the **Desktop**

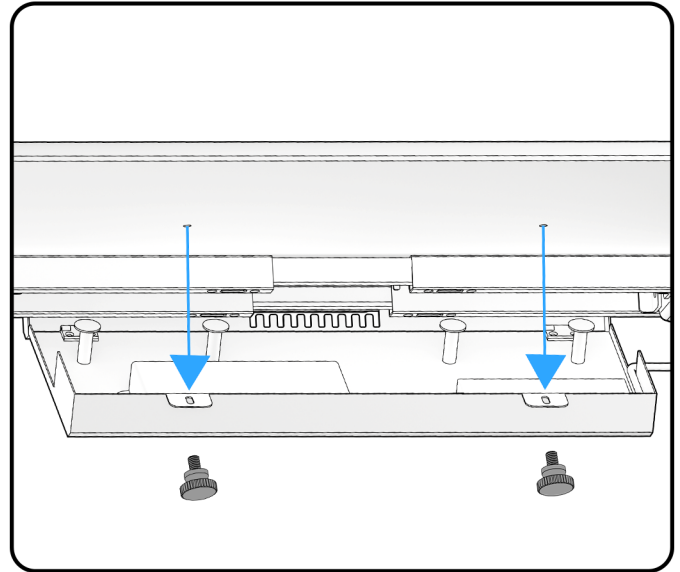




2. Turn 2 hand screws to release the **Cable Tray**

3. Plug **Motor & Keypad Cords** into the **Control Box** & secure them with the cable winders


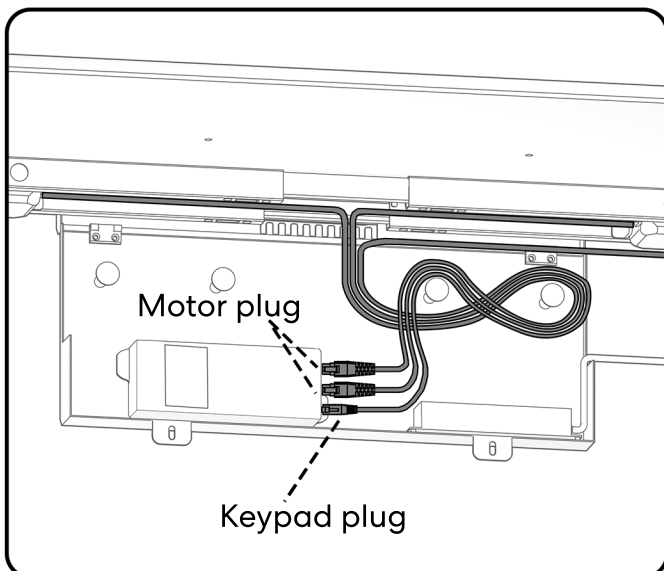


4. Plug the power cord into the **Outlet** & secure it with the winders

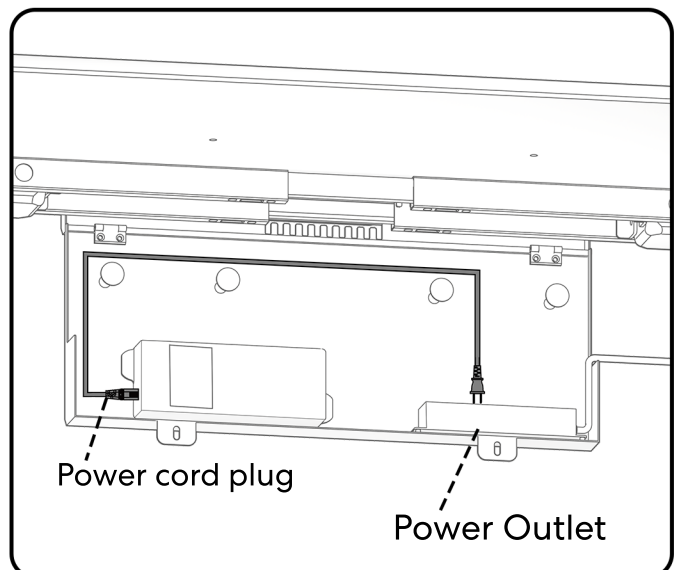

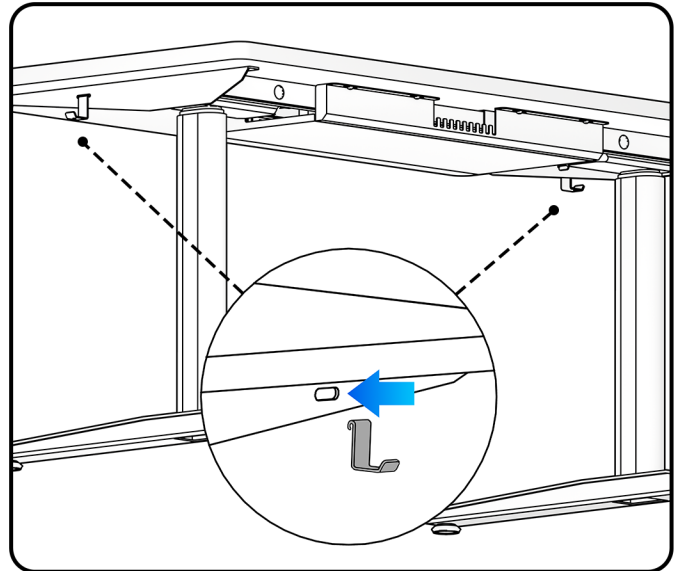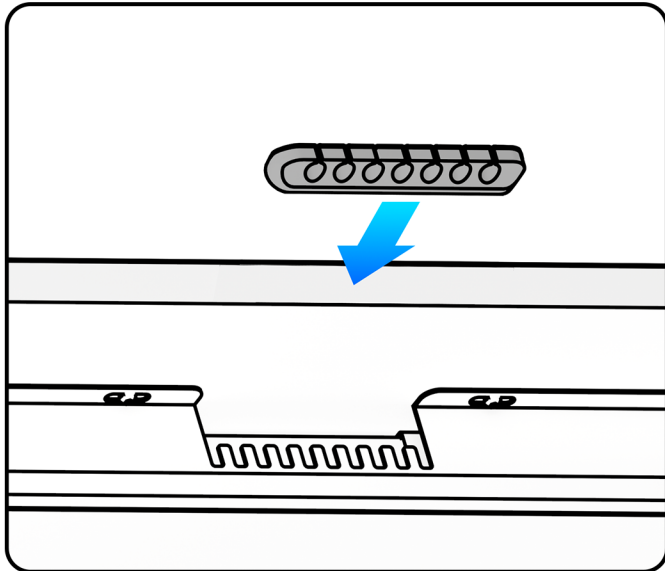

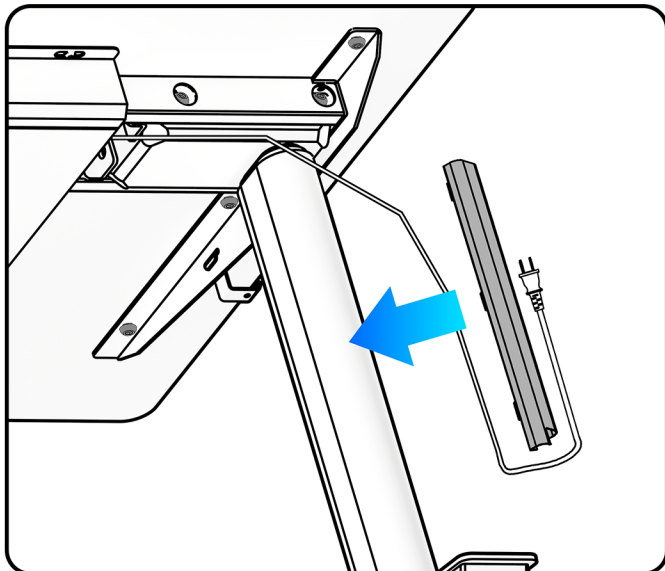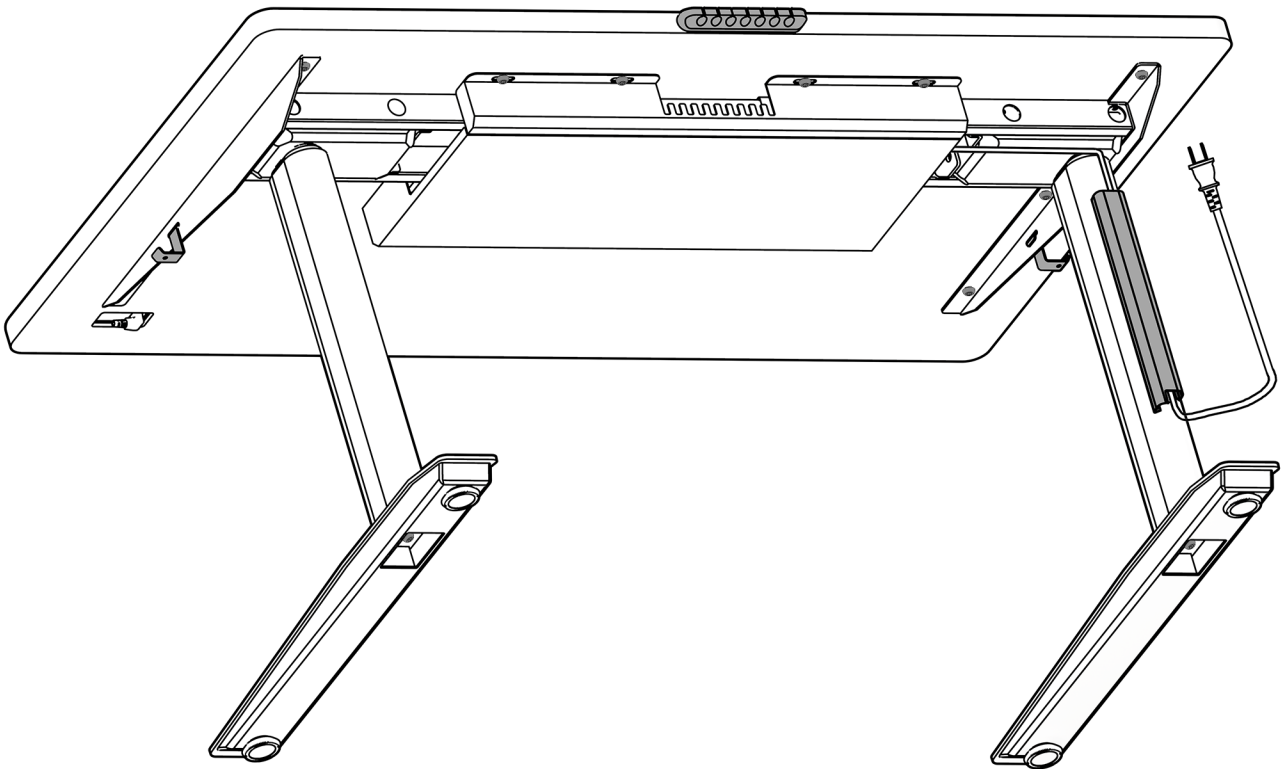


1. Attach the **Cable Organizer** to the **Desktop** & **Hooks** to the **Side Brackets**




2. Attach the **Upper Tube** to a **Column**





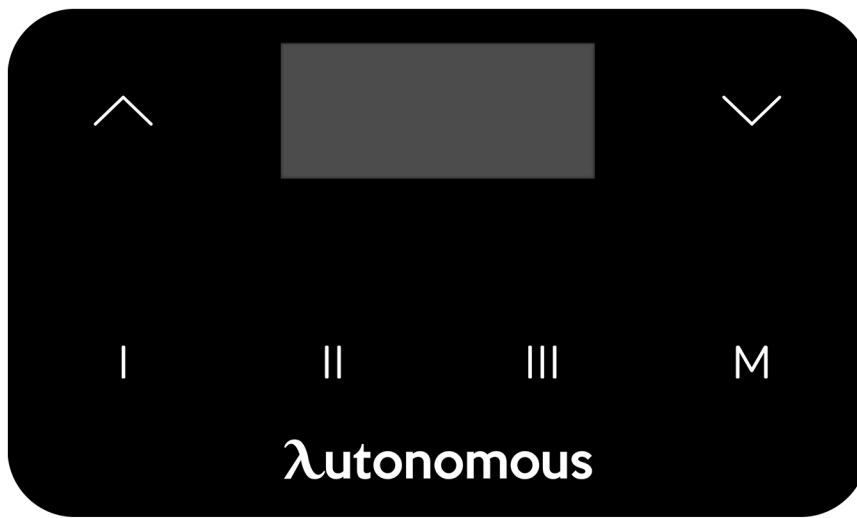

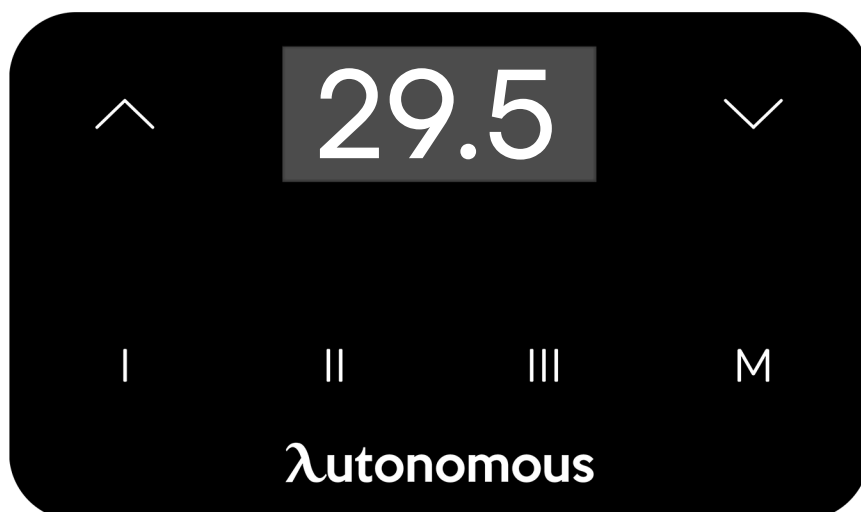


*Note: The **Power Cord** should be put through the **Upper Tube** before attaching*

1. Press & hold  +  for 3 seconds
2. Release when there is a "beep" sound to complete reset.




HEIGHT ADJUSTMENT & MEMORY SETUP







1. Press  or  to adjust the height
2. Press and hold  for 3 seconds until the display flashes,
then press the memory ,  or  to save
3. Press ,  or  to move the desk to the saved height

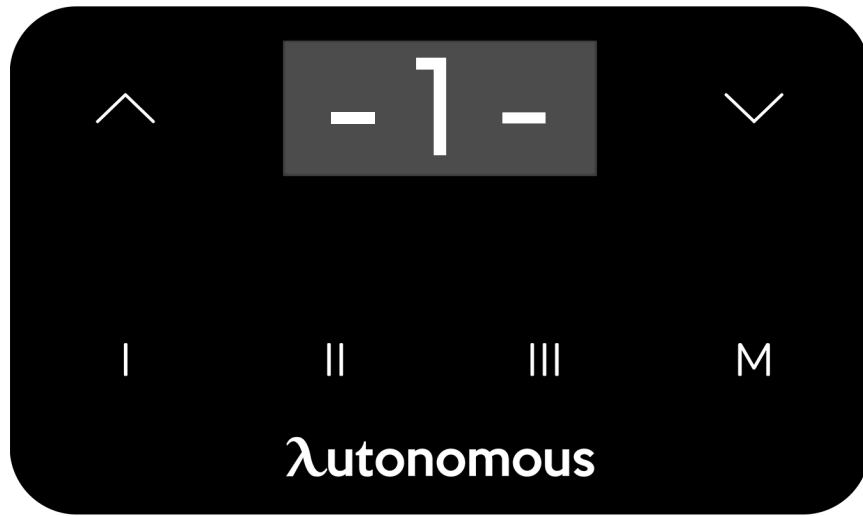ANTI-COLLISION LEVEL SETTINGS

The Anti-collision setting prevents damage and accidents by stopping the desk if it hits something, becomes uneven, or tilts.



1. Press & hold  +  for 5 seconds to enter setting mode
2. Press  or  to adjust sensitivity. For the smoothest operation, we recommend setting the anti-collision back to level 1.
3. Wait for 5 seconds to save

Any questions?

Chat with our Customer Support team at
www.autonomous.ai/help-center

We're here to help!