


Autonomous

Autonomous Desk 2

Assembly Instructions

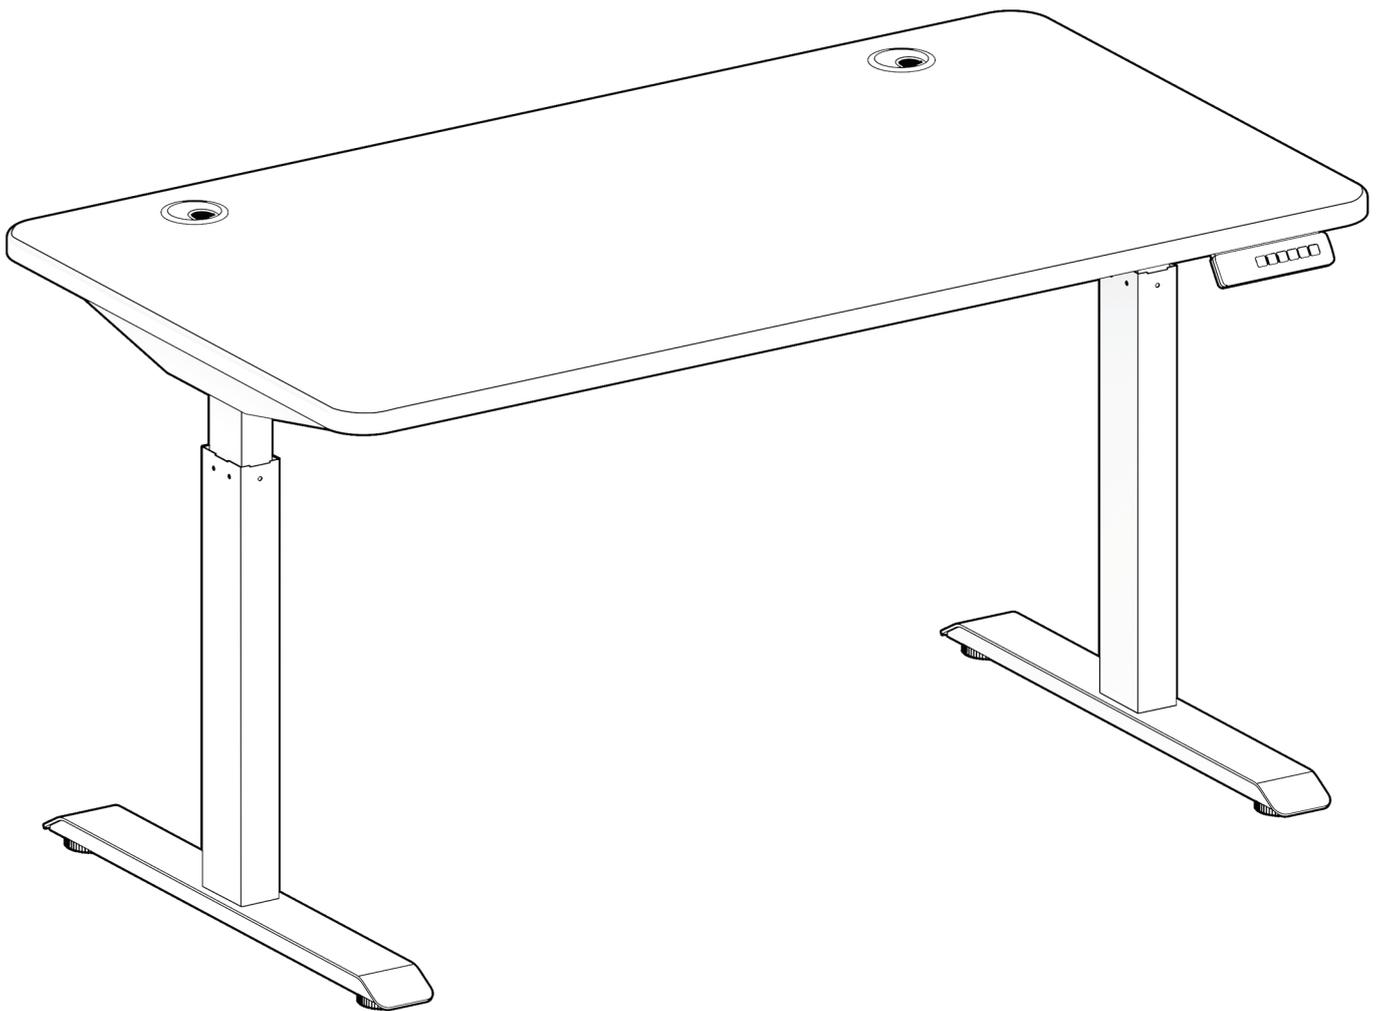


Assembly Time

20-30 min

Number of People

2

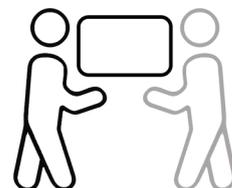

INSTRUCTION OUTLINE

CAUTION 1

INCLUDED PARTS 2

ASSEMBLY GUIDE

COLUMN ASSEMBLY 3

SIDE BRACKET & FOOT ASSEMBLY 4

FRAME INSTALLATION 5

CONTROL BOX & KEYPAD ASSEMBLY 6

CABLE MANAGEMENT 7

DESK FLIPPING 8

SETUP KEYPAD

RESET INSTRUCTION 9

USER MANUAL 10




READ AND FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY BEFORE USE.



Keep kids and pets away during use.




Unplug during storms or long unused periods.

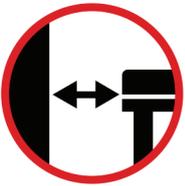

Keep desktop away from walls for ventilation.




Keep the under-desk area (20"+) obstacle-free during use.

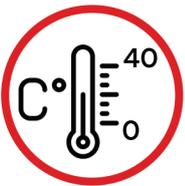

Keep the desk in 0-40°C, away from dust and corrosives.




Do not disassemble without permission.

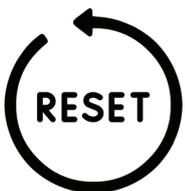


Manually reset after first use or power outage.

INCLUDED PARTS


Desktop

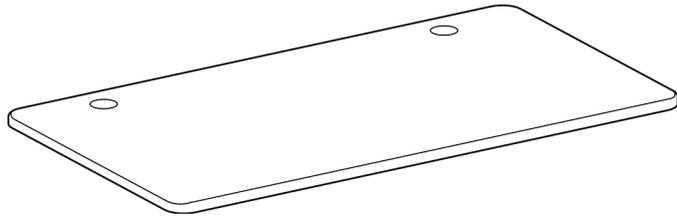

Control Box

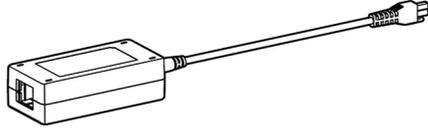


Keypad

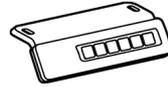

Power Cord




Connecting Cable

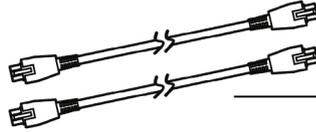


x 2

Frame

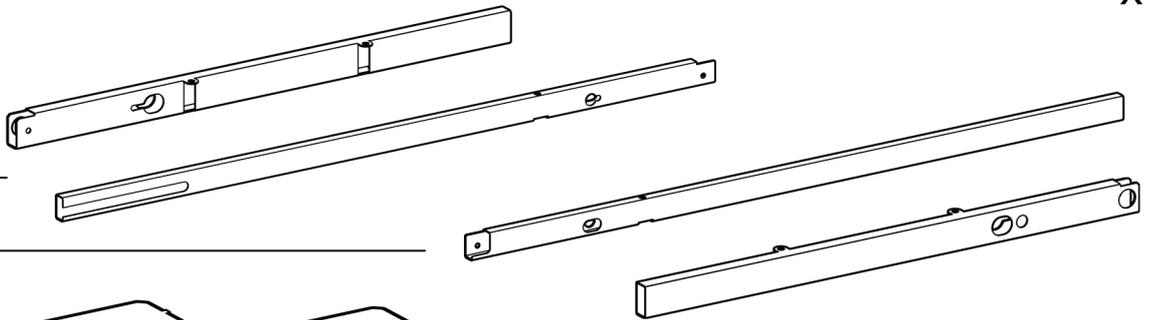


Column

x 2

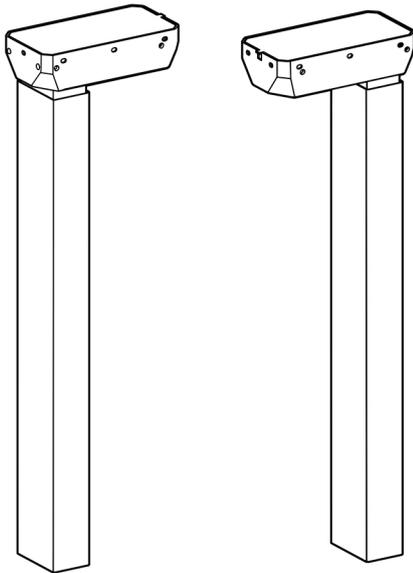


Side Brackets

x 2

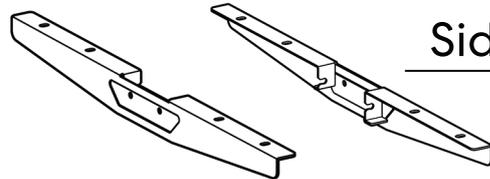

Foot

x 2

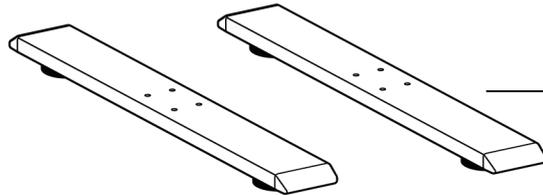

A 3mm
Wrench



x 1

B 4mm
Wrench




x 1

C M6*10



x 12

D M6*35

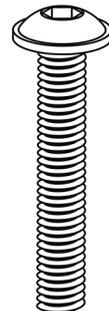

x 8

E1 ST5*16




x 12

E2 ST3.5*16




x 2

F Velcro

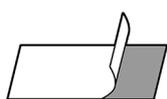

x 1

G Zip Ties

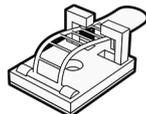

x 10

H



x 4

C M6*10 Screws





x 8


B 4mm Wrench




1. Slide the two **small rails** into the two **large rails**

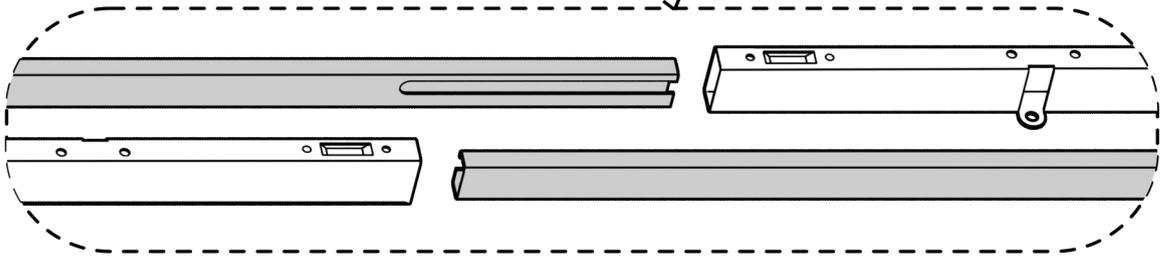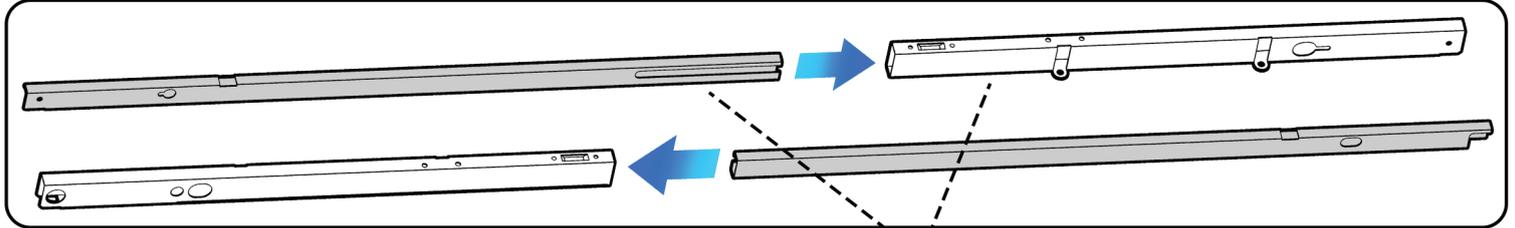

Note: Ensure the rails are oriented exactly as shown above.





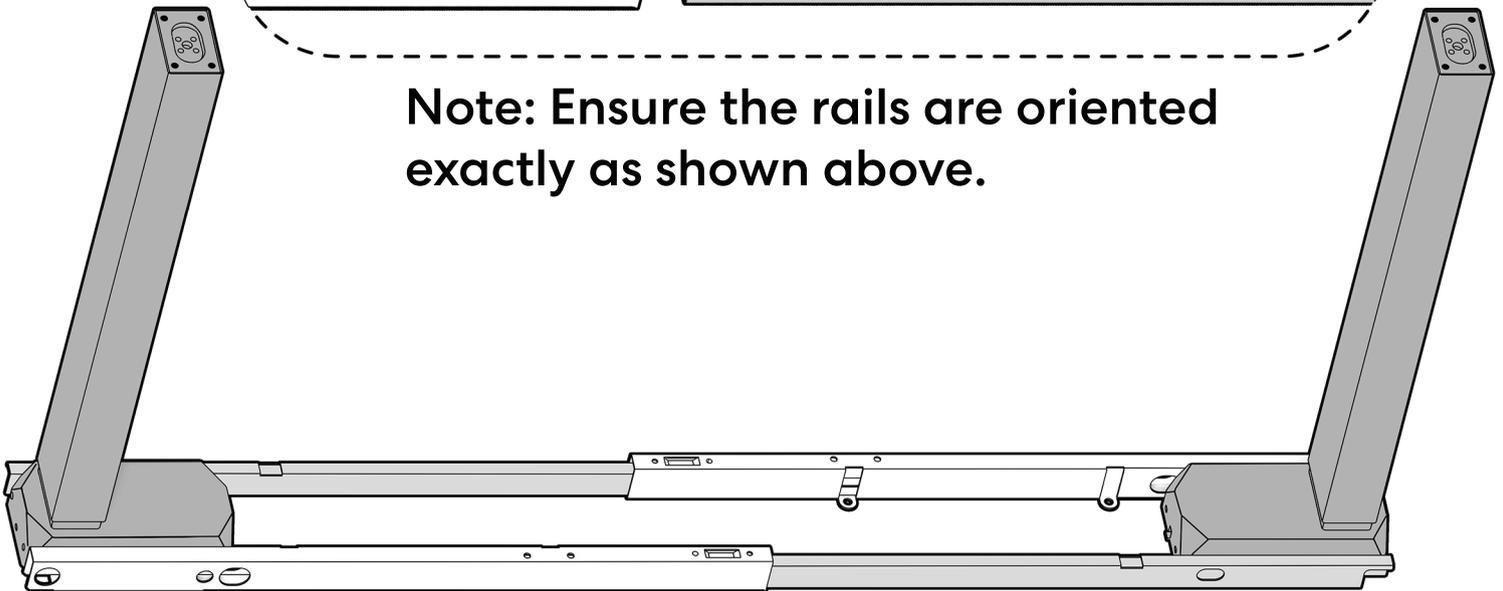


2. Attach 2 **Columns** to the **Frame** using 8 screws **C**

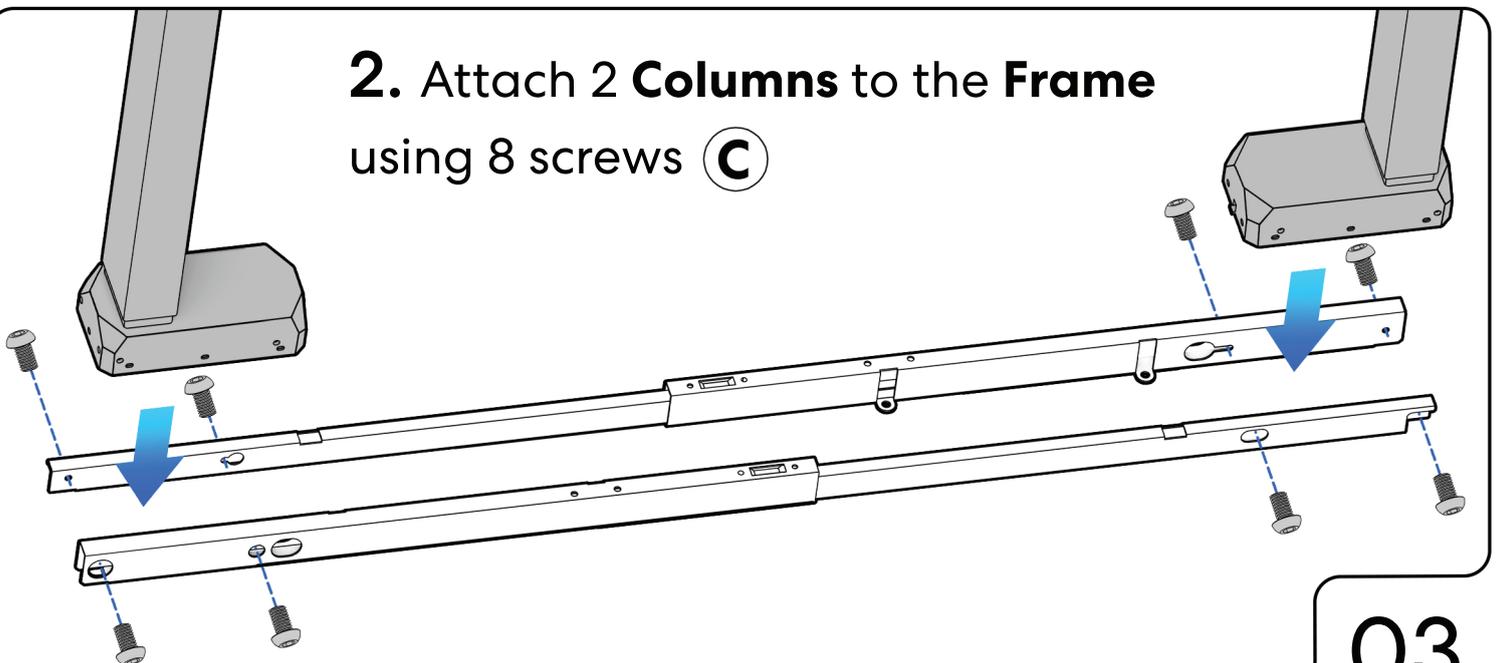


SIDE BRACKET & FOOT ASSEMBLY

1. Attach **Side Brackets** to the **Frame** using 4 screws (C)

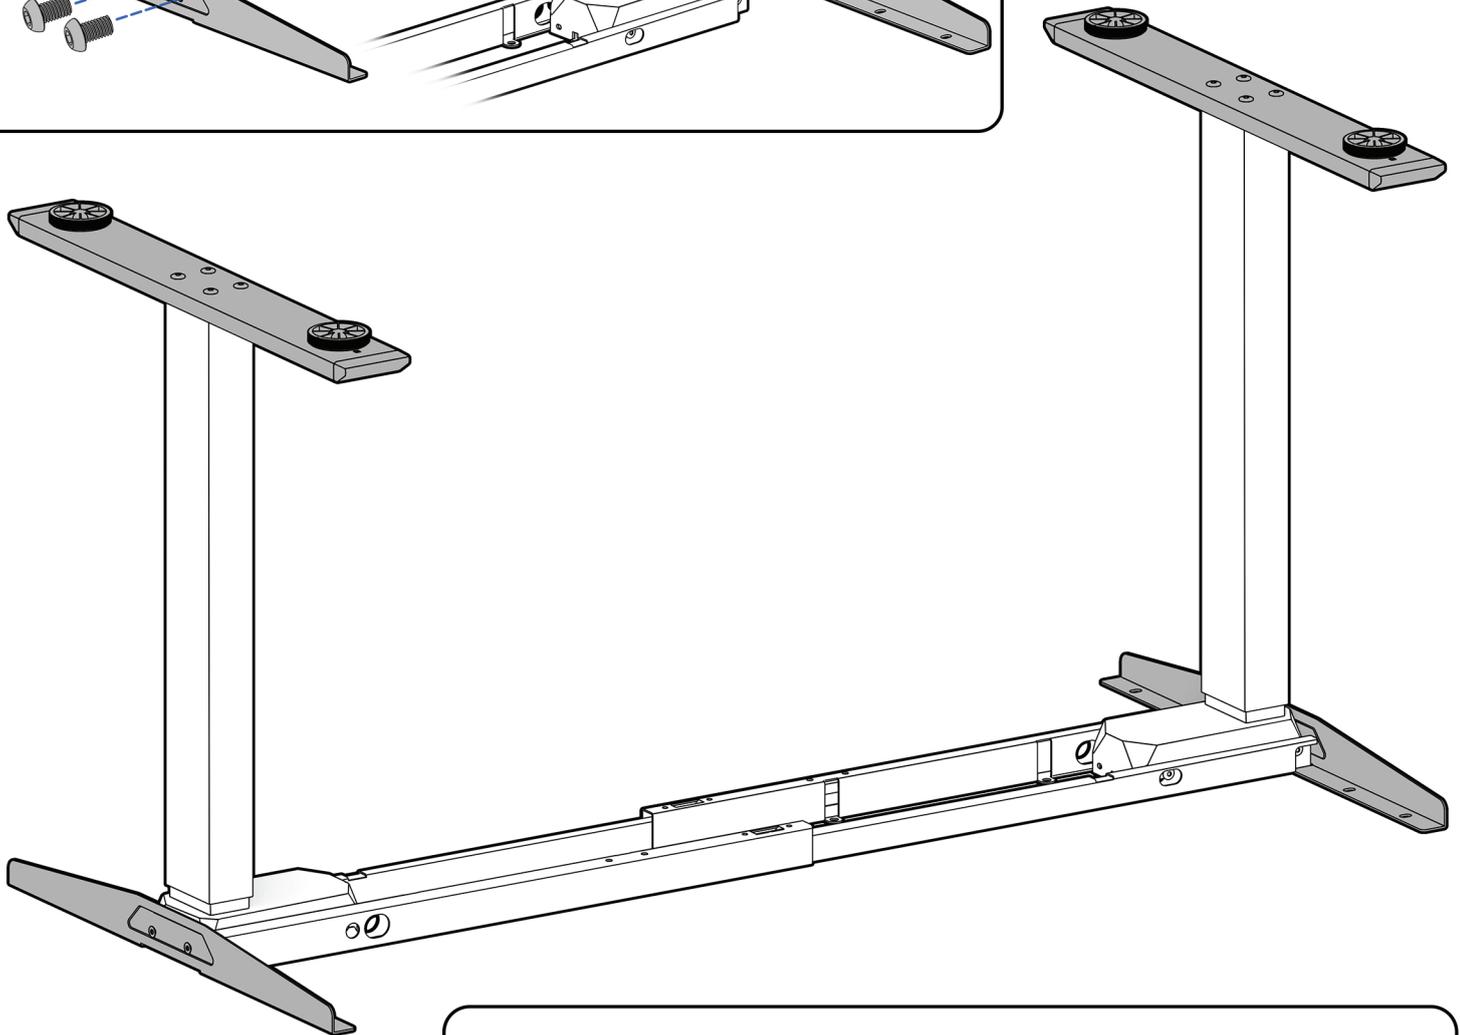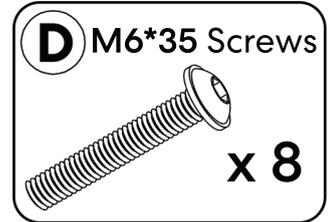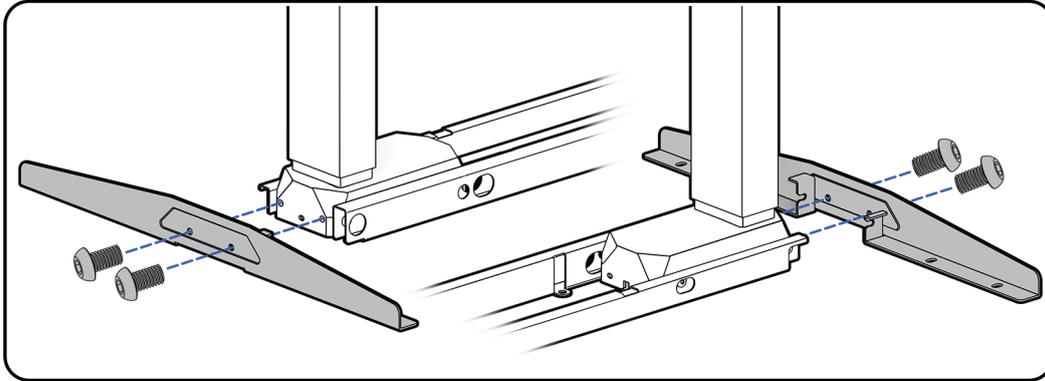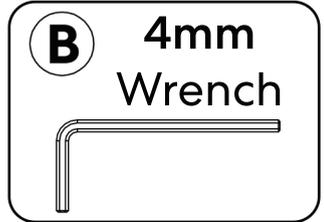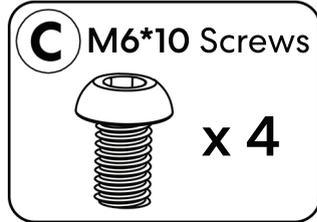


2. Attach **Feet** to the **Columns** using 8 screws (D)

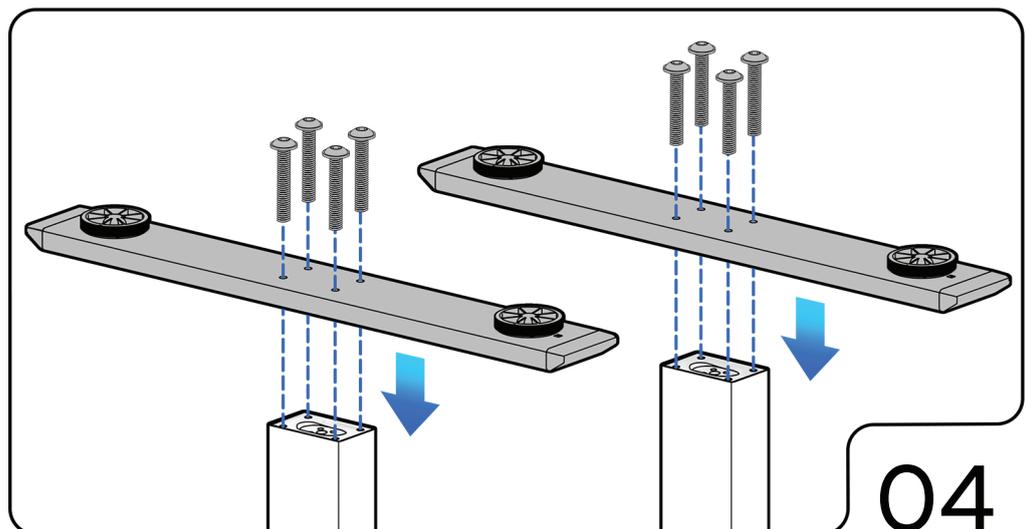


FRAME INSTALLATION


Note: Place a **Foam Pad** under the **Desktop** to prevent scratches when installing

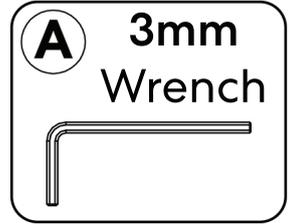

1. Position the **Frame** on the **Desktop**, align the **Side Bracket & Frame holes** with **Desktop holes**

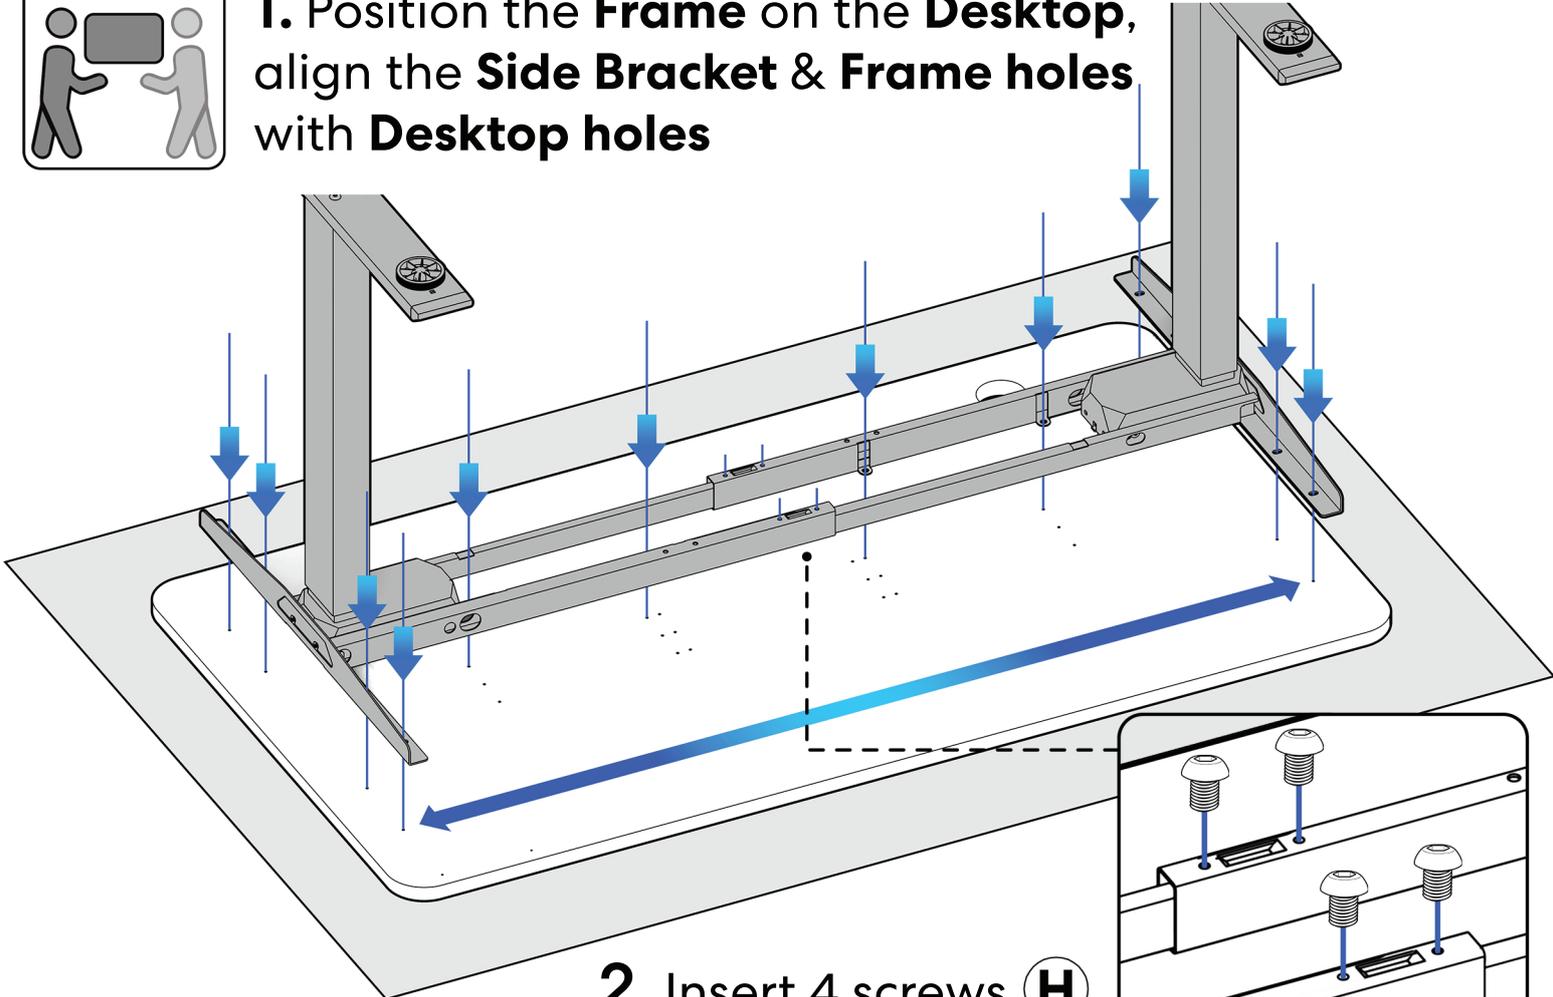


2. Insert 4 screws **H**

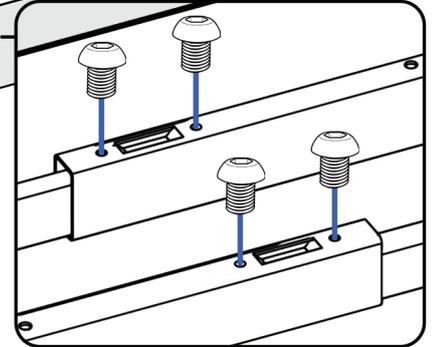


3. Insert 12 screws **E1**

Note: Please ensure a **Screwdriver**(not included) is available to tighten the screws

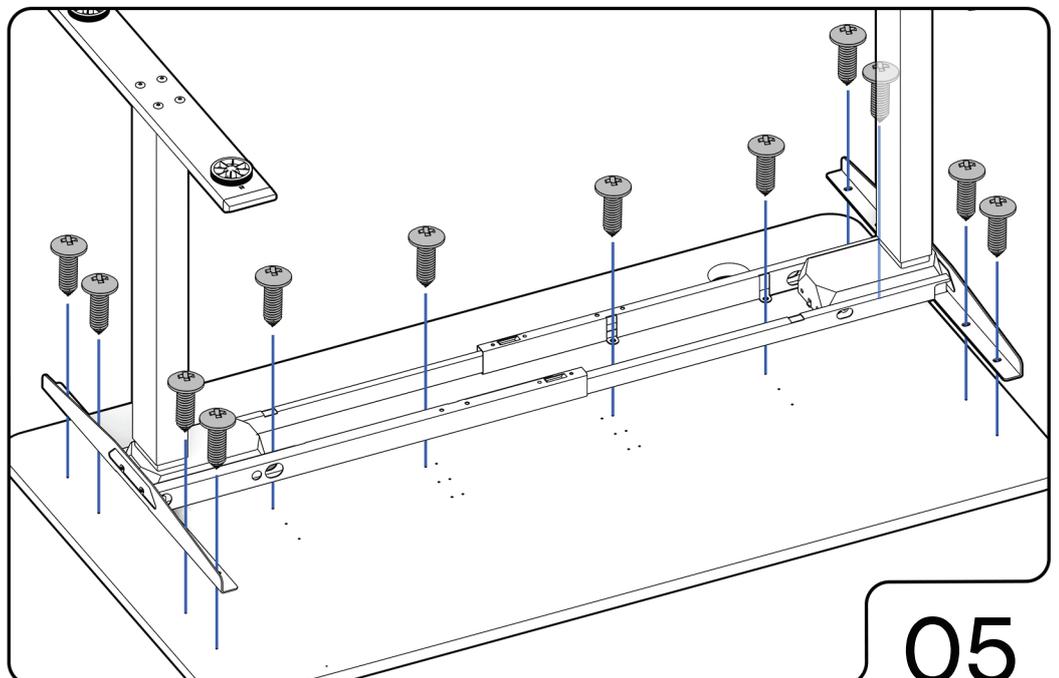


CONTROL BOX & KEYPAD ASSEMBLY

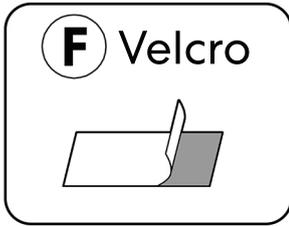


Note:

Please ensure a **Screwdriver** (not included) is available to tighten the screws

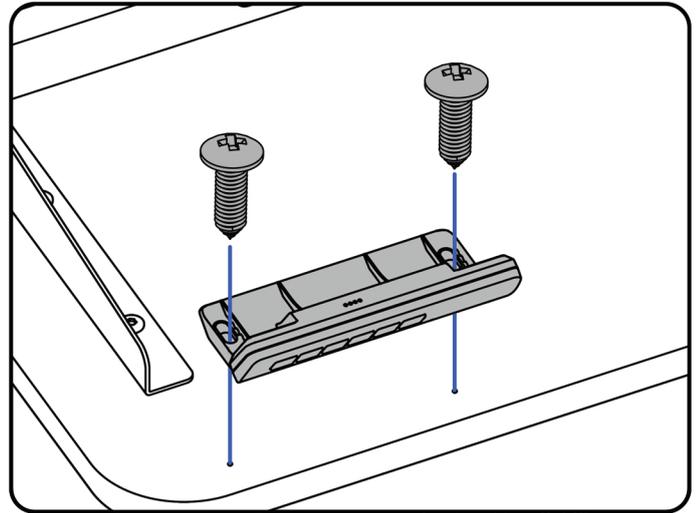


1. Attach Keypad to the Desktop using 2 screws (E2)

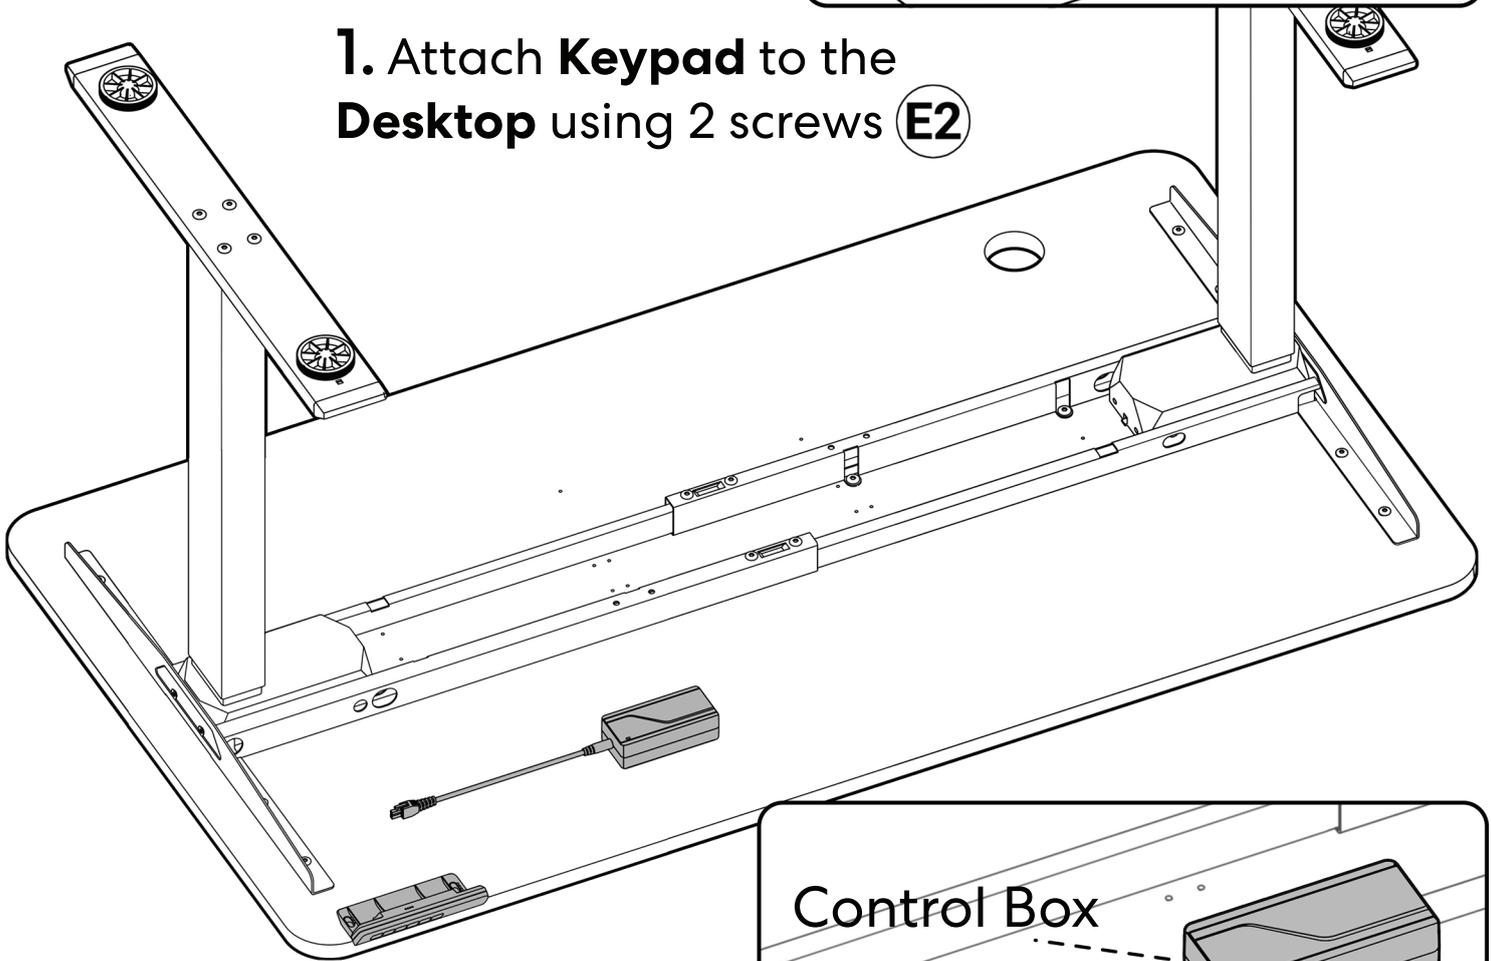


2. Mount the Control Box to the Desktop using Velcro strips (F)


Note: the length of the **Control Box Cable** is limited (8") and should not be too far from the **Keypad**

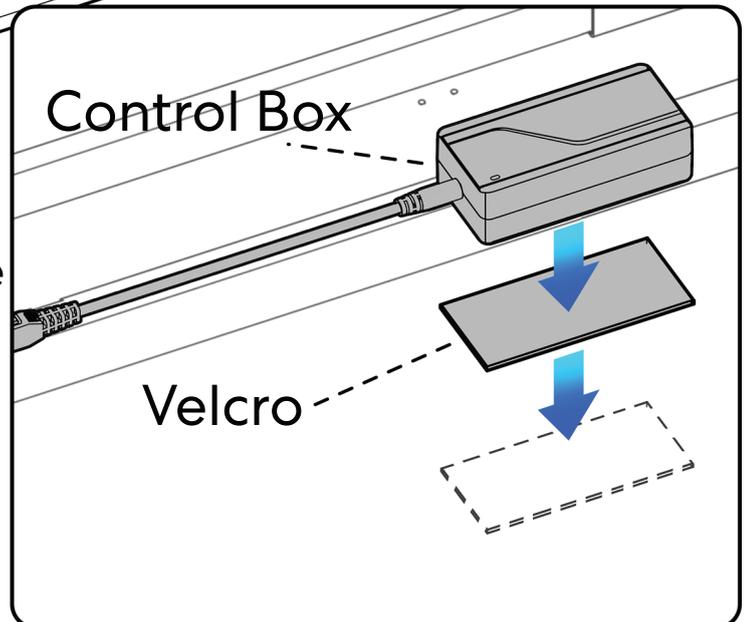



CABLE MANAGEMENT

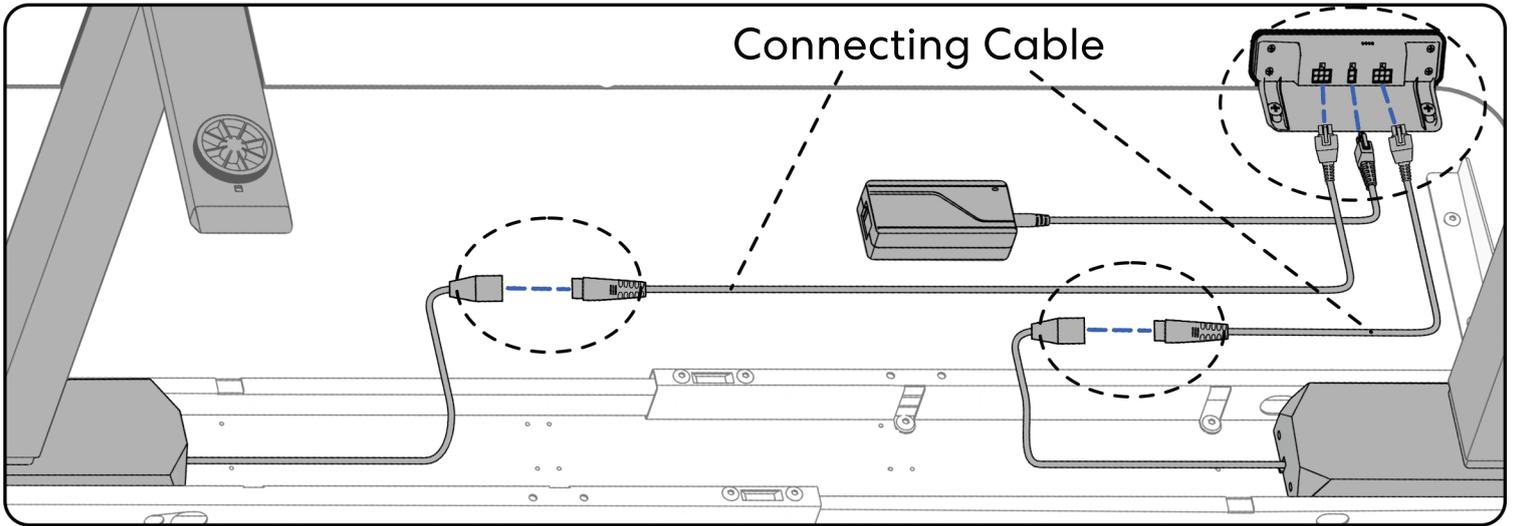

1. Plug the Control Box into the Keypad. Plug 2 Connecting Cables into the Columns and Keypad.

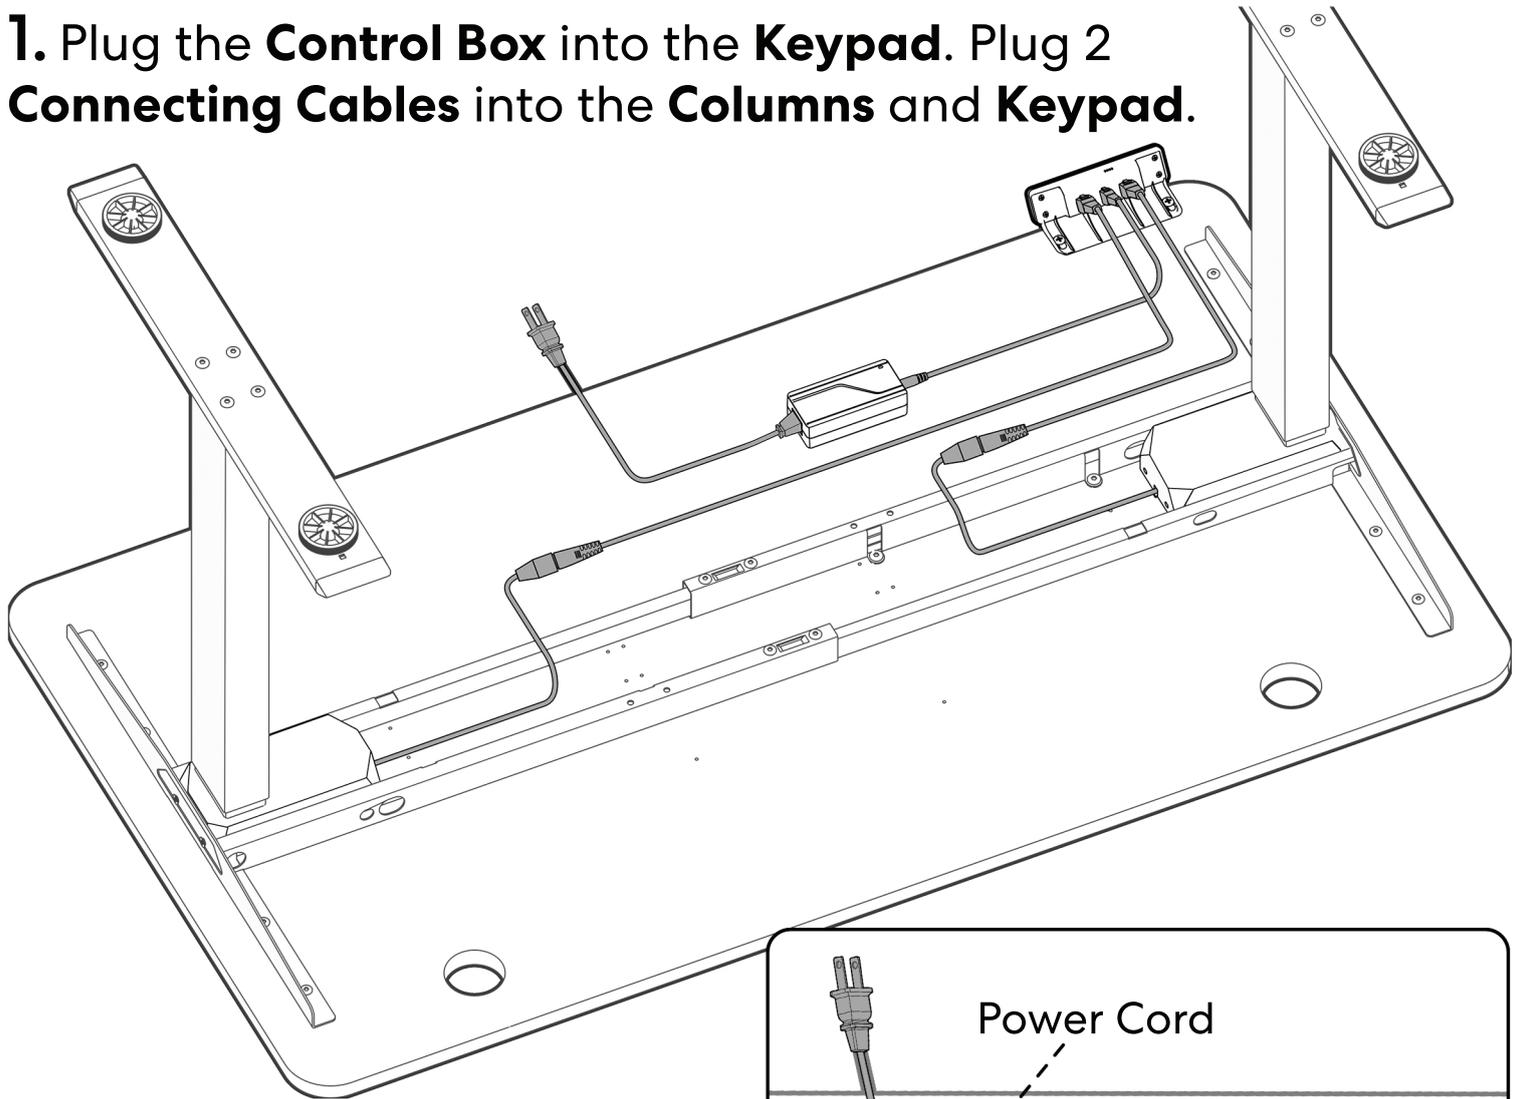




2. Plug Power Cord into the Control Box

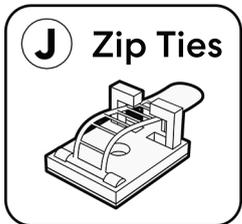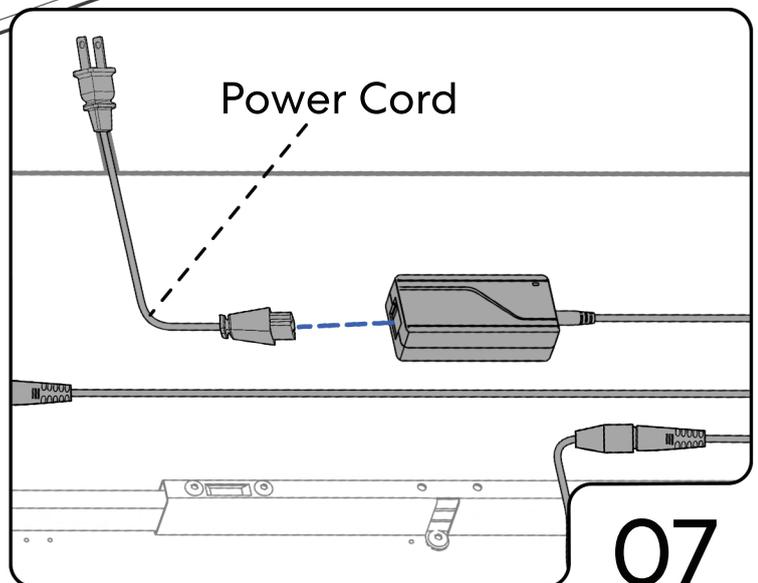


Note: Use Zip Ties to bundle the cables neatly




Note: Make sure all screws are tight, then flip upright. Keep the **Foam Pad** under the **Desktop** during flipping to prevent scratches.

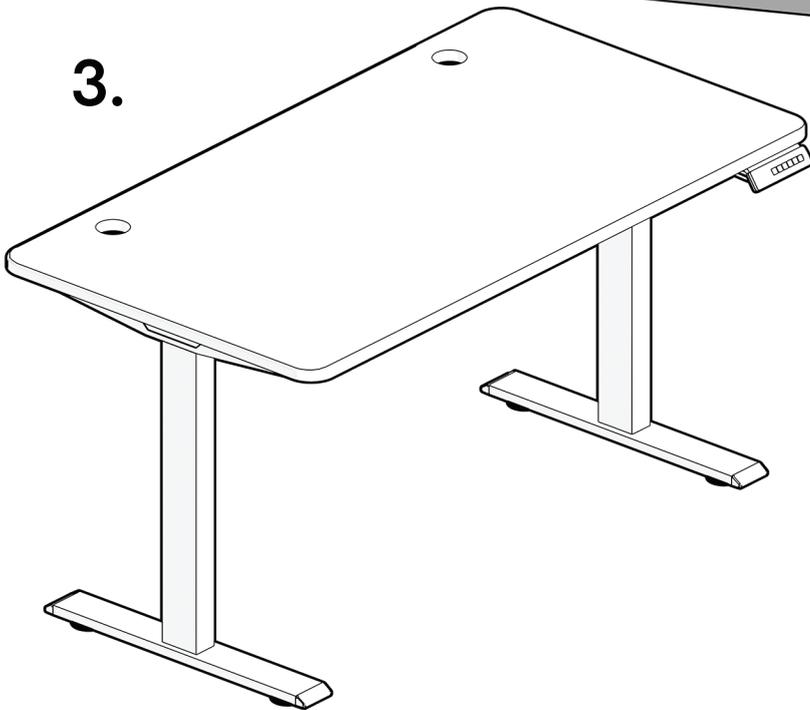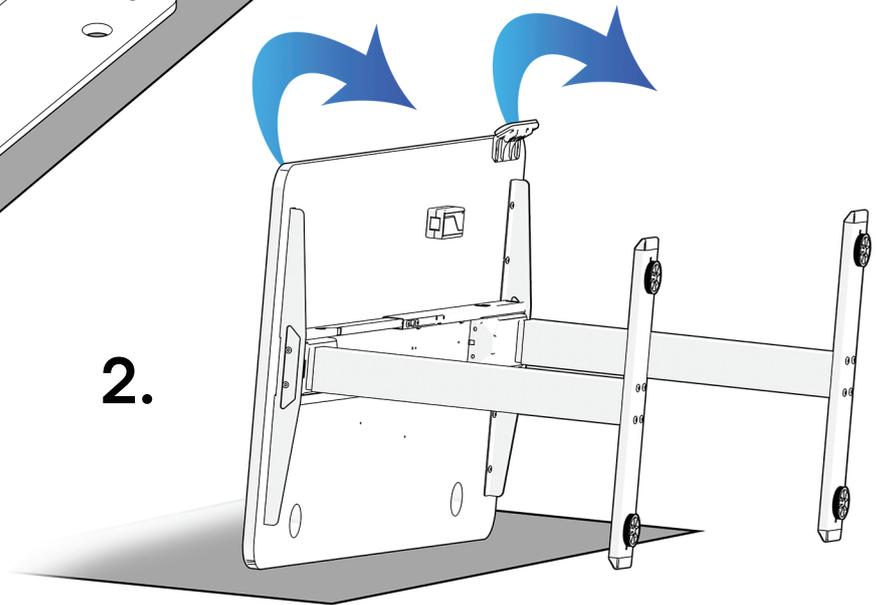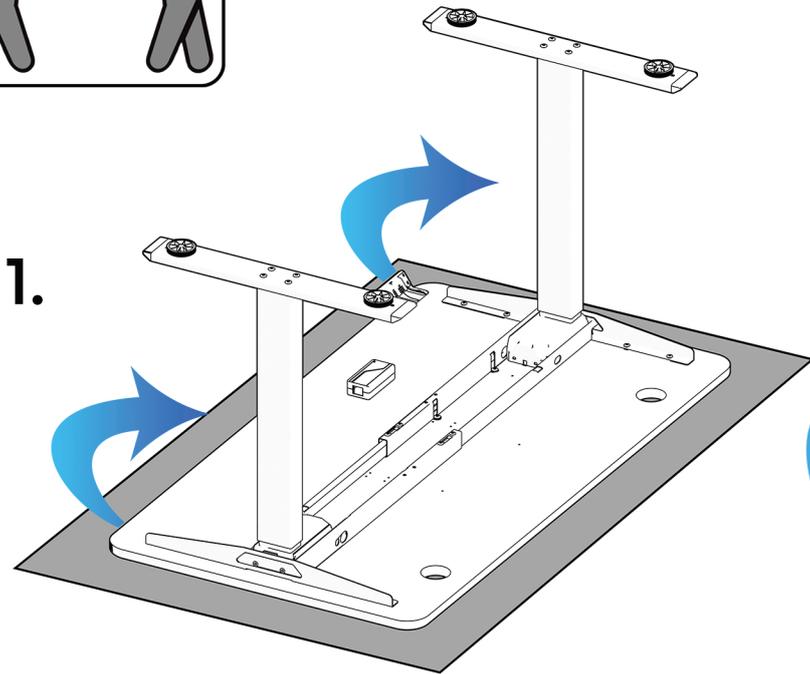

4. Plug the **Power Cord** into the **Outlet**

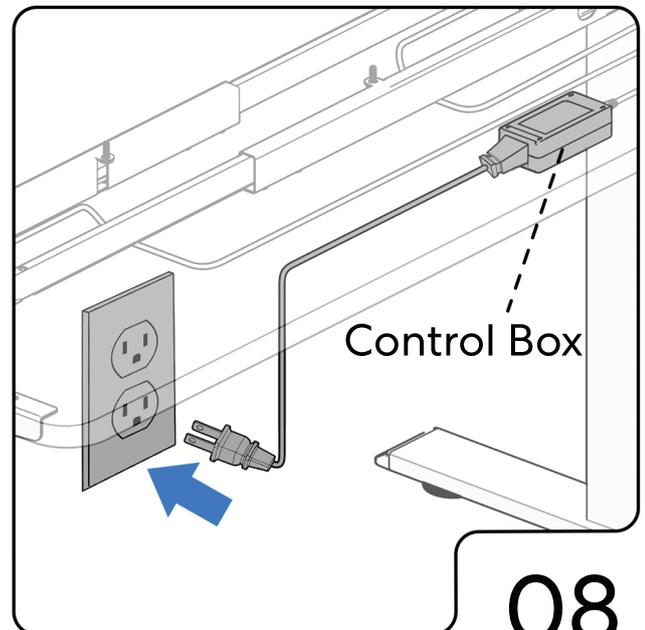

Note: Clear obstacles from the desk's path and ensure Power Cord are long enough for height adjustment.

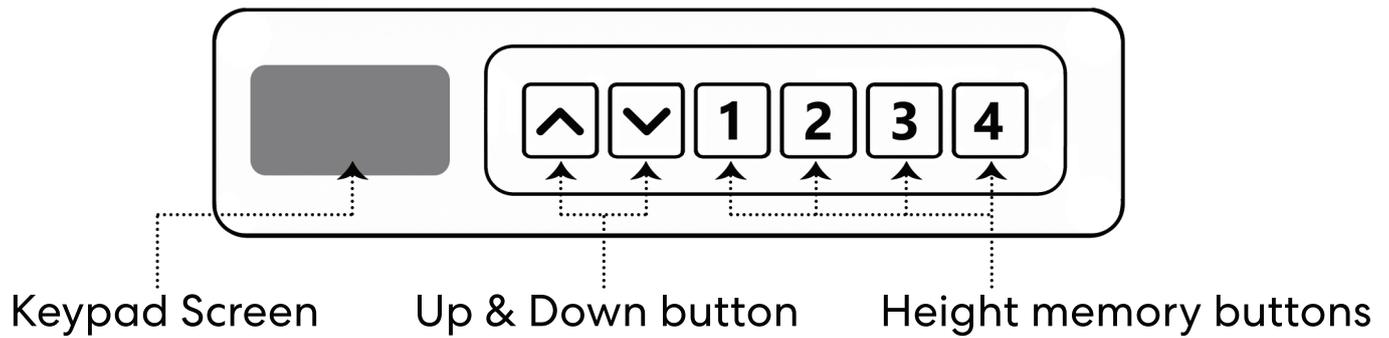

IMPORTANT: You must **RESET** the desk prior to use

- 1.** Press & hold  until the desktop is in the lowest position, then release the button.
- 2.** Press  again for 5 seconds until the Keypad Screen display “RST”, release the button.
- 3.** Press & hold  until the Keypad Screen displays the number.

1. Adjust height:

Press  or  to adjust the height of the desk.

2. Save a height:

- ① Press  or  until the desk reaches the preferred height.
- ② Press & hold , ,  or  for 3 seconds until the digital numbers flash. The current height is successfully saved.

3. Reset the desk

- ① Unplug the Power Cord from the Outlet. Unplug the Cables from the Keypad. Reconnect all cables to their respective ports.
- ② Press & hold  until the desk is in the lowest position, then release the button.
- ③ Press & hold  again for 5 seconds until the Keypad Screen displays “RST”, then release the button.
- ④ Press & hold  until the Keypad Screen displays the number.

DESK PLACEMENT

When moving the desk. DO NOT lift the desk by the desk top alone, support both the frame and the desk top equally. Otherwise, it can stress the fasteners connecting the desk frame to the desktop.

Lower the desk top completely before moving it.

Choose a placement for the desk that's a safe distance from window frames, radiators, furniture, etc, so that people do not get stuck or trapped by the desk and nothing obstructs the desk from rising or lowering.

Ensure the distance between the desk and the power source. Connect the desk's power cord to a 110V-240v outlet to get it ready to use.

Do not place any objects underneath the desk that are taller than 25”.

Any questions?

Chat with our Customer Support team at
www.autonomous.ai/help-center

We're here to help!