



Swivel Desk Drawer

ASSEMBLY INSTRUCTIONS

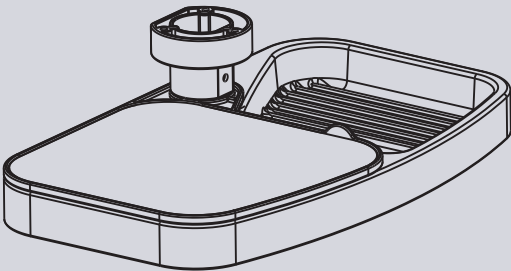

Included in the boxes:



Drawer with mouse pad



B (x1)
Swivel



C (x1)
Pad




D (x3)
Screws





E (x1)
Plastic clip

DIMENSIONS

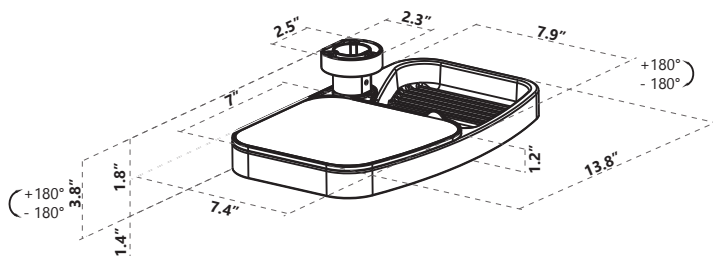


INSTRUCTION


Step 1. On bottom of the Desk Top, locate area to attach (A) using (C). With the flat side of (C) facing the front edge, place top hole 2.2" from front edge and 8.4" from side edge of Desk Top.

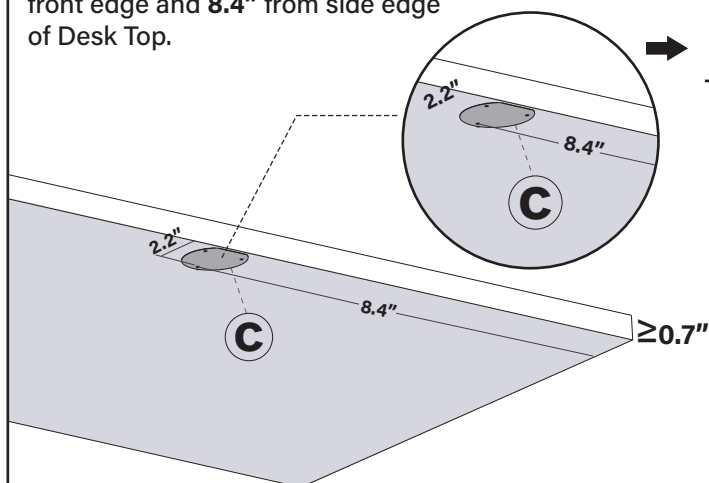


Top
thickness
 $\geq 0.7"$

Step 2. Use pen to mark the holes of (C) and know where to drill, ensuring flat side is facing the front edge of desktop.

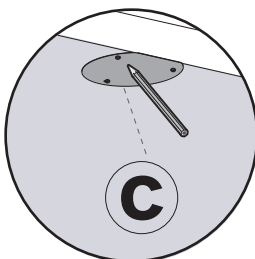





Step 4. Using a drill, insert 3 **(D)** to attach **(B)** to the 3 marked spots. Careful not to puncture top.

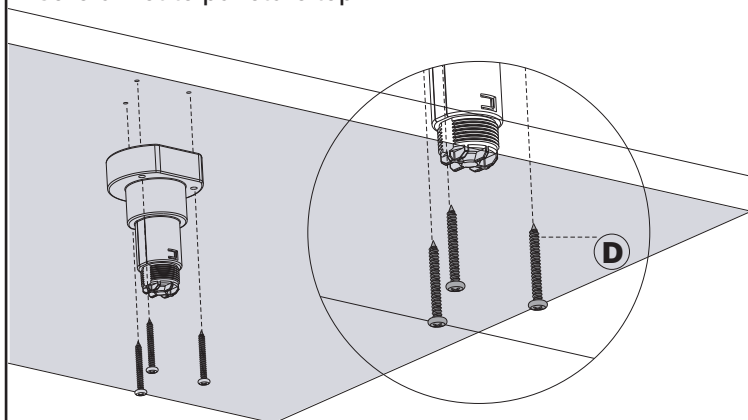


Step 3. Unscrew and detach bottom of **(B)**.

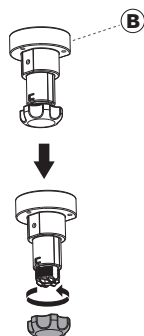

Step 5. Attach Mouse Pad to top of Drawer **(A)** and attach Drawer to **(B)**. Tighten bottom screw piece to lock into place.

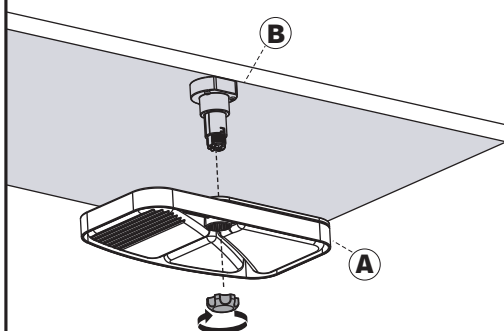


Step 6. Insert **(E)** into its corresponding hole in **(B)** as shown in diagram.

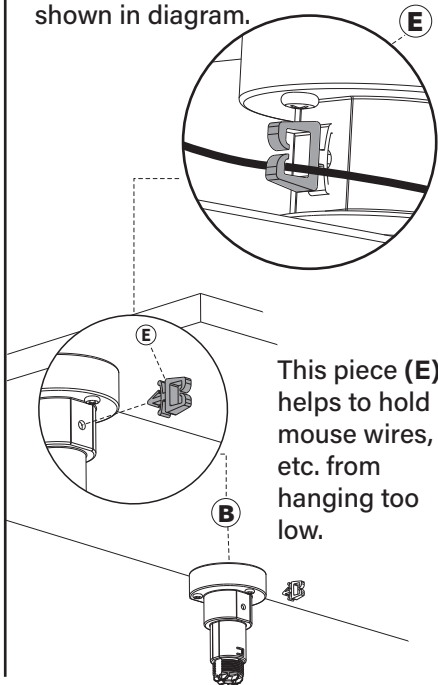



NOTE: Attach Drawer beneath Desk Top
Ensure perfect alignment to edge $\geq 0.2''$

Front

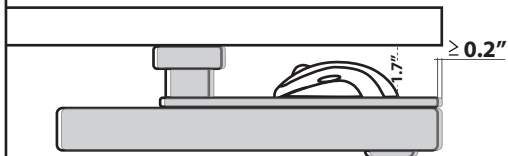

Side

