Autonomous
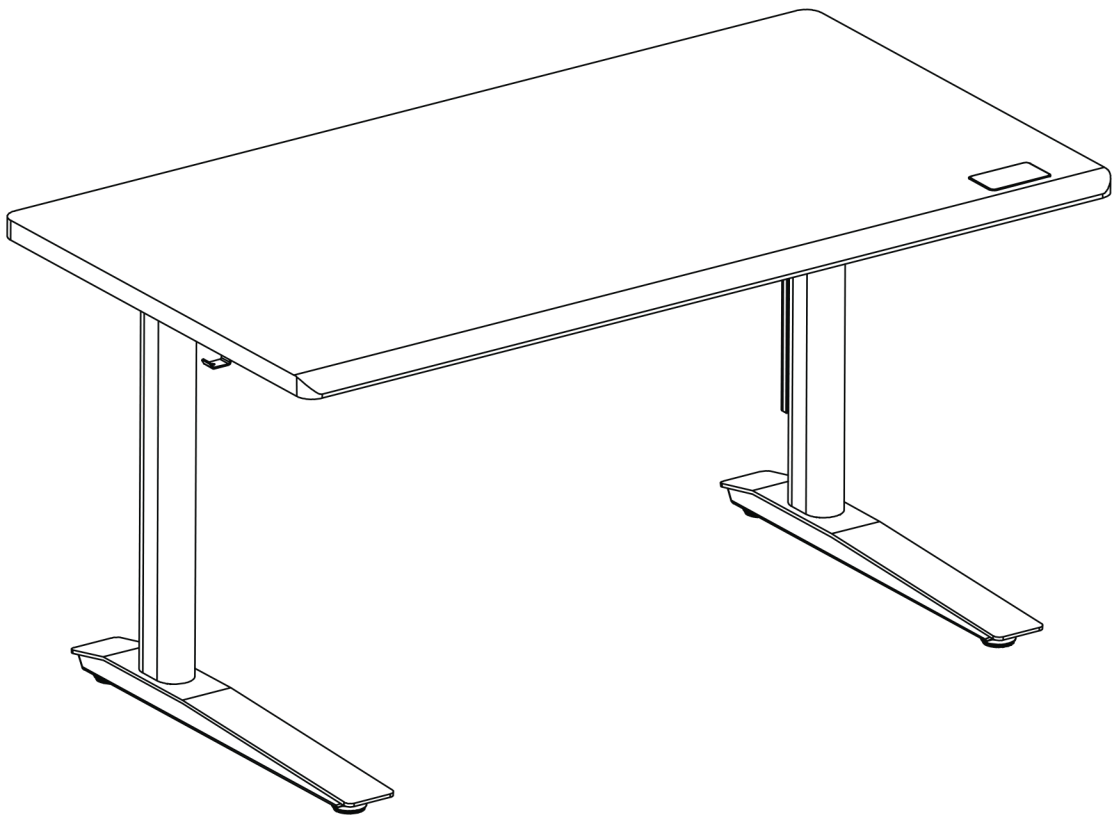
SmartDesk 5
Assembly Guide

Assembly Time

30-45 min

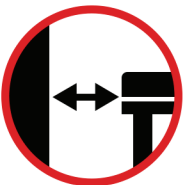**Number of People**
2

TABLE OF CONTENTS

CAUTION

⚠ **READ AND FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY BEFORE USE.**

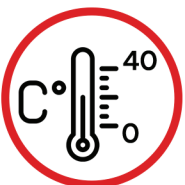Keep kids and pets away during use.

Unplug during storms or long unused periods.

Keep desktop away from walls for ventilation.

Keep the under-desk area (20"+) obstacle-free during use.

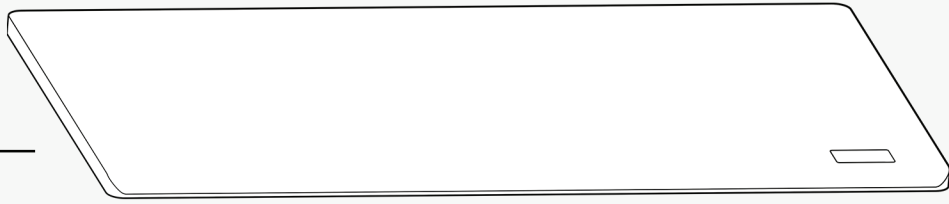Keep the desk in 0-40°C, away from dust and corrosives.

Do not disassemble without permission.

Manually reset after first use or power outage.

INCLUDED PARTS

Desktop

Power Cord

Power Outlet

Cable Tray

Columns
x 2

Feet
x 2

Center Rails
x 2

Keypad

Control Box

Cable Organizer

Hooks
x 2

Upper Tube

Side Brackets
x 2

Frames
x 2

A M6x10 Screws x 16

B M6x14 Screws x 20

C M6x12 Screws x 12

D M4 Wrench x 1

E M6x10 Hand Screws x 2

F Zip Ties x 10

ASSEMBLY GUIDE

A **M6x10** Screws x8

D **M4** Wrench

C **M6x12** Screws x8

1. Attach **Columns** to the **Frame**
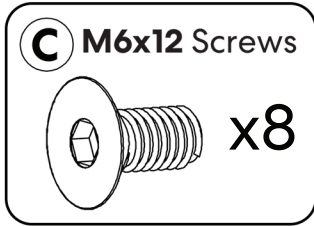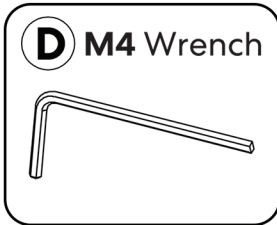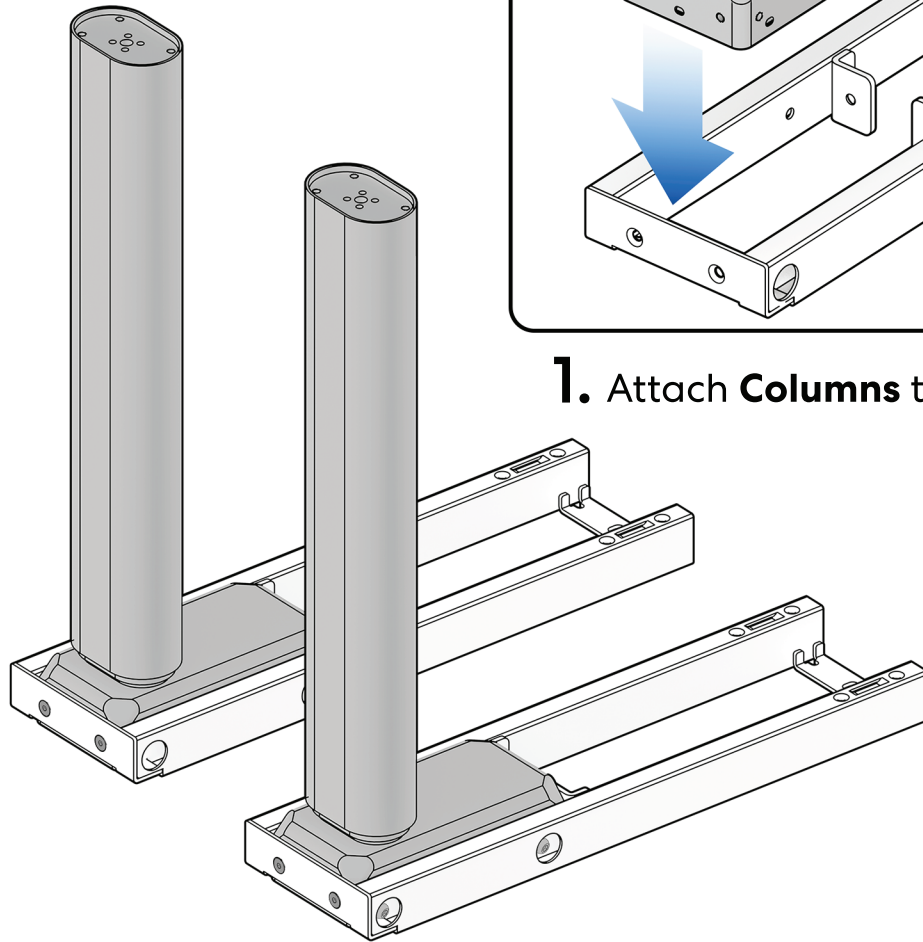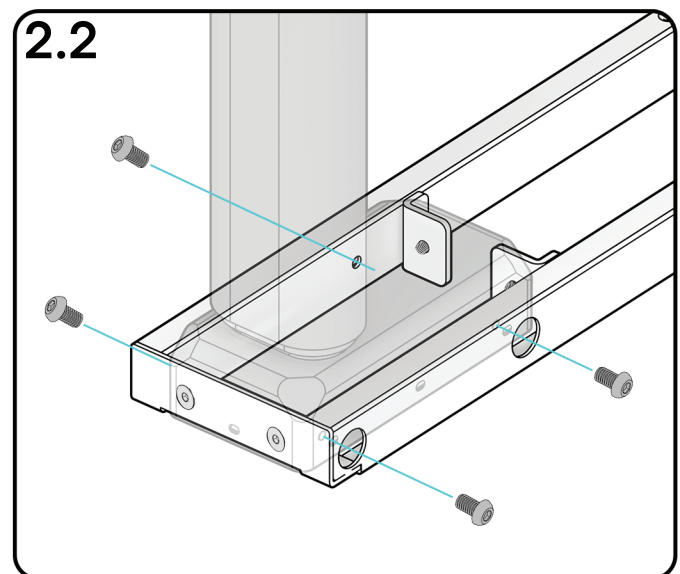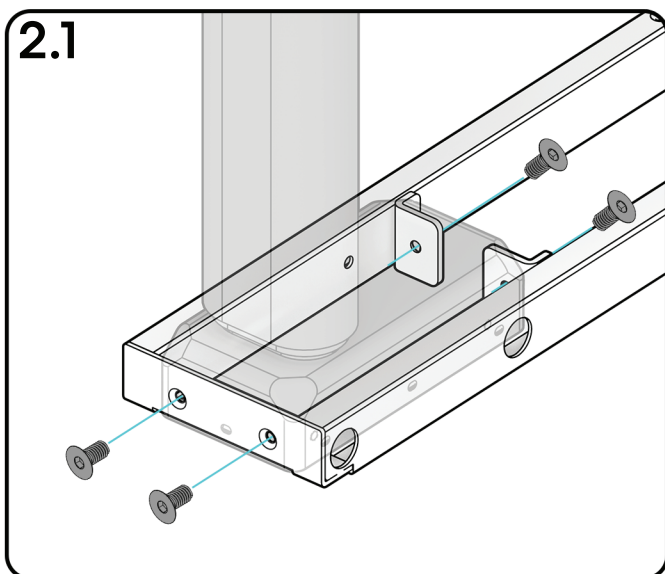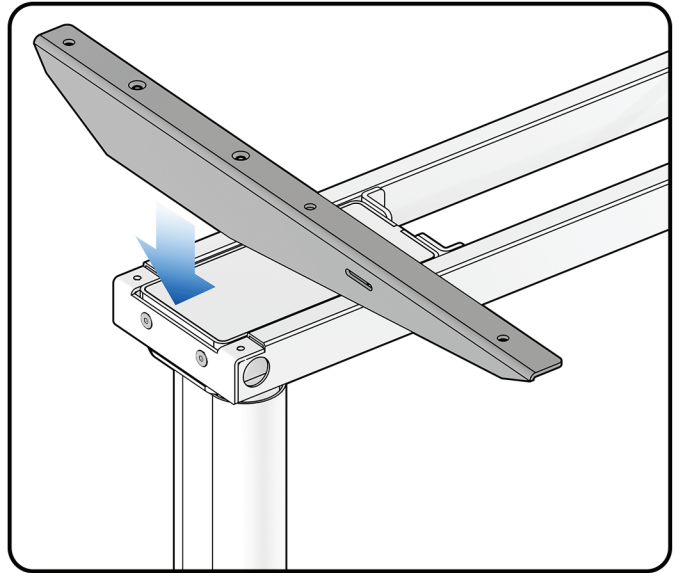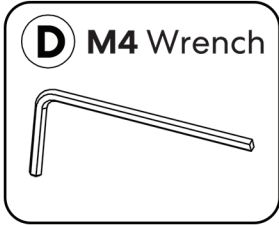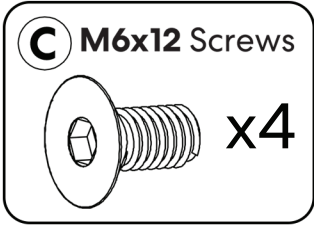
2. Easily align the screw positions by inserting 4 screws **C** (2.1) and 4 screws **A** (2.2), without tightening

2.1

2.2

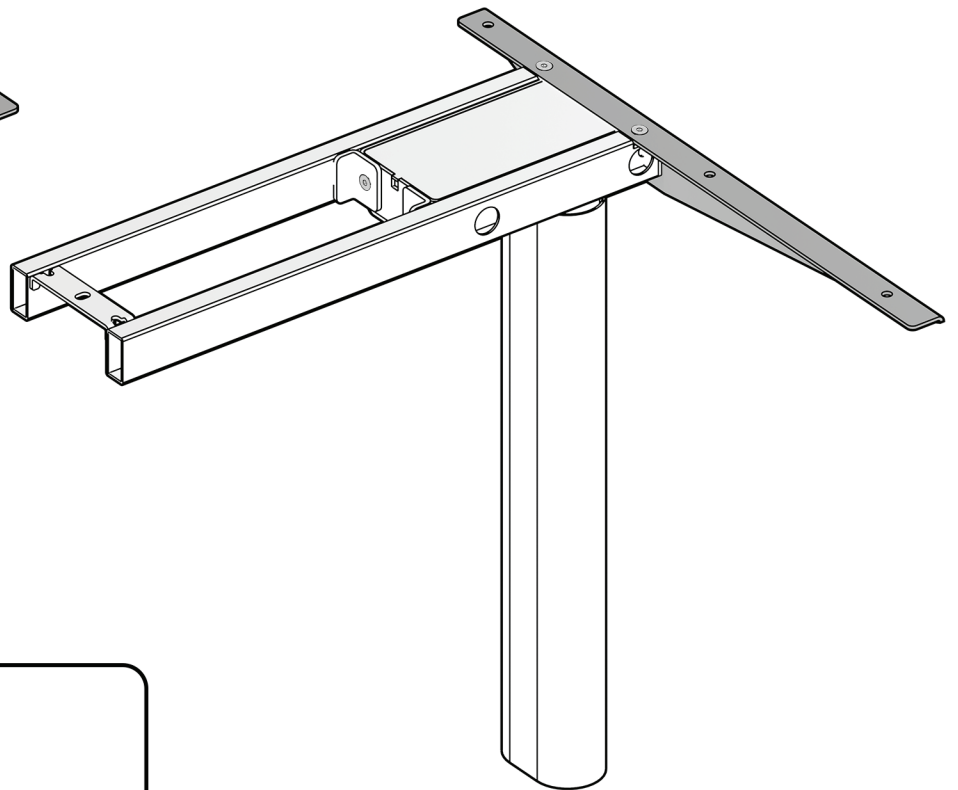**3.** Tighten screws **C** (2.1) and screws **A** (2.2)

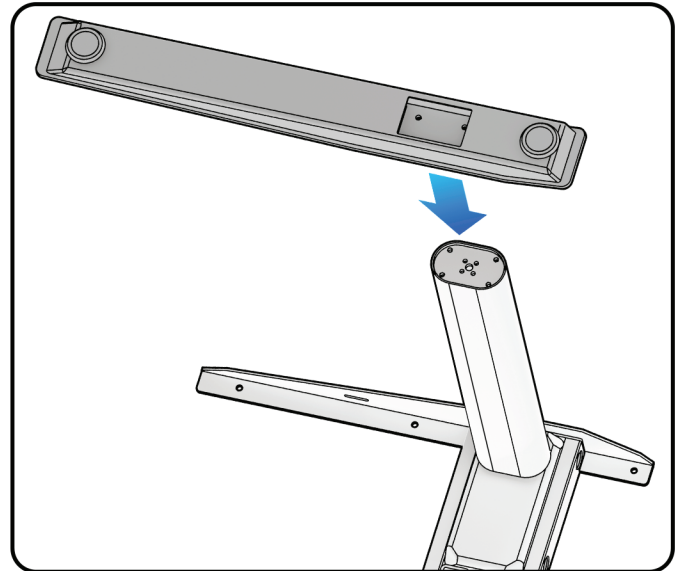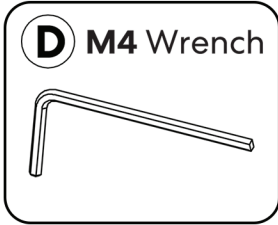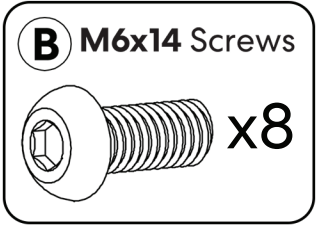**C** **M6x12** Screws x4

D **M4** Wrench

1. Attach **Side Brackets** to the **Frame**

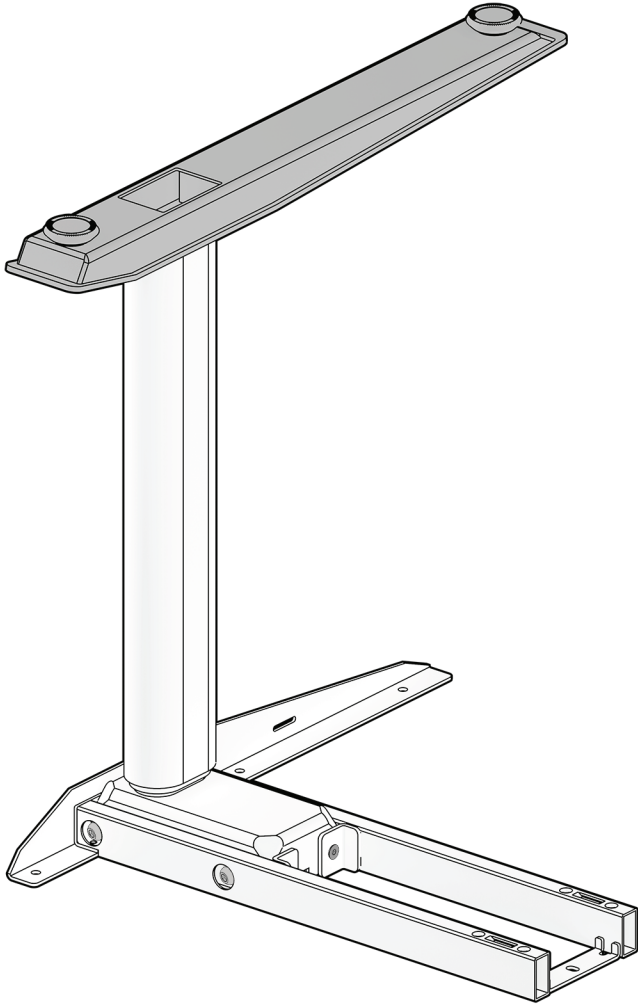**2.** Insert 2 screws **C**

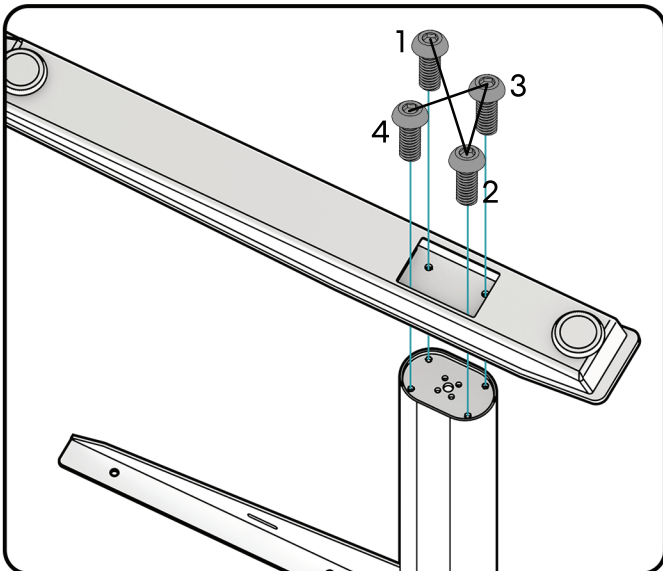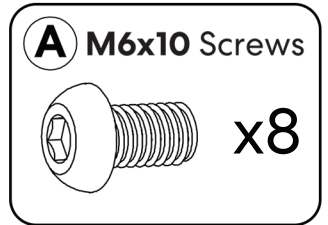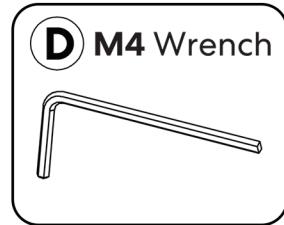**B** **M6x14** Screws

x8

D **M4** Wrench
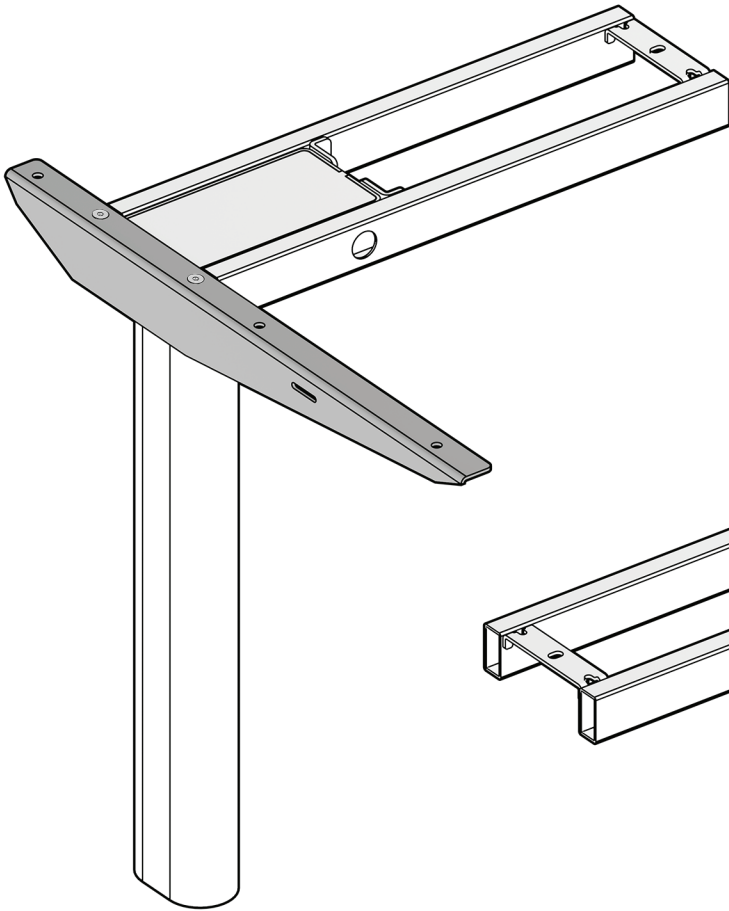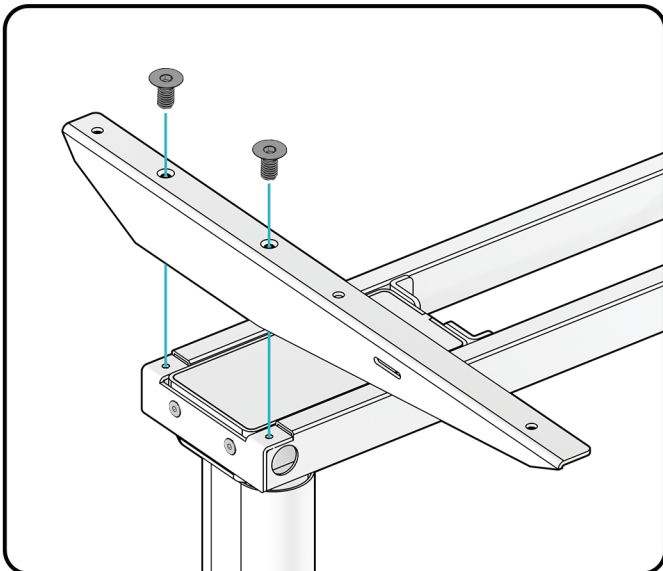
1. Attach **Feet** to **Columns**

2. Insert 4 screws **B**

1
3
4
2

Notch direction

D **M4** Wrench   **A** **M6x10** Screws   x8
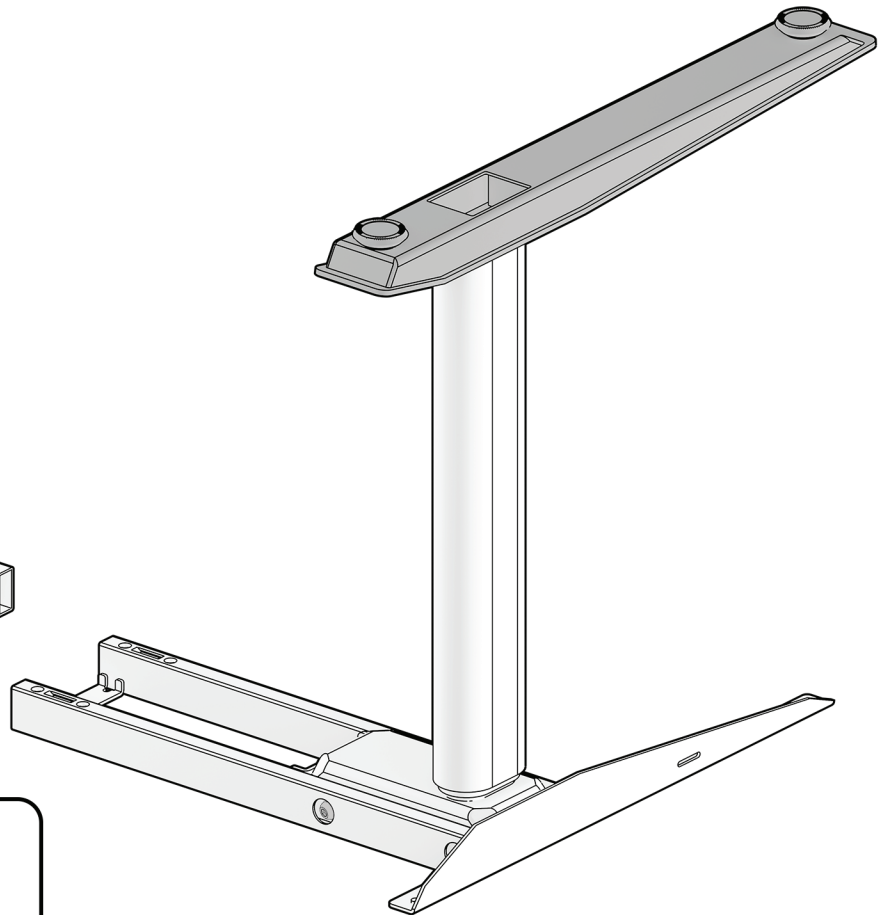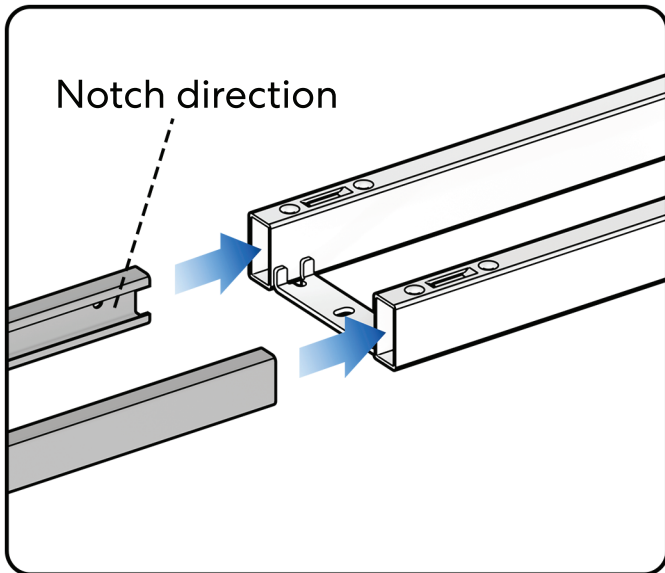
1. Attach **Center Rails** to the **Frame**, following the notch direction

2. Insert 8 screws Ⓐ without tightening

06

TEAM LIFT

D M4 Wrench

B M6x14 Screws x6
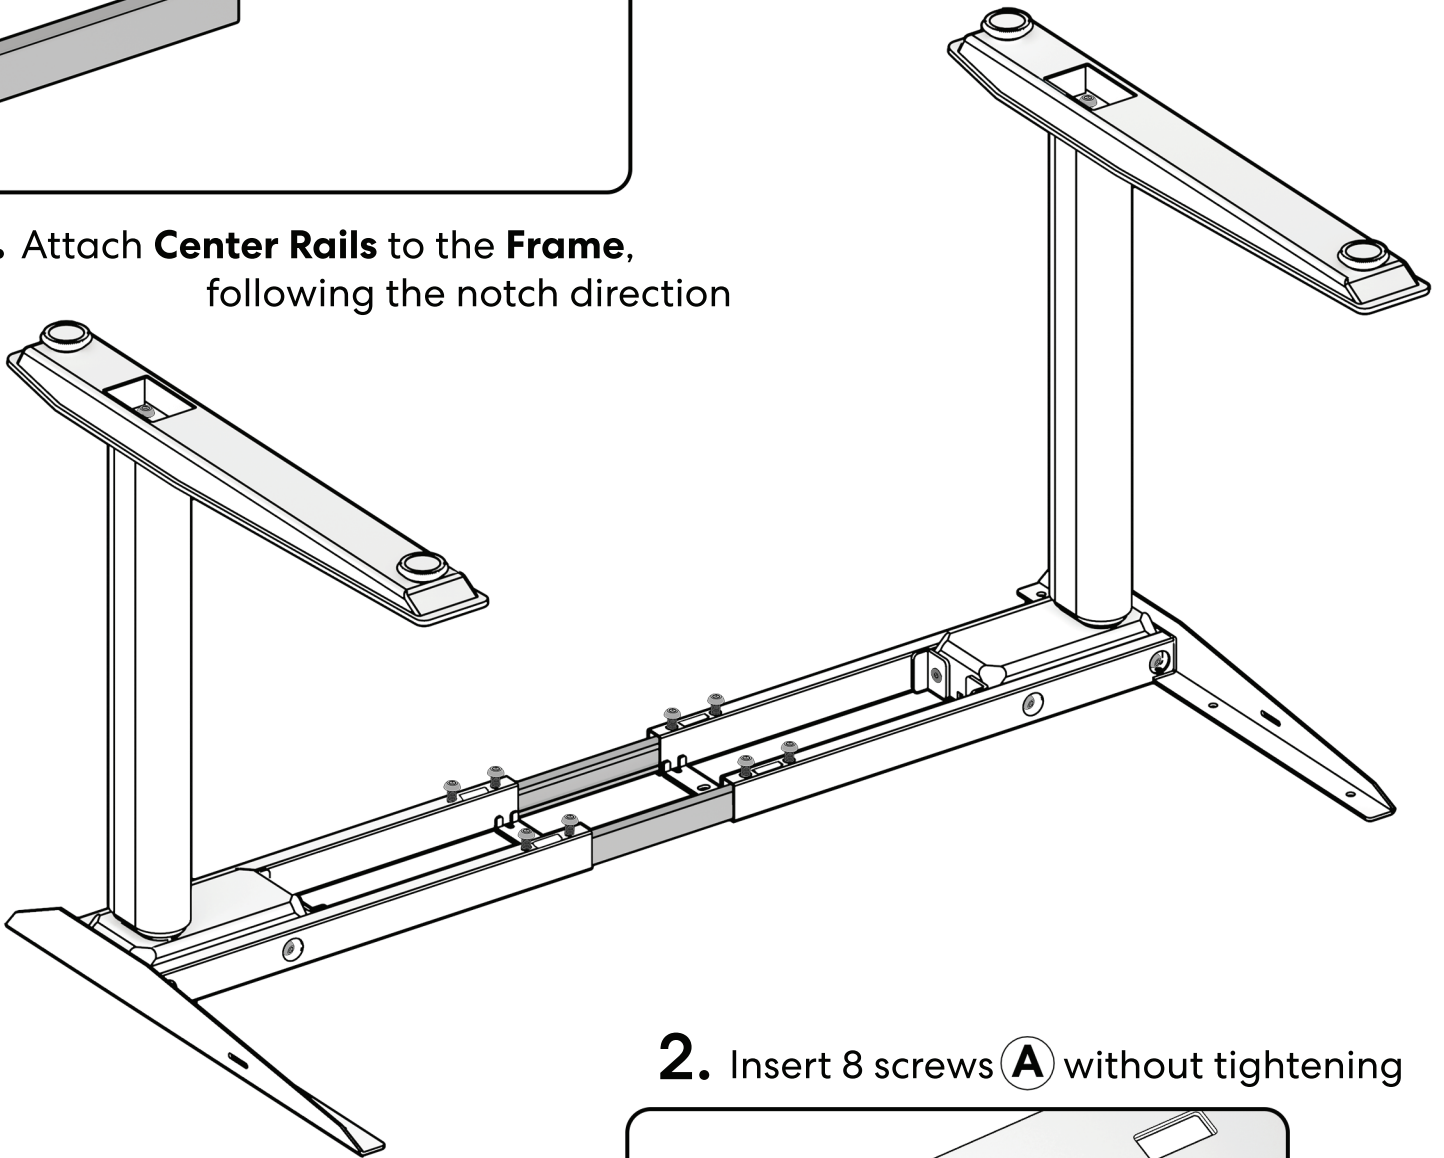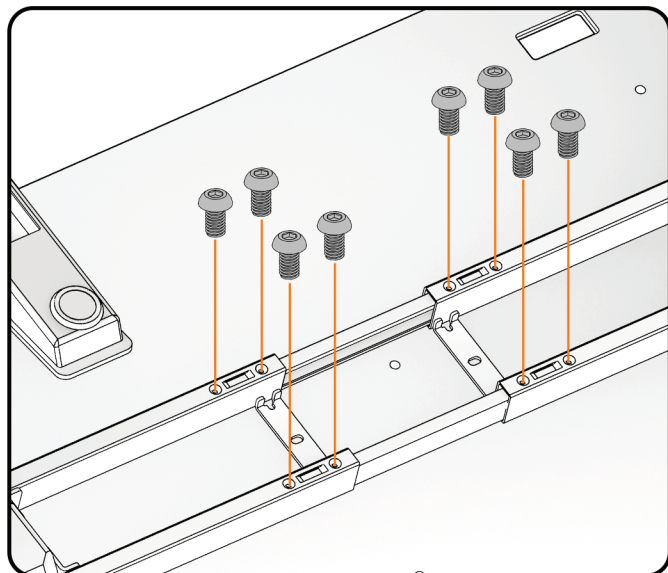
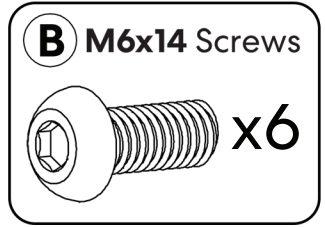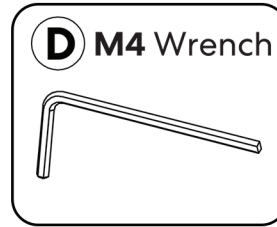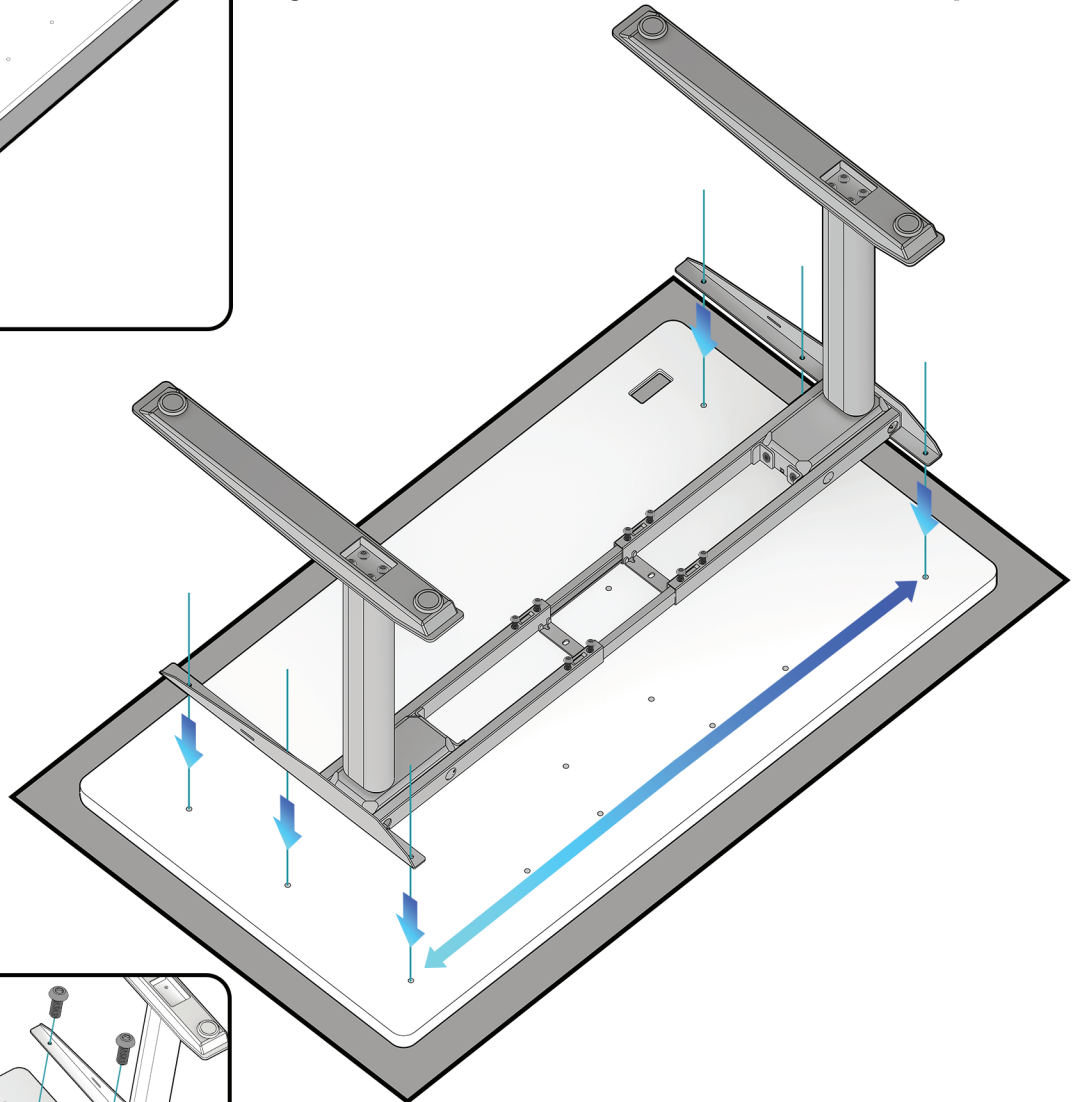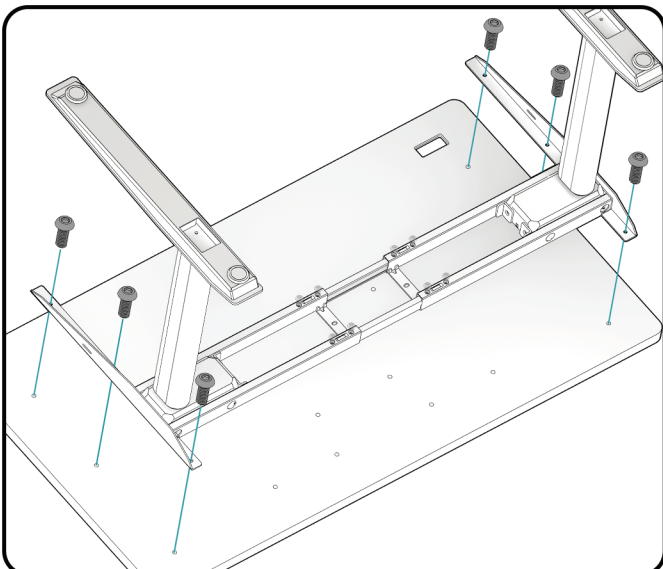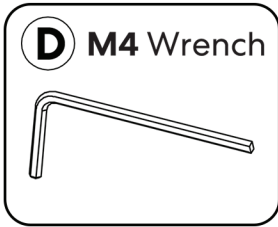**1.** Place a **Foam Pad** under the **Desktop** to prevent scratches when installing
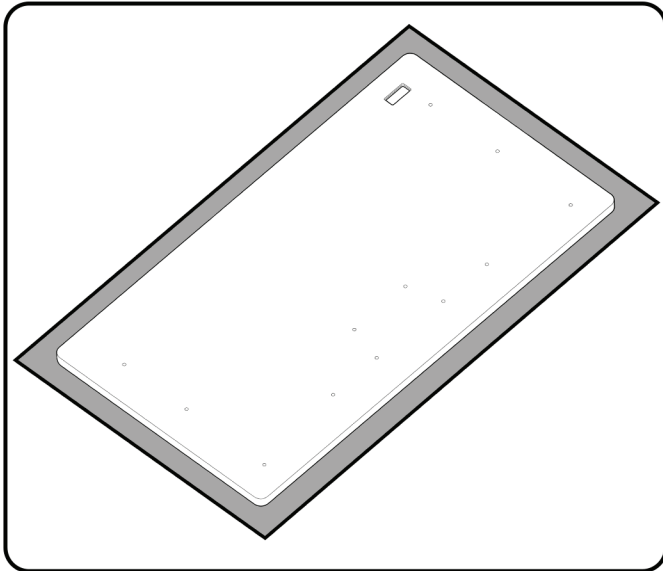
2.
With 2 people, position the **Frame** on the **Desktop**, align the **Side Bracket** holes with the **Desktop** holes

3. Insert 6 screws **B**

B **M6x14** Screws x2

D **M4** Wrench
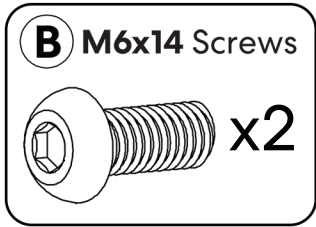
1. Insert 2 screws **B**

2. Tighten 8 screws **A**

B **M6x14** Screws x4

D **M4** Wrench

E **M6x10** Hand screws x2
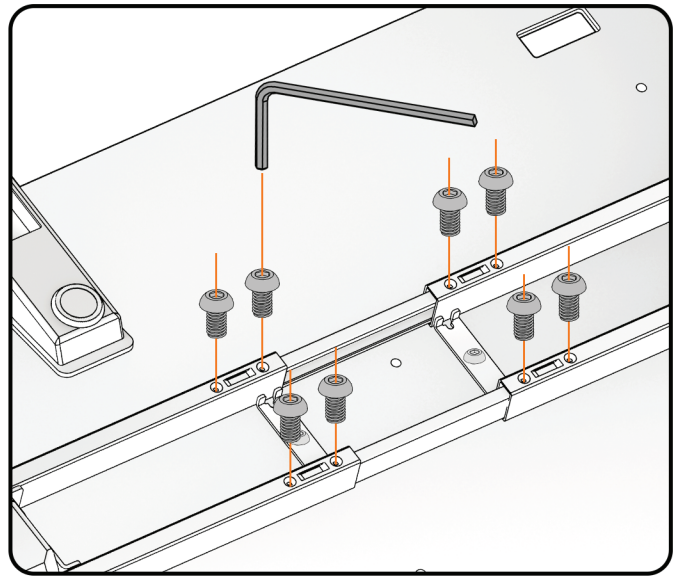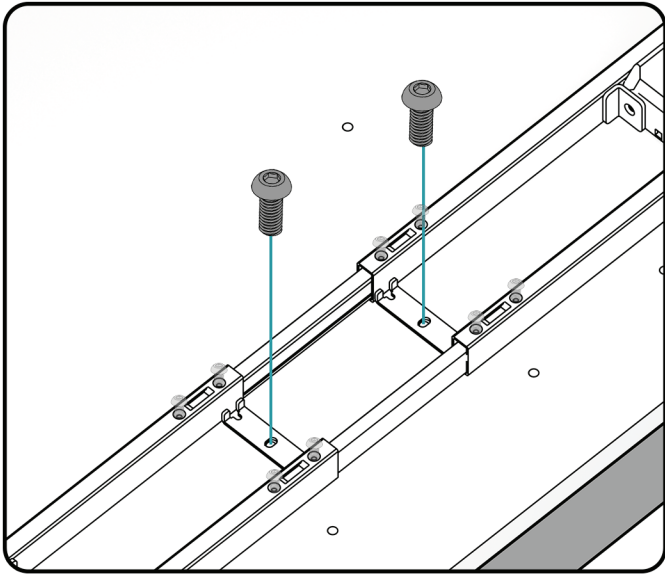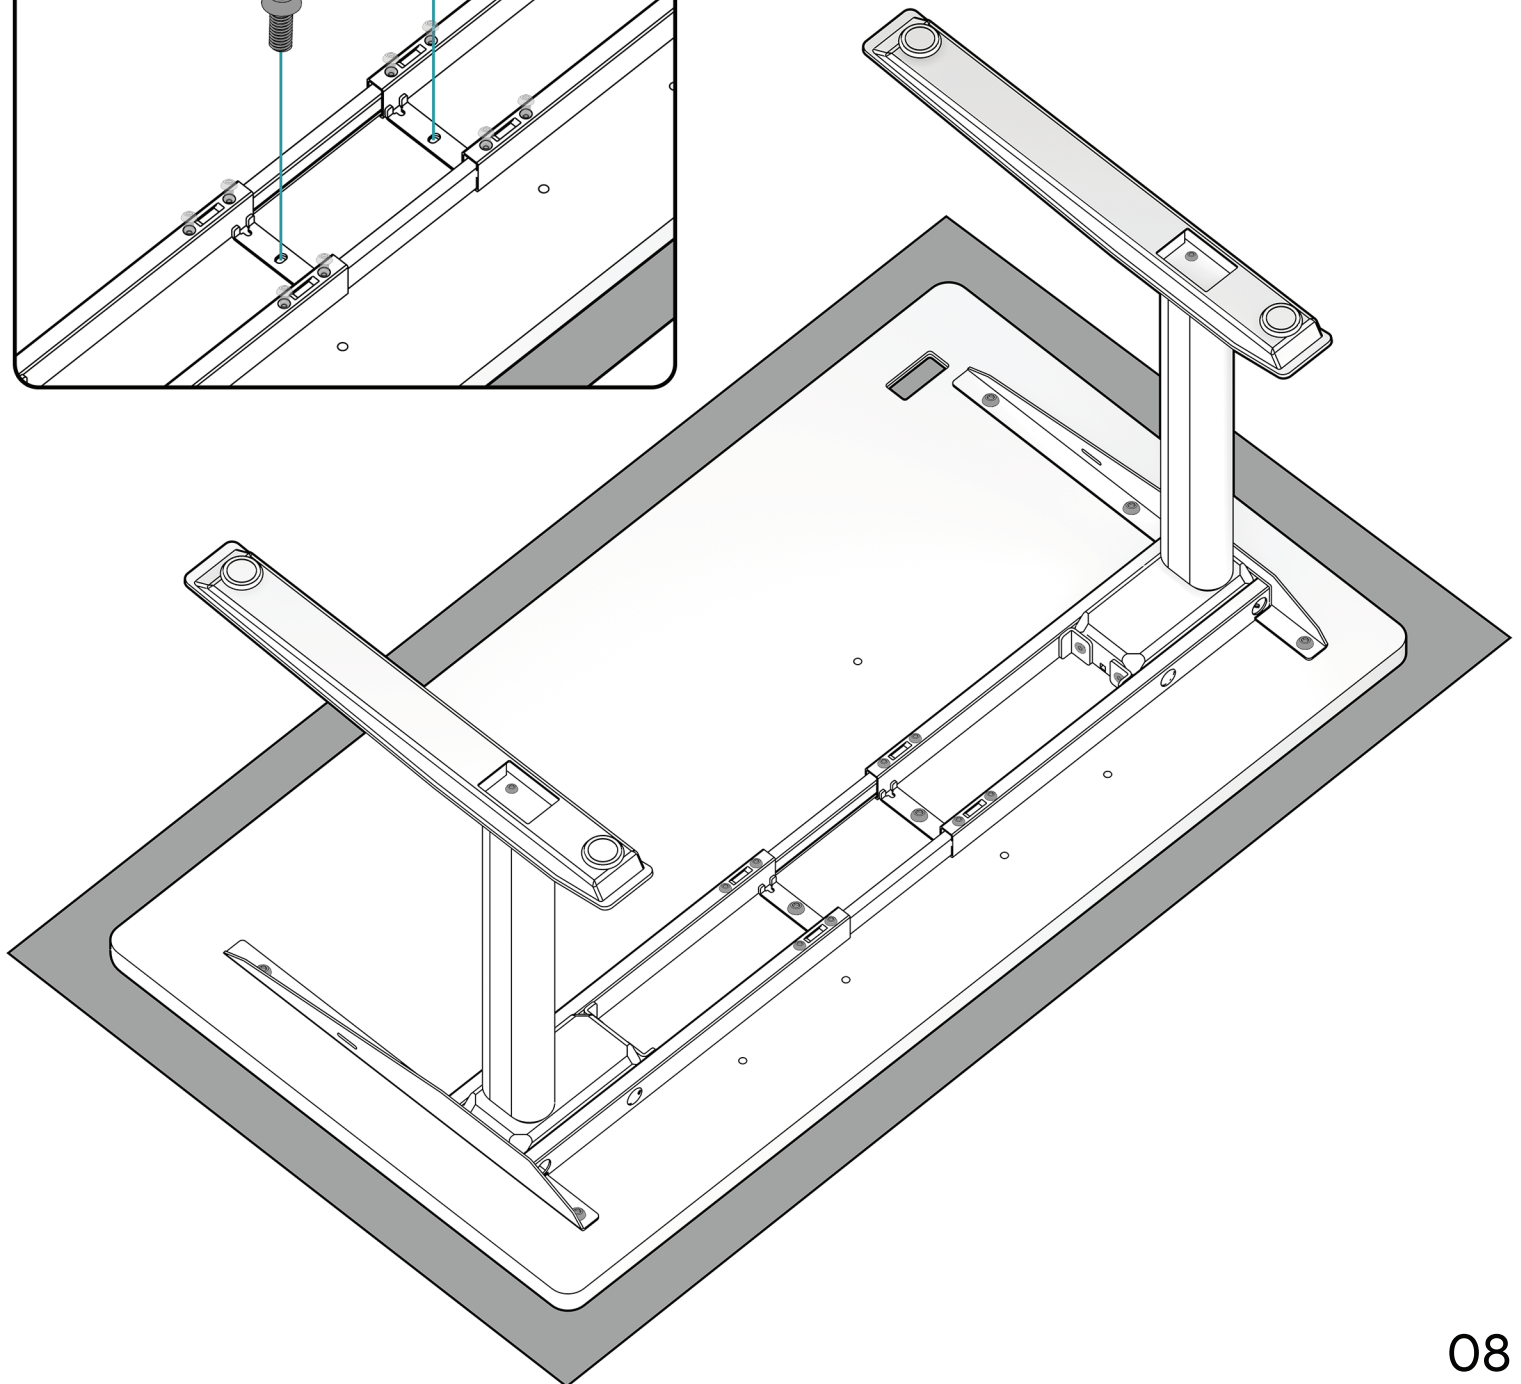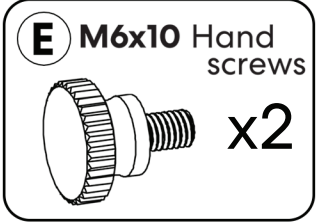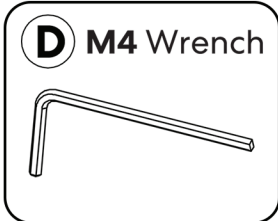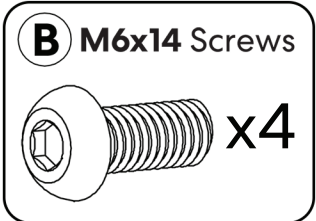
1. Assemble the **Cable Tray** to the **Desktop**
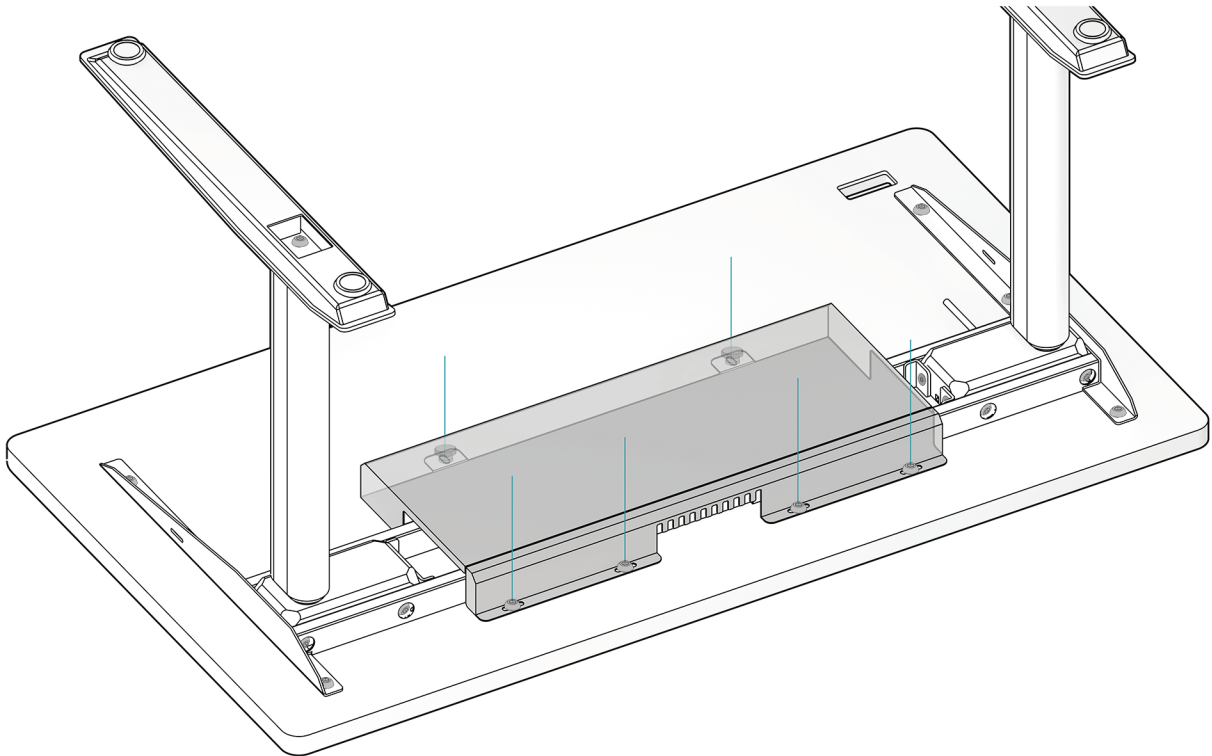
2. Insert 4 screws **B**

3. Insert 2 hand screws **E**

TEAM LIFT

Note: Make sure all screws are tight, then flip upright. Keep the **Foam Pad** under the **Desktop** during flipping to prevent scratches.

1.

2.

3.

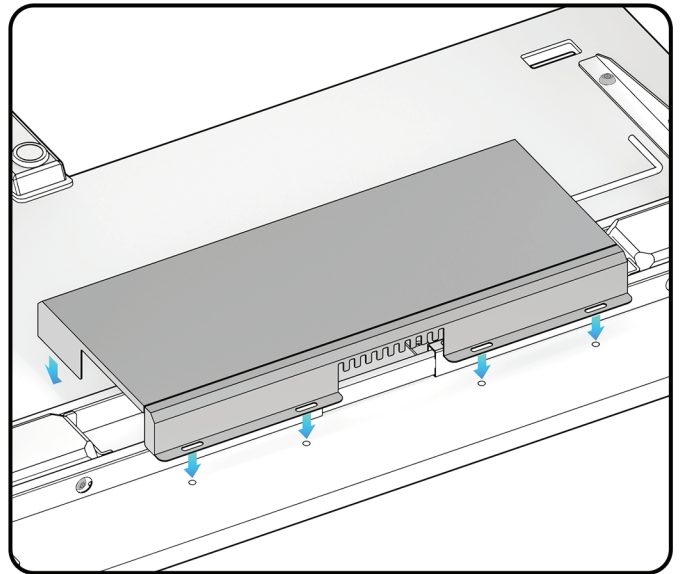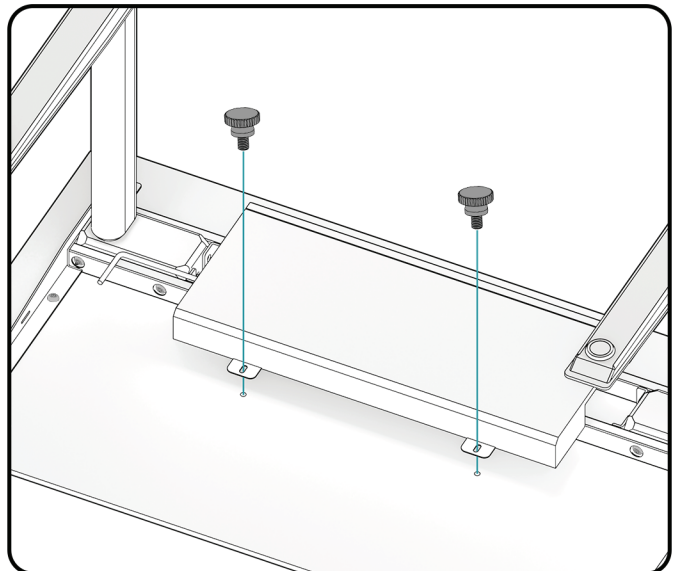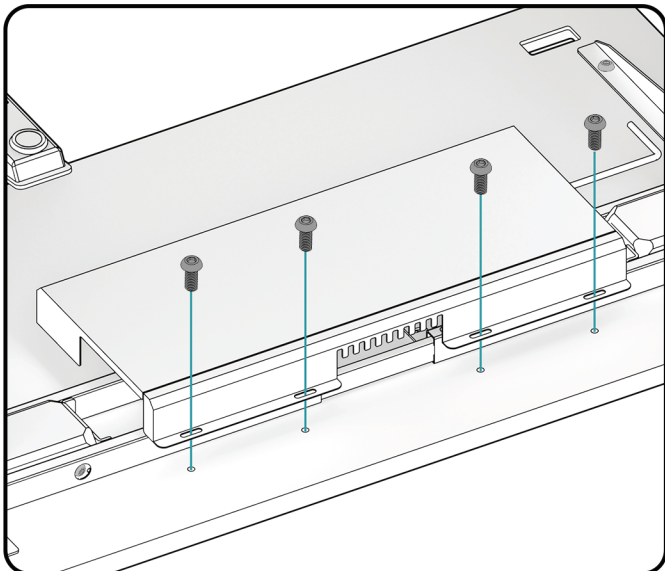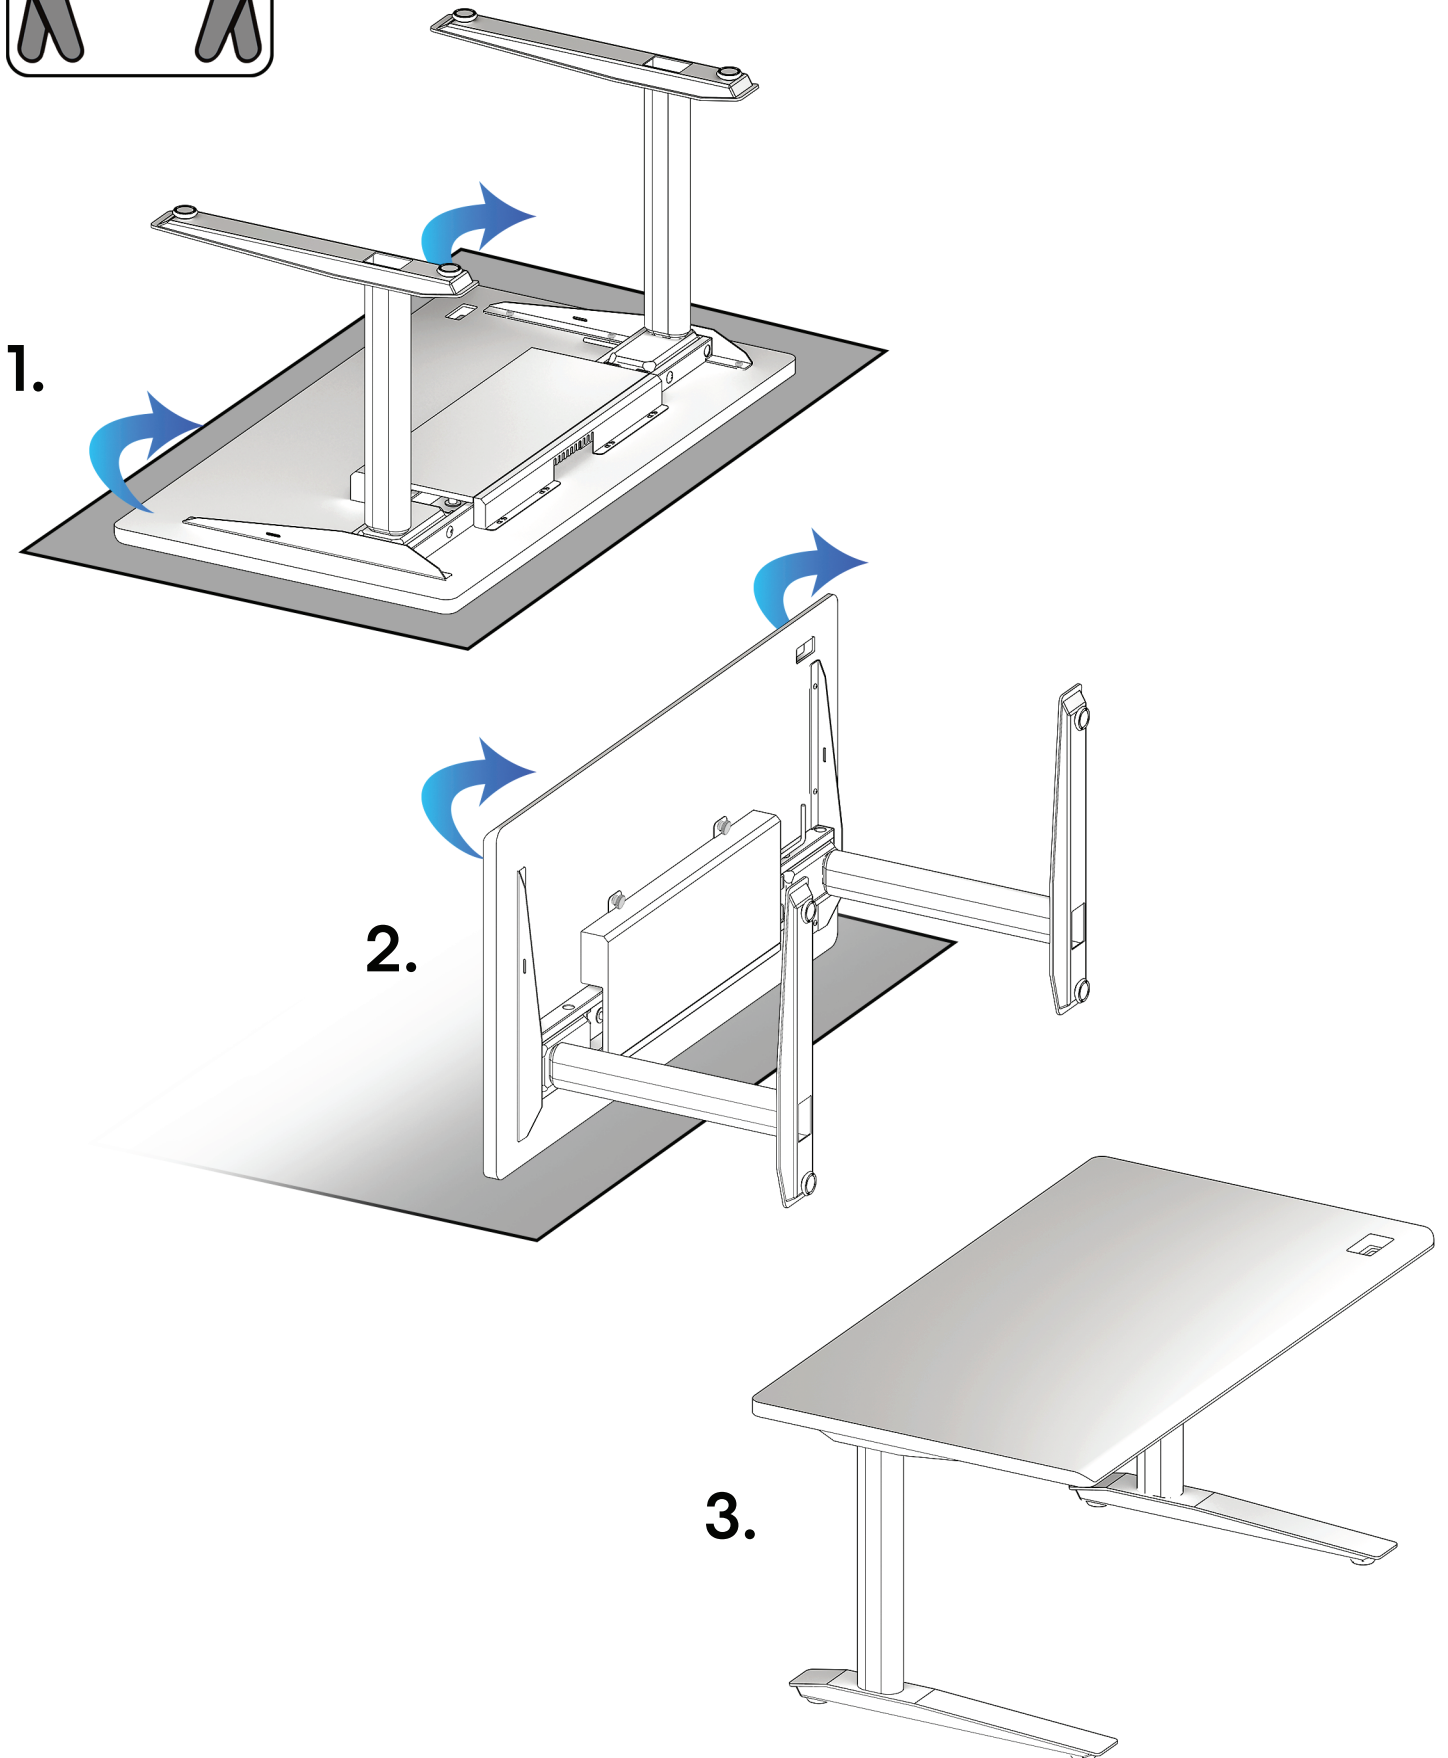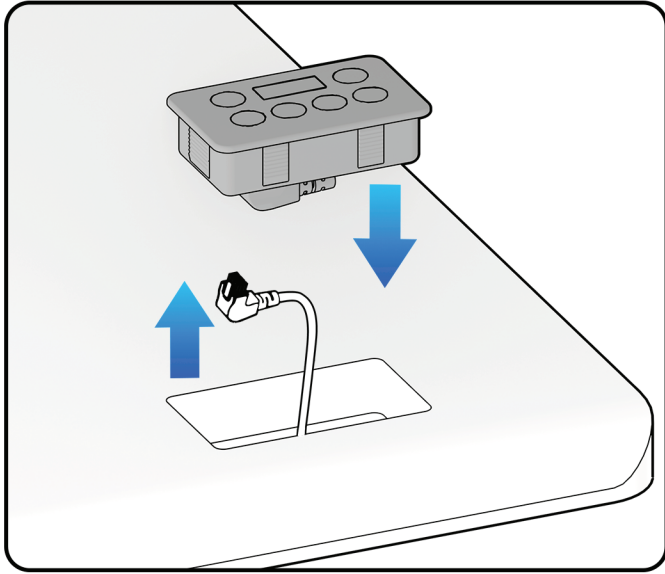**1.** Route the **Keypad Cable** through the **Desktop**
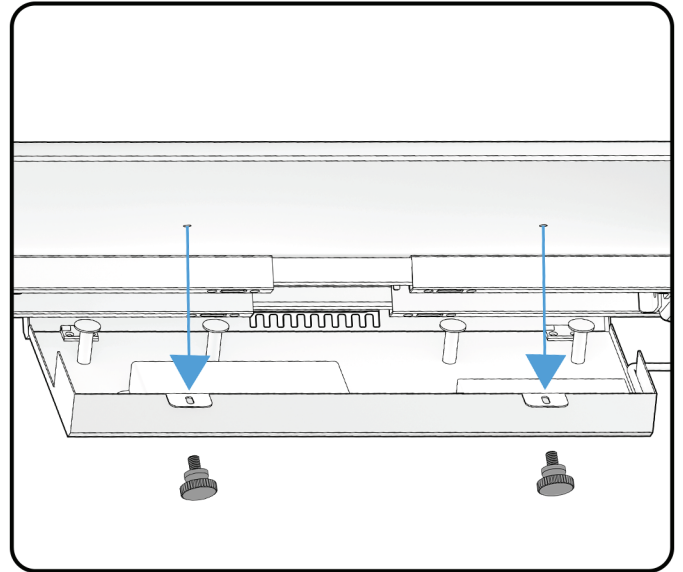
2. Turn 2 hand screws to release the **Cable Tray**

3. Plug **Motor & Keypad Cords** into the **Control Box** & secure them with the cable winders

Motor plug

Keypad plug

4. Plug the power cord into the **Outlet** & secure it with the winders

Power cord plug

Power Outlet
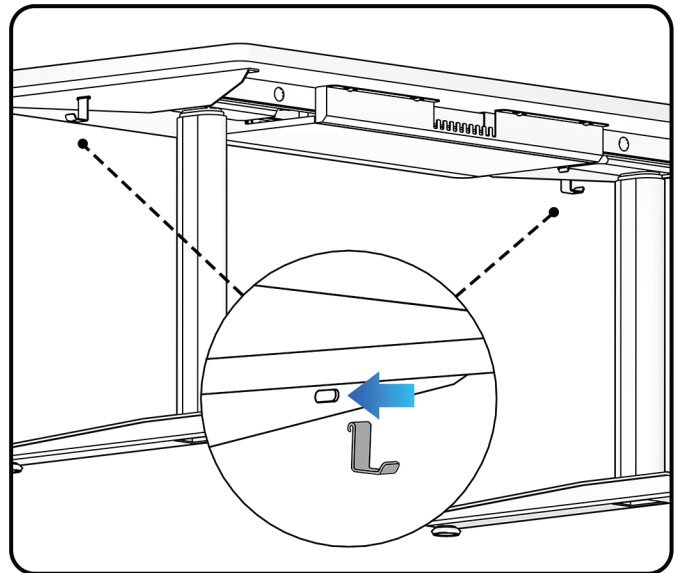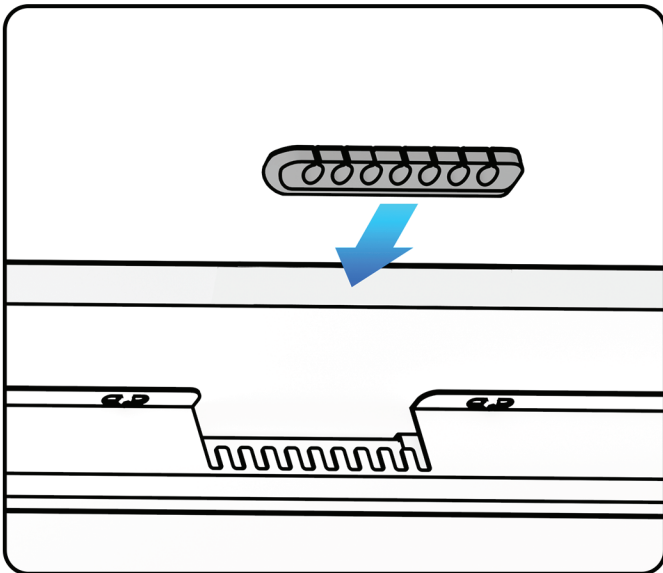
1. Attach the **Cable Organizer** to the **Desktop** & **Hooks** to the **Side Brackets**
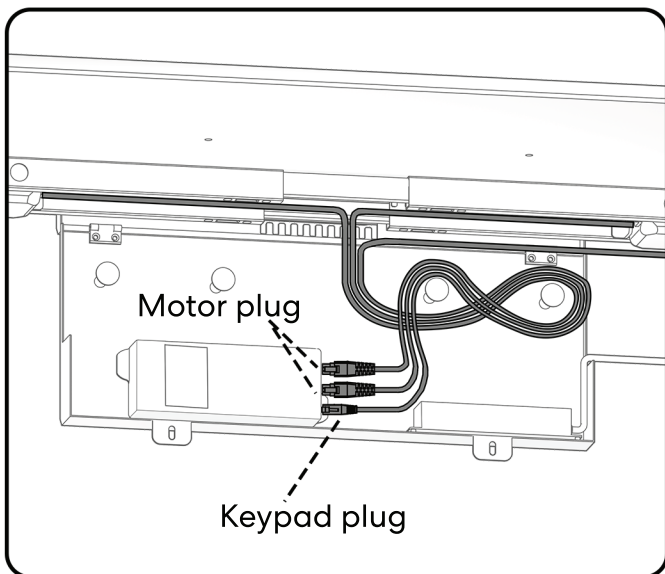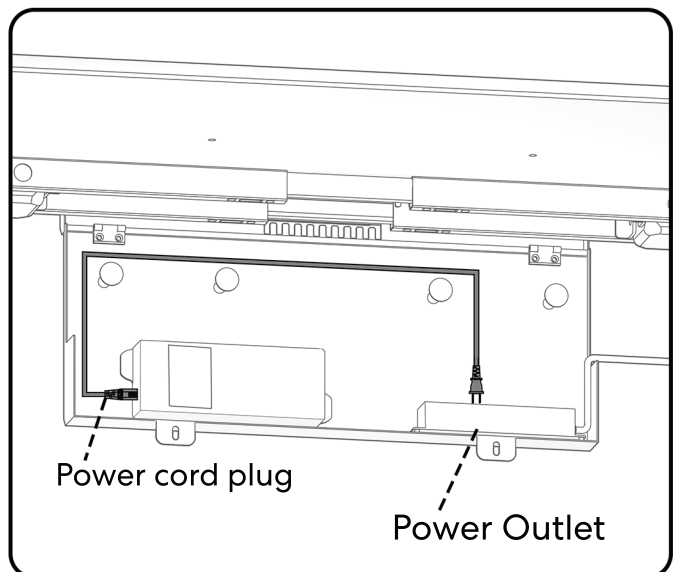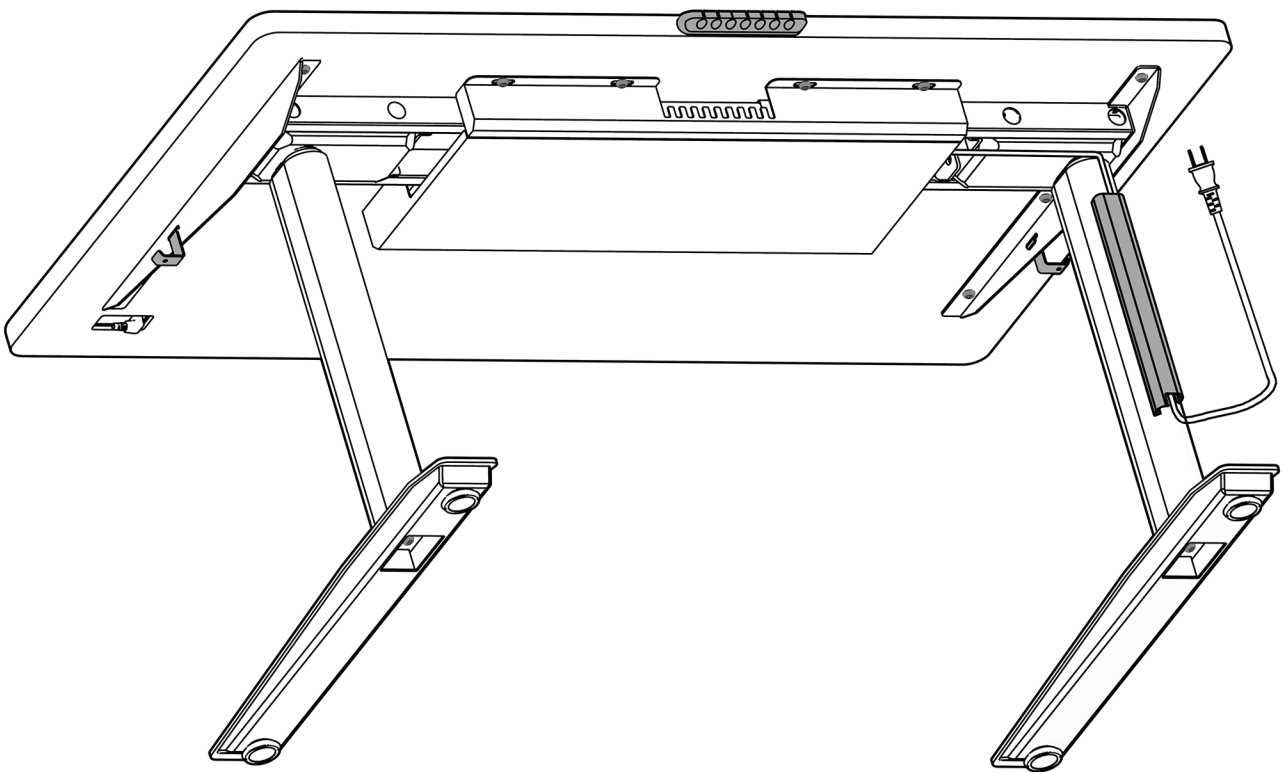

2. Attach the **Upper Tube** to a **Column**

*Note: The **Power Cord** should be put through the **Upper Tube** before attaching*

SETUP KEYPAD

1. Press & hold ⋀ + ⋁ for 3 seconds
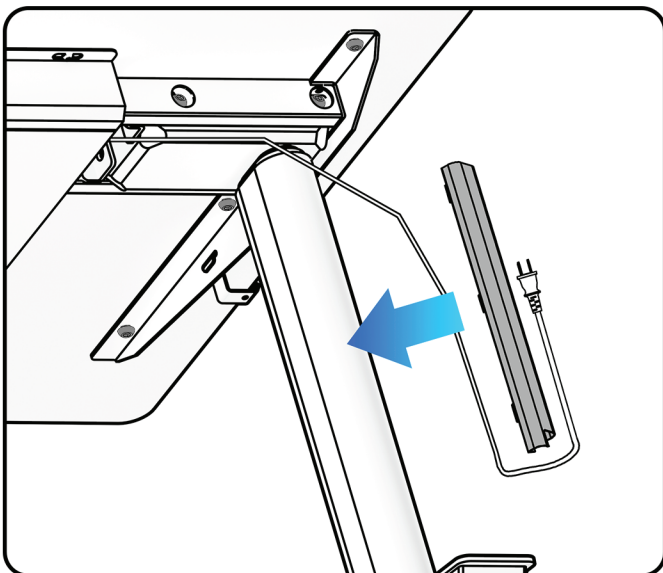
2. Release when there is a "beep" sound to complete reset.

29.5

I   II   III   M

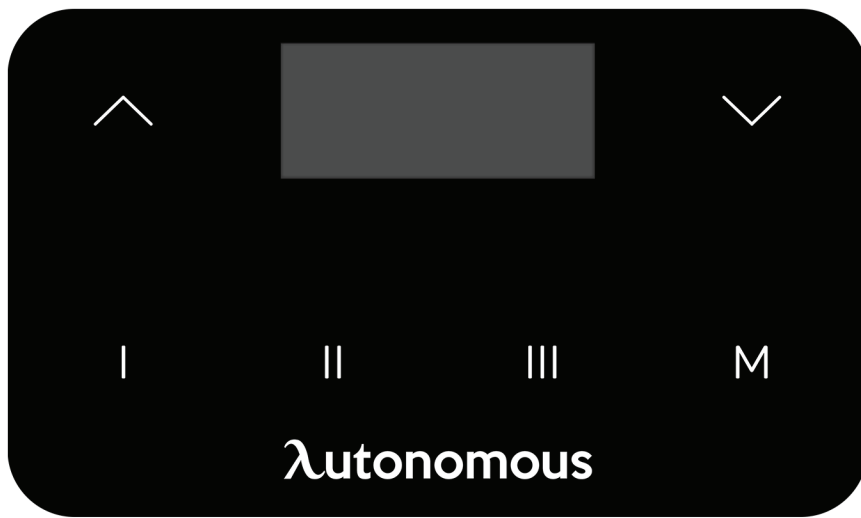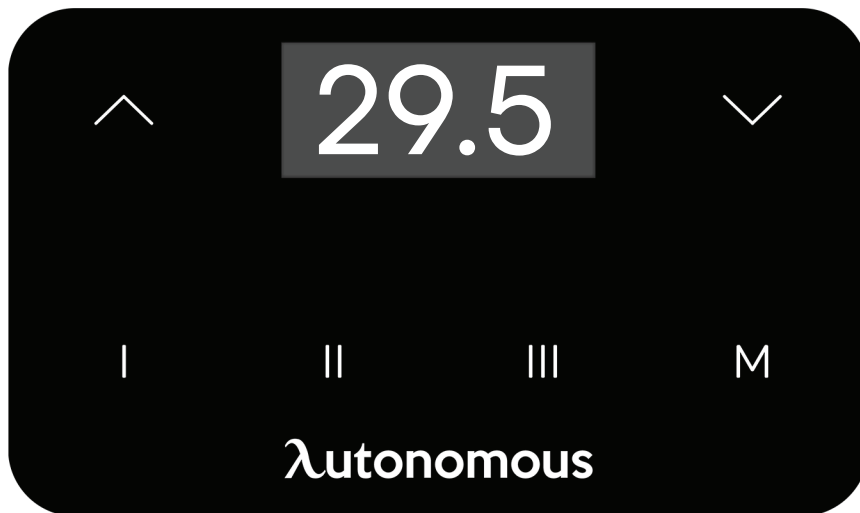Autonomous

1. Press ⌃ or ⌄ to adjust the height

2. Press and hold M for 3 seconds until the display flashes, then press the memory I , II or III to save

3. Press I , II or III to move the desk to the saved height

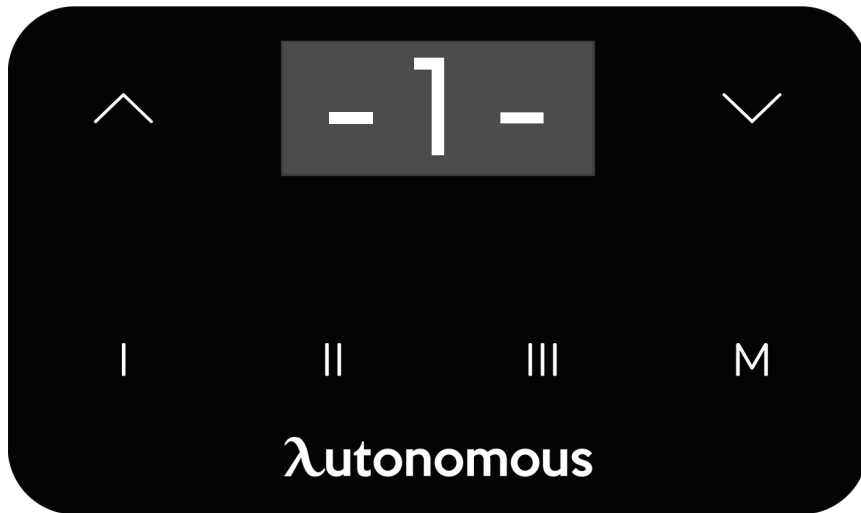The Anti-collision setting prevents damage and accidents by stopping the desk if it hits something, becomes uneven, or tilts.

1. Press & hold **I** + **II** for 5 seconds to enter setting mode

2. Press ⌃ or ⌄ to adjust sensitivity. For the smoothest operation, we recommend setting the anti-collision back to level 1.

3. Wait for 5 seconds to save

Any questions?

Chat with our Customer Support team at
www.autonomous.ai/help-center

We're here to help!